


# Advanced Diagnostics

## DTC P1367: Top Dead Center (TDC) Sensor 2 No Signal

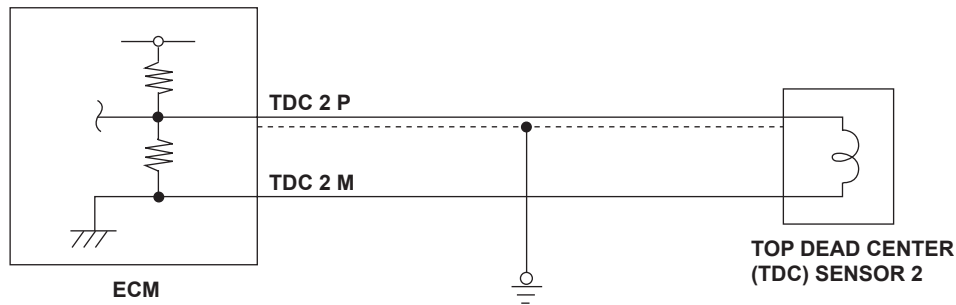

P1366-0001

### General Description

The top dead center (TDC) sensor consists of a rotor and a pick-up coil that detects rotor position. When the rotor turns after starting the engine, the changes of magnetic flux in the pick-up coil are converted into pulsing signals to the engine control module (ECM). The TDC sensor detects the top dead center of each cylinder for fuel injection.

If no pulsing signals from the TDC sensor are detected, a malfunction is detected and a DTC is stored.

### Monitor Execution, Sequence, Duration, DTC Type

Execution	Continuous
Sequence	None
Duration	—
DTC Type	One drive cycle, MIL ON

### Enable Conditions

Condition	
State of the engine	Running
No active DTCs	CKP, CYP

### Malfunction Threshold

No TDC sensor pulses are detected 37 times in succession.

### Diagnosis Details

#### Conditions for illuminating the MIL

When a malfunction is detected, the MIL comes on and the DTC and the freeze frame data are stored in the ECM memory.

#### Conditions for clearing the MIL

The MIL will be cleared if the malfunction does not recur during three consecutive trips in which the diagnostic runs.

The MIL, the DTC, and the freeze frame data can be cleared by using the scan tool Clear command or by disconnecting the battery.