

Replacement

| | |
|--|-------------|
| Front Bulkhead / Front Side Frame Extension | 3-2 |
| Removal | 3-3 |
| Installation | 3-4 |
| Front Wheelhouse / Damper Housing..... | 3-5 |
| Removal | 3-8 |
| Installation | 3-10 |
| Front Bulkhead-Side Frame Assembly | 3-12 |
| Removal | 3-14 |
| Installation | 3-16 |
| Front Pillar | 3-18 |
| Removal | 3-20 |
| Installation | 3-21 |
| Roof Panel | 3-24 |
| Removal | 3-25 |
| Installation | 3-26 |
| Side Sill / Front Floor | 3-27 |
| Removal | 3-30 |
| Installation | 3-33 |
| Rear Fender Panel / Rear Inner Panel | 3-36 |
| Removal | 3-39 |
| Installation | 3-42 |
| Rear Panel | 3-46 |
| Removal | 3-47 |
| Installation | 3-48 |
| Rear Floor, Rear Frame / Middle Floor | 3-49 |
| Removal | 3-51 |
| Installation | 3-53 |