

Body Dimensional Drawings

Upper Body Measuring Dimensions

Engine Compartment	4-2
Passenger Compartment / Roof Rail Positions	4-3
Rear Compartment	4-4

Opening Repair Chart

Windshield / Door Opening	4-5
Hatch Opening	4-6

Under Body Measuring Dimensions

 
Under View	4-7
------------------	-----

Frame Repair Chart

Top View	4-8
Side View	4-10

Note: Measuring dimensions show the distance between the forward or upper edge of positioning bosses and /or holes shown in the detail sketches.

Measuring point (Black dots)



F: Forward

C: Center