


Lift and Support Points

Frame Hoist

Position the hoist lift blocks, or safety stands, under the vehicle's front support points and rear support points.

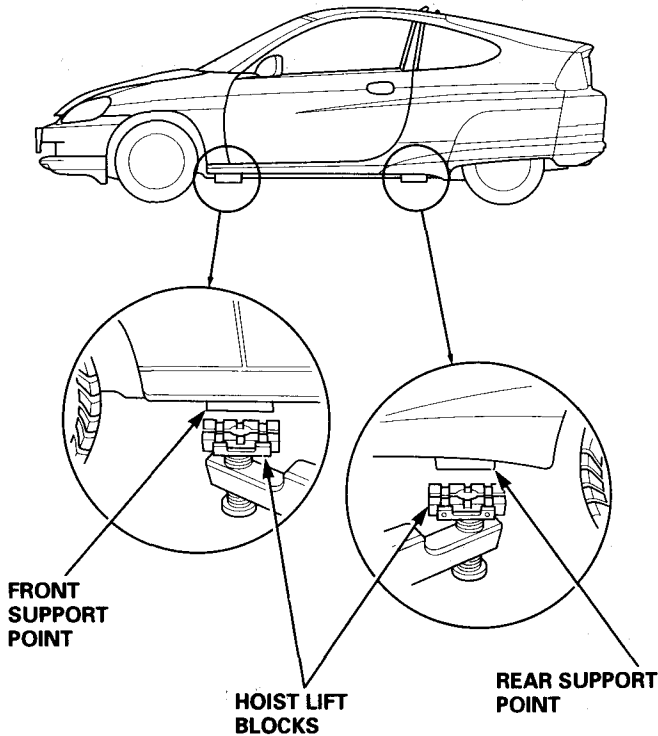

1. Raise the hoist a few inches (centimeters), and rock the vehicle gently to be sure it is firmly supported.
2. Raise the hoist to full height, and inspect the lift points for solid contact with the lift blocks.


If you are going to remove heavy components such as the suspension or the fuel tank from the rear of the vehicle, first support the front of the vehicle with a tall safety stand. When substantial weight is removed from the rear of the vehicle, the center of gravity can change and cause the vehicle to tip forward on the hoist.

Safety Stands

To support the vehicle on safety stands, use the same front and rear support points as for a frame hoist. Always use safety stands when working on or under any vehicle that is supported only by a jack.

Floor Jack

1. Set the parking brake.
2. Block the wheels that are not being lifted.
3. Position the floor jack under the left or right jacking point, center the jack lift platform on the jacking point, and jack up the vehicle high enough to fit the safety stands under it.

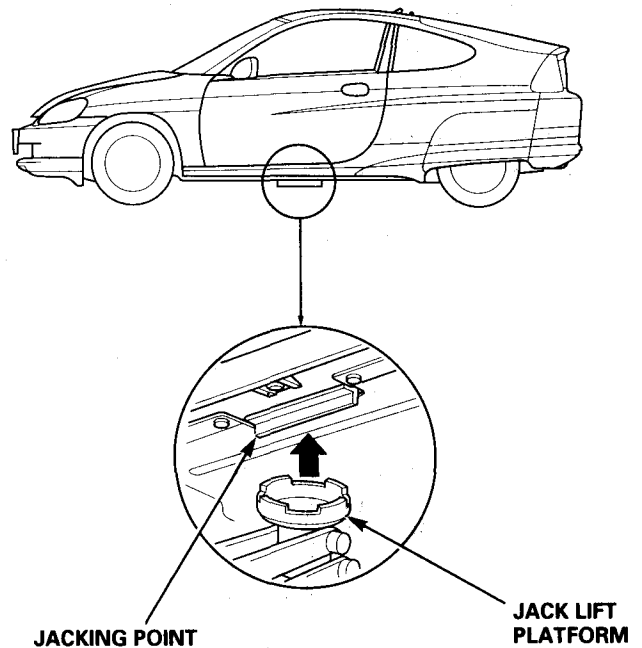

4. Position the safety stands under the support points and adjust them so the vehicle will be level.
5. Lower the vehicle onto the stands.