

Replacement

Rust Prevention / Paint

1. Applying sealer. Seal overlapped areas of the outer panel, and the welded surfaces of the new parts. Seal gaps completely.
2. Applying paint.

WARNING

- Ventilate when spraying paint. Most paint contains substances that are harmful if inhaled or swallowed. Read the paint label before opening the paint container.
- Avoid contact with skin. Wear an approved respirator, gloves, eye protection, and appropriate clothing when painting.
- Paint is flammable. Store it in a safe place, and keep it away from sparks flames, or cigarettes.

3. Apply undercoat to the wheelhouse and under-floor.
4. Apply the anti-rust agent to the inside of the outer panel and welded areas.