


Installation and Inspection

1. Install the any related parts:

NOTE: Some parts are mounted with special "Dacro" type bolts and nuts. When replacing these fasteners, use only the same type of bolts and nuts (see page 1-10).

2. Check the clearance of the door, hood, trunk lid or hatch, and adjust if necessary.
Check the operation of the parts, and make sure the doors lock securely.
3. Apply the sealer to the hinges of the hood, door, and hatch.

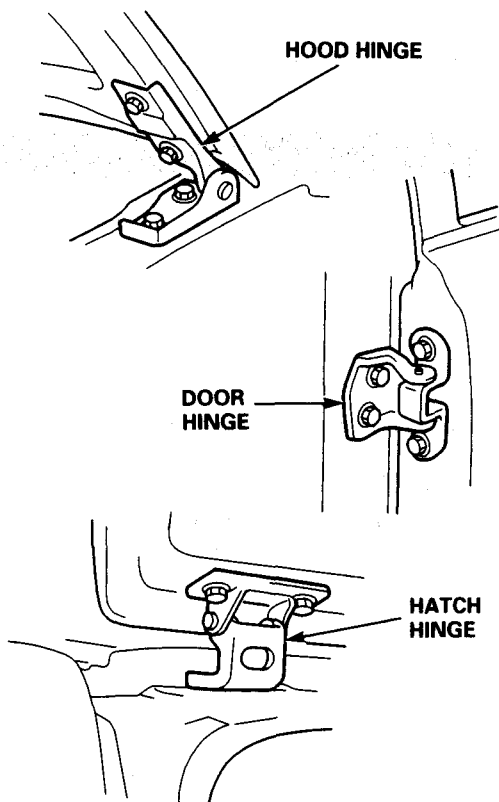

4. Adjust the wheel alignment.
5. Check the windows for water leaks.
6. Clean the passenger and cargo compartments.