

Removal

- Remove the front bulkhead, and check the front side frame extension position and for damage. If necessary, replace the front side frame extension.

