


Front Wheelhouse / Damper Housing

Removal

- Remove the wheelhouse upper member, then replace the front wheelhouse

NOTE: Do not section the wheelhouse upper member; replacement must be made at the factory seams.

- Check the damper housing position and for damage.

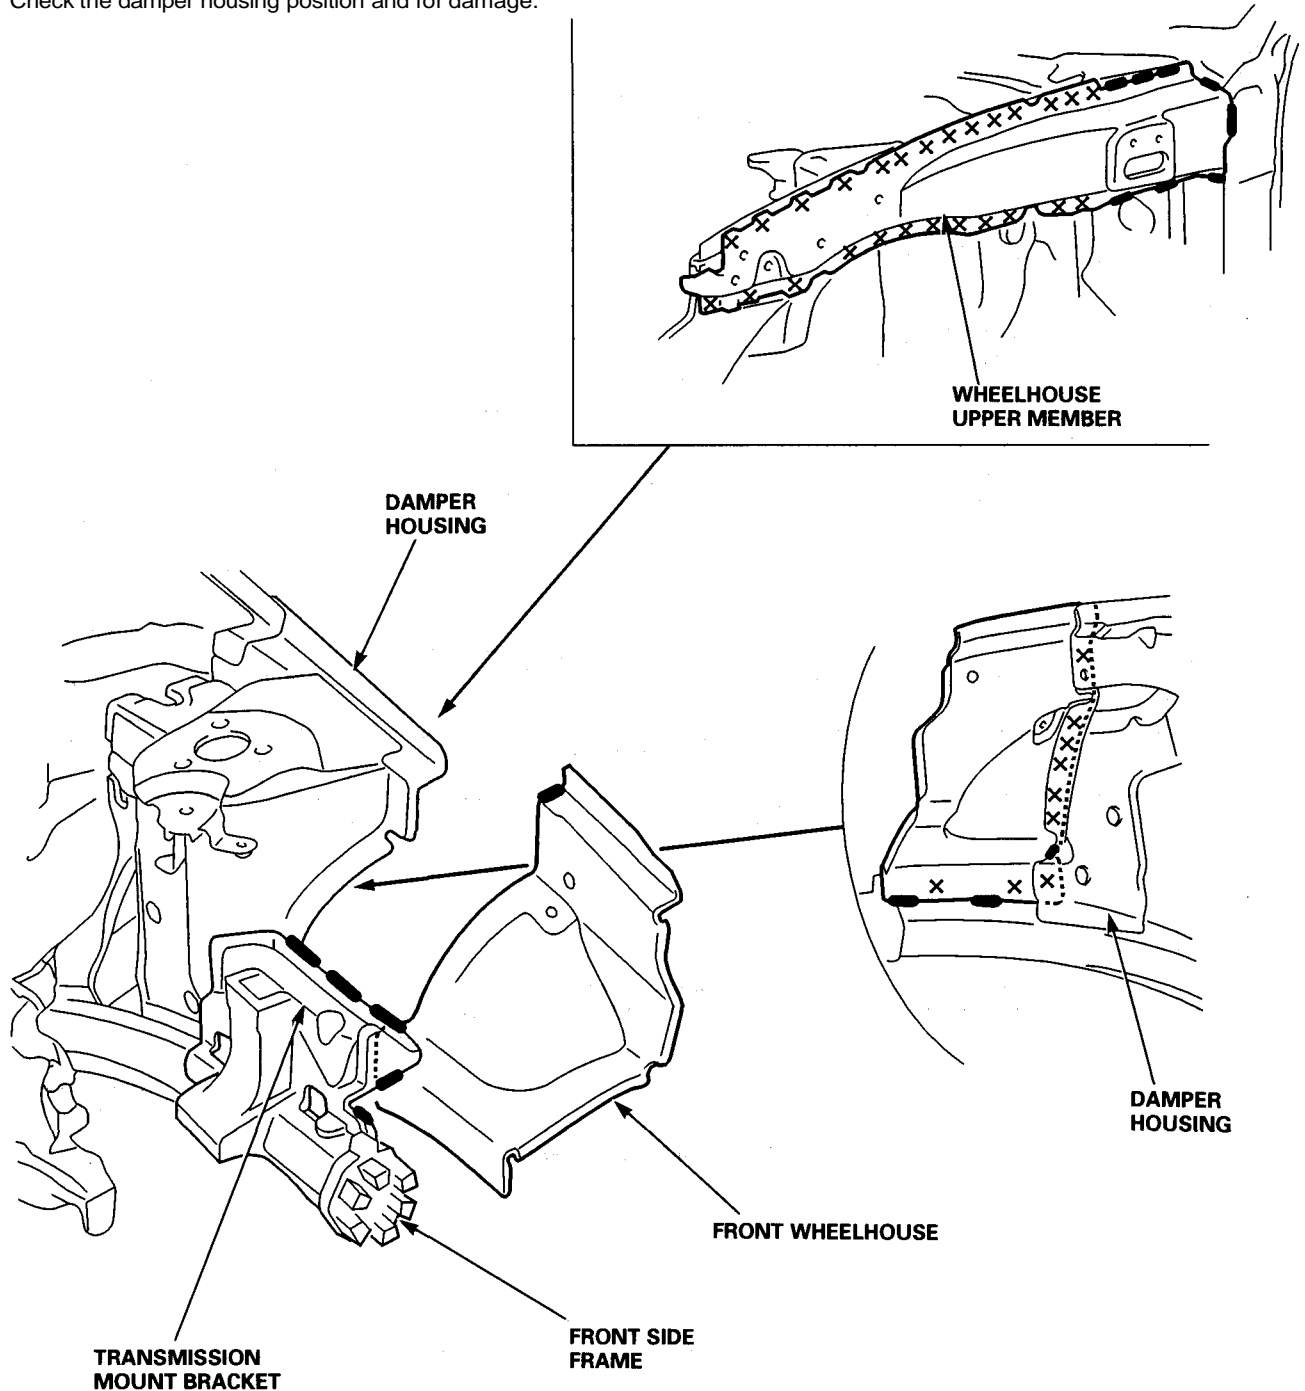

Passenger Compartment Side:

- If necessary, replace the damper housing, damper base, and wheelhouse B as an assembly.
- Drill holes completely through the part because the replacement wheelhouse B and damper base will be attached by plug welding.

