

Front Pillar

Removal

- Cut and remove the rear fender panel (see page 3-39).
- Remove the wheelhouse upper member (see page 3-8).
- When removing the front inner pillar, leave the front roof rail extension attached to the roof panel.



