


Removal





- Cut and remove the rear fender panel, and check the center pillar stiffener for damage.
- If necessary, replace the center pillar stiffener.
- Do not section the center pillar stiffener; repairs must be made at the factory seams.

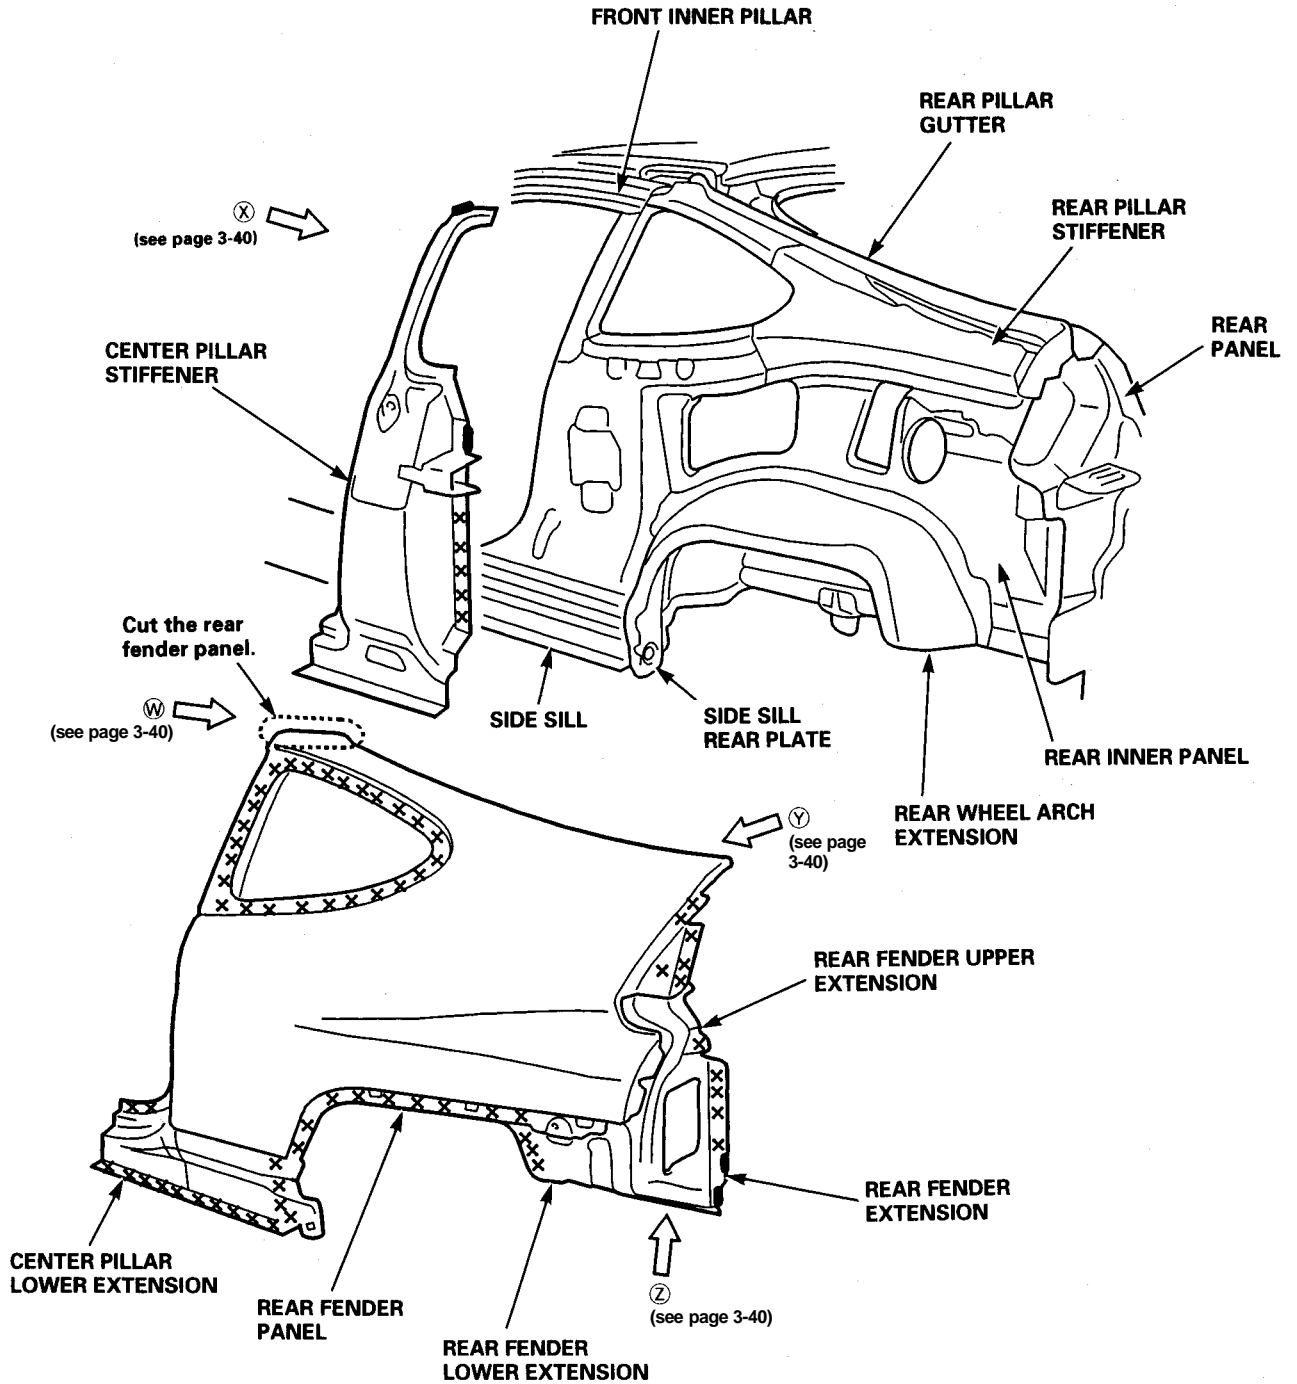


(cont'd)

Rear Fender Panel / Rear Inner Panel

Removal (cont'd)

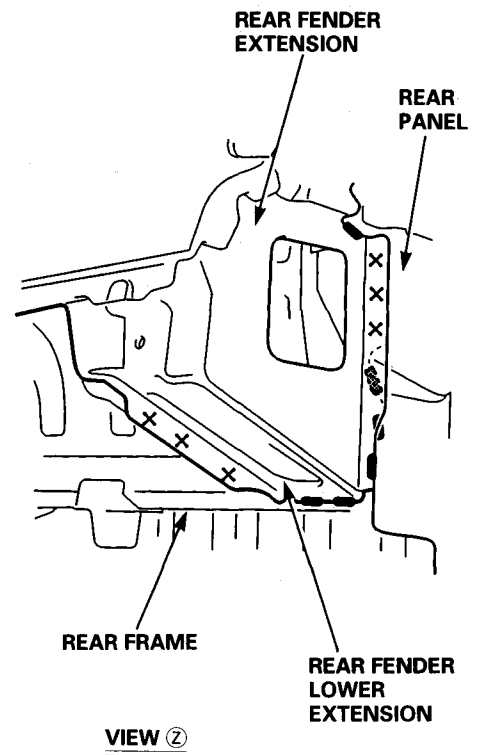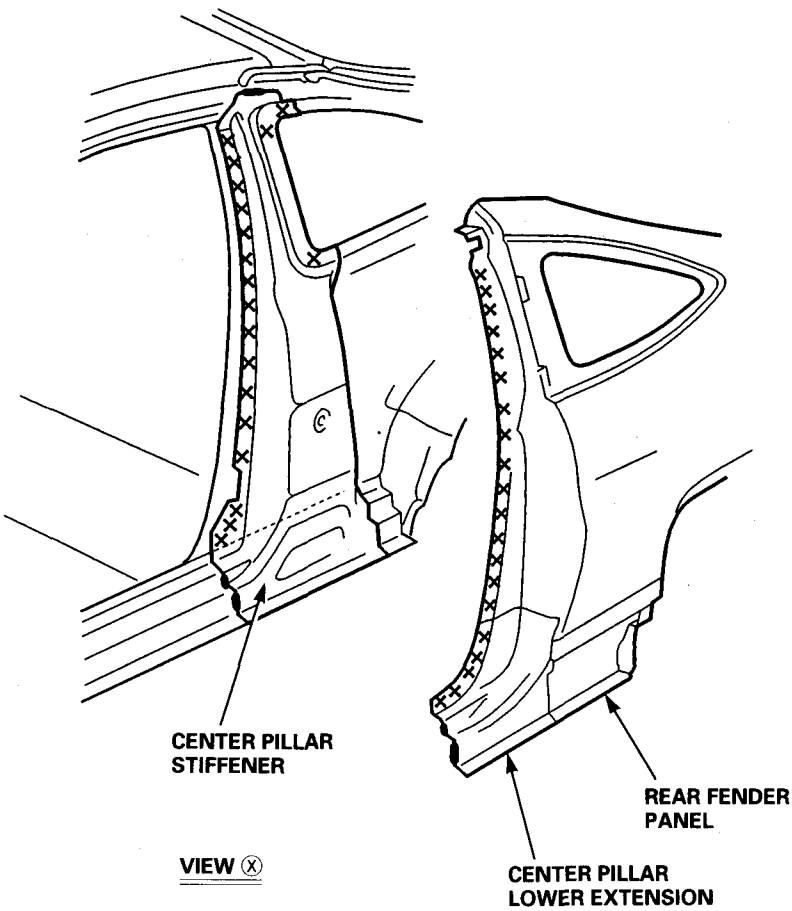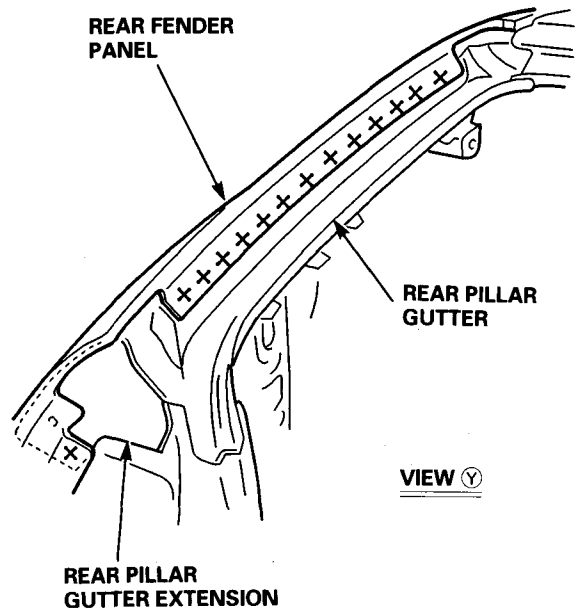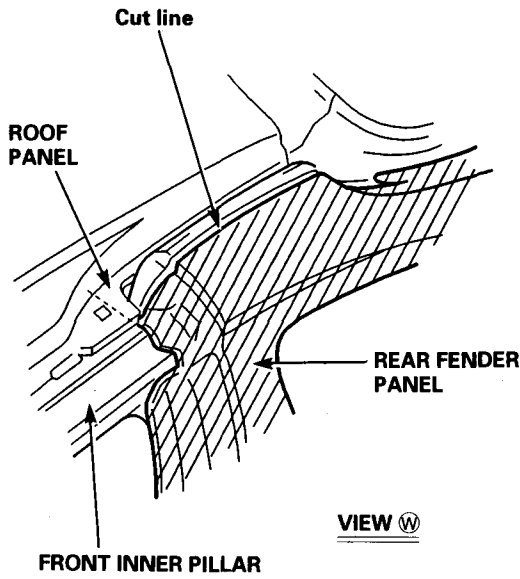

- Check the rear inner panel for position and damage.
- If necessary, replace the rear inner panel.

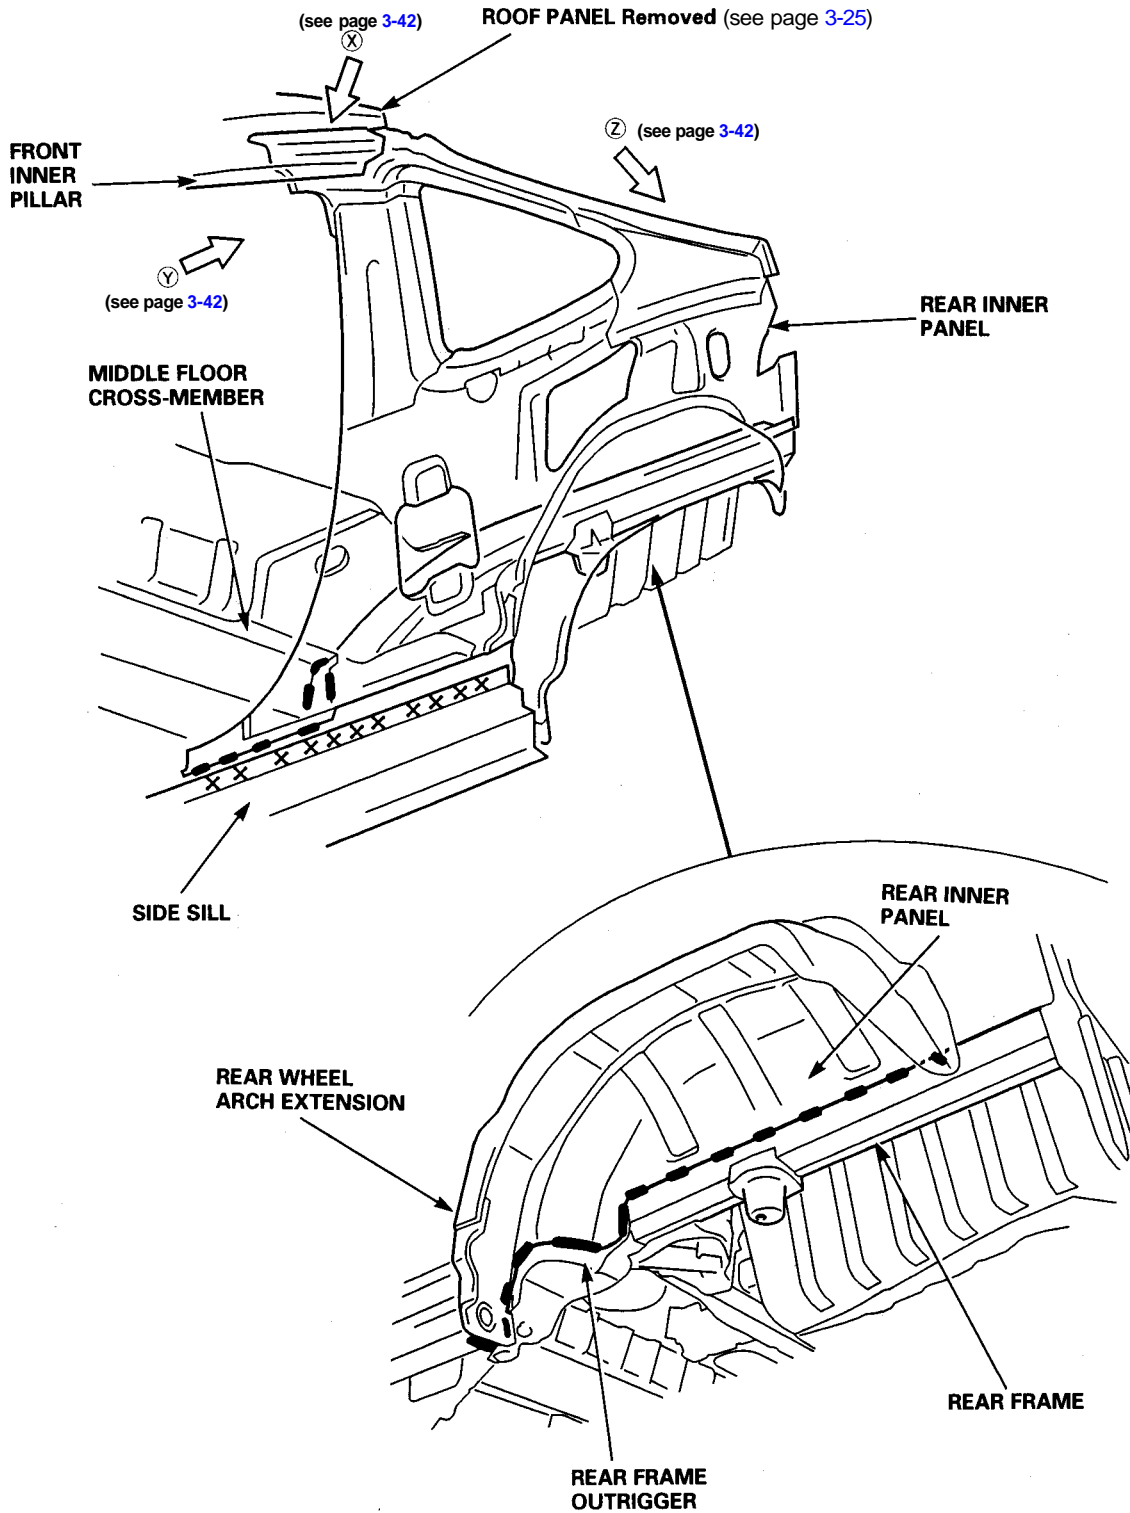

(cont'd)

Rear Fender Panel / Rear Inner Panel

Removal (cont'd)

