


Removal


- Remove the rear floor.
- Check the rear frame for position and damage.
If necessary, remove the middle cross-member lower plate, rear damper base, rear frame outrigger stiffener, and replace the rear frame and rear frame outrigger as an assembly.

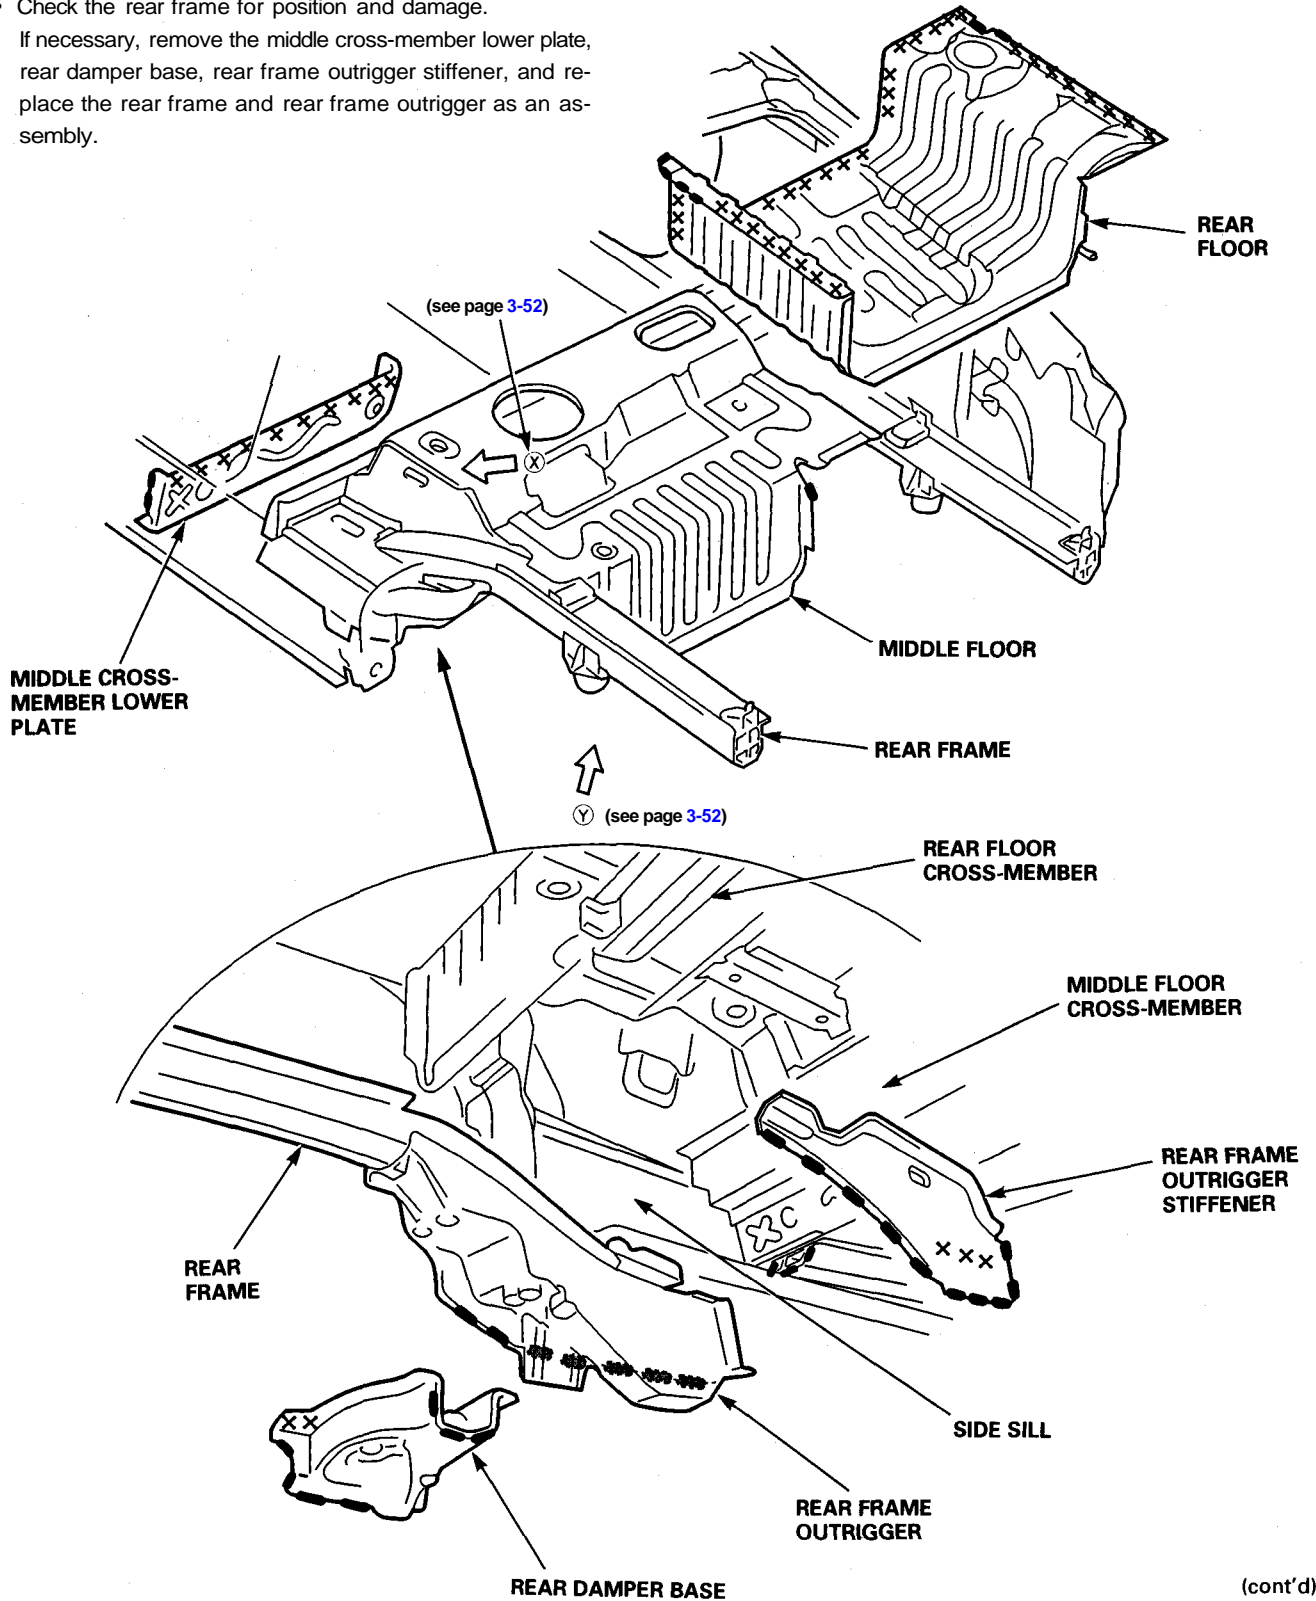

(cont'd)

Rear Floor, Rear Frame / Middle Floor

Removal (cont'd)

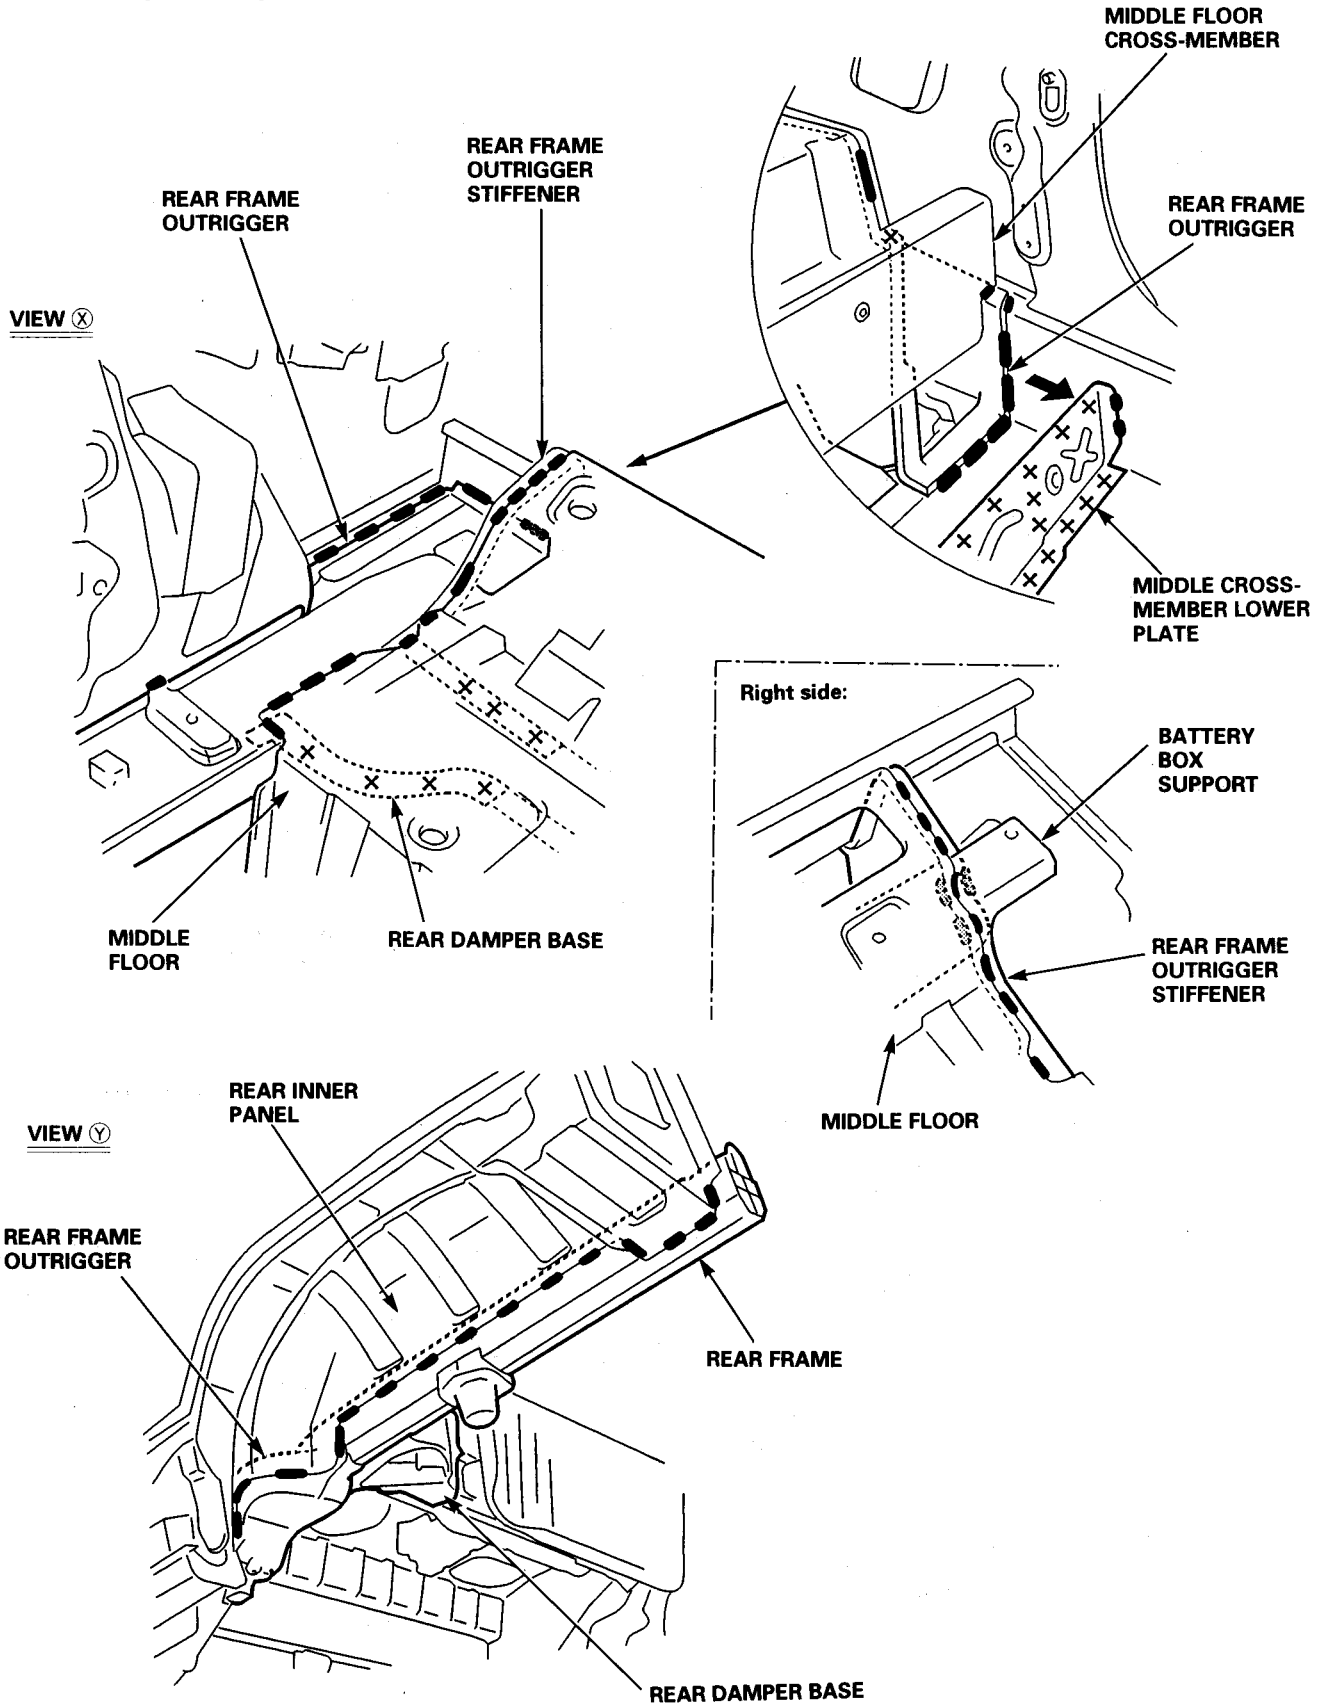

- Check the middle floor for damage.
If necessary, replace the middle floor.

