


Cross Section of Body and Sealants

General


NOTE: Follow the sealer manufacturer's instructions.

1. Clean the areas to be sealed with wax and grease remover.
2. Wipe off any excess spot sealer with thinner. After the primer is sprayed, sealer will fill to the area where spot sealer was wiped off.
3. Make sure you can see the sealant when the sealed parts in its proper location. Refer to pages 5-3, 5-4, 5-5, 5-6, 5-7, 5-8, 5-9, 5-10, 5-11, 5-12 of this manual.

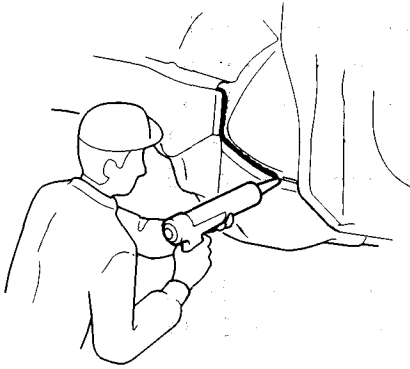

4. Finish up the engine compartment, the door opening, and the hatch gutter.

Wipe off the excess sealer.

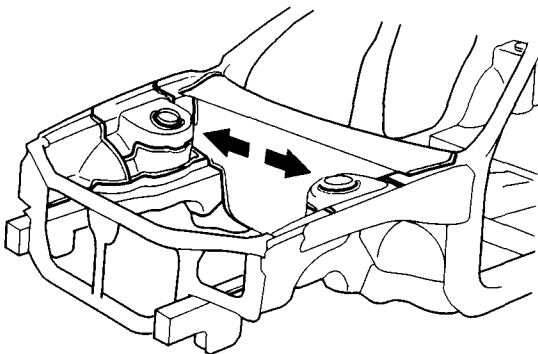

5. Apply sealer on any area that the replacement part will cover. Smooth the sealer with a brush if necessary.

