


Fuse/Relay Boxes

- Under-hood Fuse/Relay Box

Fuse-to-Components Index

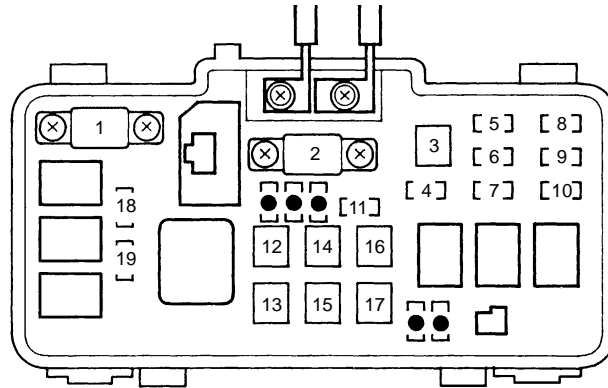

● : Spare fuse

Fuse Number	Fuse Name	Amps	Page	Component or Circuit Protected
1	IG1 MAIN	50A	10-3	Ignition switch (BAT)
2	BATTERY	80A	10	Battery, DC-DC converter, Starter
3	ABS MOTOR	30A	10-2	ABS modulator-control unit
4	HAZARD	10A	10-2	Hazard warning switch
5	IMA	15A	10-2	High speed MPI module fan control relay, Low speed MPI module fan control relay
6	HORN, STOP	10A	10-2	Brake pedal position switch, Ignition key switch/key light (CVT), Horn Relay
7	FUEL PUMP	15A	10	PGM-FI main relay
8	L HEAD LIGHT	15A	110 or 110-2	DRL control unit (Canada), Gauge assembly, Left headlight
9	—	—	—	Not used
10	R HEAD LIGHT	15A	110 or 110-2	DRL relay (Canada), Right headlight
11	COOLING FAN	30A	10-1	Radiator fan relay
12	HEATER MOTOR	40A	10-1	Blower motor relay
13	RR DEFROSTER	30A	10	Rear window defogger relay
14	ABS F/S	20A	10	ABS modulator-control unit
15	POWER STEERING MOTOR	40A	10	EPS control unit
16	BACK UP, ACC	30A	10-1	No. 14, 18, 19, 20, 21, 22 and 23 fuses (in the under-dash fuse/relay box), Taillight relay
17	POWER WINDOW MOTOR	40A	10-1	No. 10 fuse (in the under-dash fuse/relay box), Power window relay
18	IMA ECU	7.5A	10	Ignition hold relay
19	(CONDENSER FAN)	(20A)	10-1	A/C compressor clutch relay, A/C condenser fan relay