


Fuse/Relay Boxes

- Under-dash Fuse/Relay Box

Connector-to-Fuse/Relay Box Index

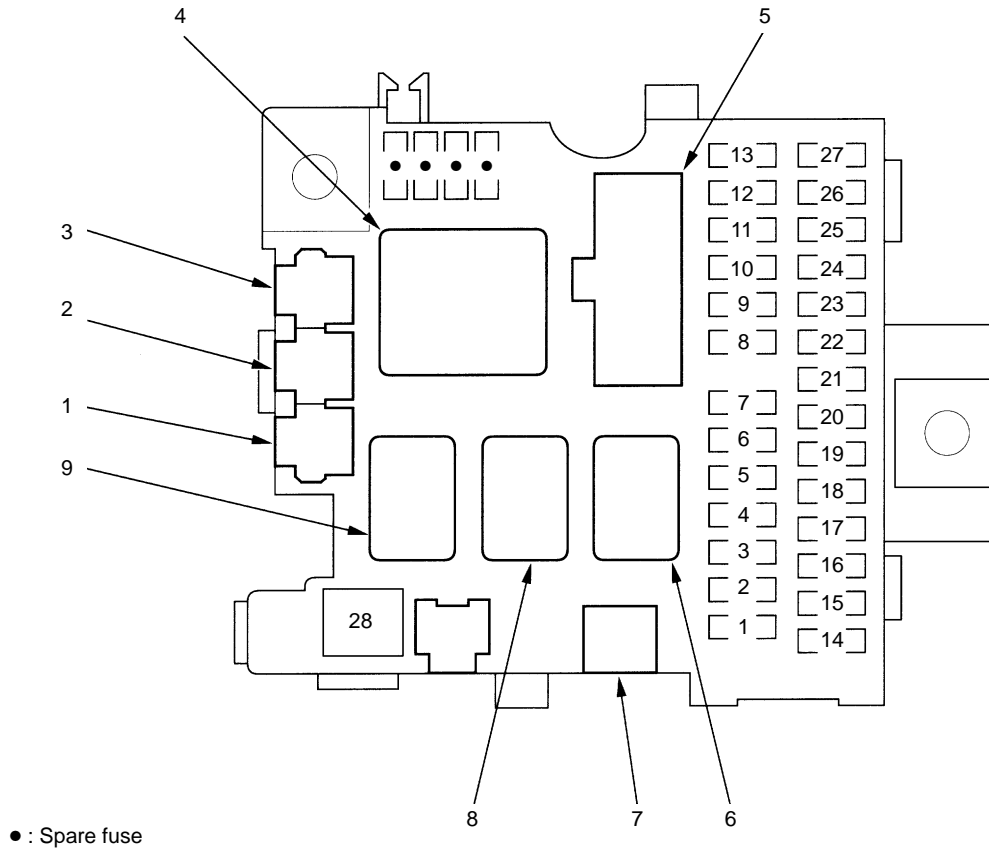

| Ref | Socket | Cavities | Connects to |
|-----|--------------------------|----------|--|
| 1 | Connector C | 1 | Optional connector (Ignition switch – ACC or ON output) |
| 2 | Connector D | 1 | Optional connector (Ignition switch – ON output: Fuse 16 – Under-hood) |
| 3 | Connector E | 1 | Optional connector (Ignition switch – ON output) |
| 4 | Turn signal/hazard relay | 3 | |
| 5 | Connector B | 7 | Ignition switch leads (see page 203-32) |
| 6 | Power window relay | 5 | |
| 7 | Connector A | 2 | Floor wire harness (see page 203-18) |
| 8 | Starter cut relay | 5 | |
| 9 | Taillights relay | 5 | |