




Connector Views

52. Outside Air Temperature Sensor

- Gray
- Behind middle of bumper
- On engine compartment wire harness

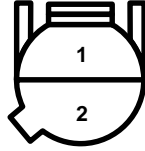

- 1 PNK (Outside air temperature sensor output)
- 2 LT GRN (Circuit 331)