 




Connector Views

78. Battery Current Sensor

- Gray
- Left front side of battery module
- On IPU compartment wire harness



- 1 BLU/RED (IMA system)
- 2 RED/WHT (IMA system)
- 3 LT GRN (IMA system)