




Connector Views

157. SRS Unit


- Yellow
- Under middle of dash
- On floor wire harness

Connector A

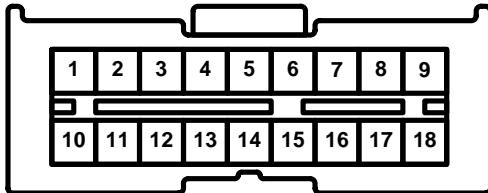

- 1 —
- 2 —
- 3 BLK/RED or BLU (Fuse 2 – Under-dash)
- 4 PNK or BLU (Fuse 1 – Under-dash)
- 5 —
- 6 GRN or BLU (Passenger's airbag control)
- 7 GRN or BLU (Driver's airbag control)
- 8 BLU/PNK or BLU (Driver's seat belt tensioner)
- 9 BLU/BRN or BLU (Passenger's seat belt tensioner)
- 10 —
- 11 —
- 12 BLK or BLU (G501)
- 13 BLK or BLU (G501)
- 14 —
- 15 YEL or BLU (Passenger's airbag control)
- 16 BRN/BLK or BLU (Driver's airbag control)
- 17 BLU/GRN or BLU (Driver's seat belt tensioner)
- 18 BLU/BLK or BLU (Passenger's seat belt tensioner)

Connector B

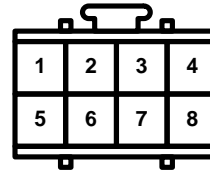

- 1 LT GRN/BLK (MES connector input)
- 2 LT BLU (DLC input/output)
- 3 —
- 4 —
- 5 PNK (SRS indicator control)
- 6 BRN (Service check input)
- 7 —
- 8 —