

# Connector to Harness Index

## Starter Cable

Ref	Connector or Terminal	Cavities/ Color	Location	Connects to	Notes
4	T1 (see page 6-1)		Left front side of engine compartment	Under-hood fuse/relay box	
8	T2		Front top of transmission	Starter motor	
	⊕		Battery	Battery positive terminal	

## Battery Ground Cable

Ref	Connector or Terminal	Cavities/ Color	Location	Connects to	Notes
1	G1		Middle rear of engine compartment	Battery ground via engine ground cable	
	⊖		Battery	Battery negative terminal	

## Engine Ground Cable

Ref	Connector or Terminal	Cavities/ Color	Location	Connects to	Notes
3	T3		Left side of engine compartment	Transmission mount bracket	
5	G2		Left side of engine compartment	Body ground via engine ground cable	

## Transmission Ground Cable

Ref	Connector or Terminal	Cavities/ Color	Location	Connects to	Notes
6	G3		Left side of engine compartment	Body ground via transmission ground cable	
7	T4		Left side of engine compartment	Transmission housing	

## EPS Motor Ground Cable

Ref	Connector or Terminal	Cavities/ Color	Location	Connects to	Notes
2	G4		Left rear of engine compartment	Body ground via EPS motor ground cable	
9	T5		Left rear of engine compartment	EPS motor	



# Connector to Harness Index

