Connector to Harness Index

Engine Wire Harness (M/T)

Ref	Connector or Terminal	Cavities/ Color	Location	Connects to	Notes
1	ECM connector D	16-GRY	Right side of floor		
2	ECM connector C	31-BLU	Right side of floor		
3	ECM connector B	25-GRY	Right side of floor		
4	Ignition coil No. 1	3-BLK	Rear of engine		
5	Ignition coil No. 2	3-BLK	Rear of engine		
6	C101	4-GRY	Under middle of dash	Engine compartment wire harness (see page 203-10)	'00-'04
6	C101	6-GRY	Under middle of dash	Engine compartment wire harness (see page 203-10)	'05-'06
7	C102	16- LT BLU	Under middle of dash	Dashboard wire harness B (left branch) (see page 203-12)	
8	C103	24- LT BLU	Under middle of dash	Floor wire harness (see page 203-18)	
9	Ignition coil No. 3	3-BLK	Rear of engine	, , ,	l
10	Primary HO2S	8-GRY	Rear of engine		*1
10	A/F sensor	4-GRY	Rear of engine		'02-'0
11	ECT sensor	2–GRY	Rear of engine		
12	TDC sensor 2	2-BLK	Middle of engine		
13	VSS	3-GRY	Rear of transmission		
14	Neutral position switch	2-GRY	Rear of transmission		
15	Motor commutation sensor	10-GRY	Middle of rear engine		
16	Secondary HO2S	4-GRY	Below rear of engine		
7	Back-up lights switch	2-GRY	Top of transmission		
18	C104 (Junction Connector)	14-	Middle of engine		l
	(GRY/BRN	g		
19	MAP sensor	3-GRY	Middle of engine		
20	Starter solenoid	1-BLK	Front top of transmission		
21	EVAP canister purge valve	2-BLK	Middle of engine		
22	TDC sensor 1	2-BLK	Middle of engine		
23	G101		Middle of engine	Body ground via engine wire harness	
24	IAT sensor	2-BLK	Middle of engine		
25	IAC valve	3-GRY	Front of engine		
26	TP sensor	3-GRY	Front of engine		
27	Oil pressure switch	1-GRY	Below front of engine		
28	Knock sensor	1-BLK	Front of engine		
29	Radiator fan switch	2-GRY	Front of engine		
30	Rocker arm oil control solenoid (VTEC solenoid valve)	1-GRY	Front of engine		
31	Rocker arm oil pressure switch (VTEC oil pressure switch)	2-GRY	Front of engine		
32	EGR valve and EGR Value position sensor	6-GRY	Middle of engine		
33	Injector No. 3	2-GRY	Front of engine		
34	Injector No. 2	2-GRY	Front of engine		
35	Injector No. 1	2-GRY	Front of engine		
36	CKP sensor	2-GRY	Below right side of engine		
37	T6 (Terminal Joint)		Middle of engine		
38	T7 (Terminal Joint)		Middle of engine		
39	G102		Middle of engine	Body ground via engine wire harness	'02-'0
40	C105 (Junction Connector)	22-WHT	Right side of floor		

^{*1 = &#}x27;00 and Early Production '01

Connector to Harness Index



