

Connector to Harness Index

Engine Wire Harness (CVT)

Ref	Connector or Terminal	Cavities/ Color	Location	Connects to	Notes
1	ECM connector B	25-GRY	Right side of floor	Engine compartment wire harness (see page 203-10)	
2	ECM connector C	31-BLU	Right side of floor		
3	Transmission control module connector A	26-GRY	Right kick panel		
4	Transmission control module connector B	22-GRY	Right kick panel		
5	ECM connector D	16-GRY	Right side of floor		
6	C107 (Junction Connector)	22-WHT	Under middle of dash		
7	C108 (Junction Connector)	22-WHT	Under middle of dash		
8	C101	8-GRY	Under middle of dash		
9	C102	16-LT BLU	Under middle of dash	Dashboard wire harness B (see page 203-12)	Late Production '01; '02-'06
10	C106	6-LT BLU	Under middle of dash	Dashboard wire harness B (see page 203-12)	
11	C103	24-LT BLU	Under middle of dash	Floor wire harness (see page 203-18)	
12	Ignition coil No. 3	3-BLK	Rear of engine		
13	A/F sensor	4-GRY	Left side of engine compartment		
14	TDC sensor 1	2-BLK	Middle of engine		
15	Motor commutation sensor	10-GRY/ GRN	Middle rear of engine		
16	Transmission range switch	6-GRY	Transmission housing		
17	VSS	3-BLK	Rear of transmission		
18	Secondary HO2S	4-GRY	Below rear of engine		
19	C104 (Junction Connector)	14- GRY/BRN	Middle of engine		
20	CVT driven pulley speed sensor	3-BLK	Middle of engine	Solenoid wire harness (CVT) (see page 203-33)	
21	CVT speed sensor	3-BLK	Middle of engine		
22	Starter solenoid	1-BLK	Front top of transmission		
23	C109	8-GRY	Transmission housing		
24	CVT drive pulley speed sensor	3-BLK	Middle of engine	Body ground via engine wire harness	
25	ECT Sensor	2-GRY	Middle of engine		
26	G101		Middle of engine		
27	IAT sensor	2-BLK	Middle of engine		
28	EVAP canister purge valve	2-BLK	Middle of engine		
29	TDC sensor 2	2-BLK	Middle of engine		
30	MAP sensor	3-GRY	Middle of engine		
31	TP sensor	3-GRY	Front of engine		
32	IAC valve	3-GRY	Front of engine		
33	Oil pressure switch	1-GRY	Below front of engine		
34	Knock sensor	1-BLK	Front engine		
35	Rocker arm oil pressure switch (VTEC oil pressure switch)	2-GRY	Front of engine		
36	Radiator fan switch	2-GRY	Front of engine		
37	Rocker arm oil control solenoid (VTEC solenoid valve)	1-GRY	Front of engine		
38	EGR valve and EGR valve position sensor	6-GRY	Middle of engine		
39	Injector No. 3	2-GRY	Front of engine		
40	Injector No. 2	2-GRY	Front of engine		
41	Injector No. 1	2-GRY	Front of engine		
42	T6 (Terminal Joint)		Middle of engine		
43	T7 (Terminal Joint)		Middle of engine		
44	CKP sensor	2-GRY	Right side of engine	Body ground via engine wire harness	
45	G102		Middle of engine		
46	Ignition coil No. 1	3-BLK	Rear of engine		
47	Ignition coil No. 2	3-BLK	Rear of engine		
48	C105 (Junction Connector)	22-WHT	Right side of floor		



ENGINE WIRE HARNESS (CVT)

