

Connector to Harness Index

Floor Wire Harness

Ref	Connector or Terminal	Cavities/ Color	Location	Connects to	Notes
1	MES connector	2-YEL	Upper left Kick panel area		
2	Under-dash fuse/relay box connector A (see page 6-4)	2-YEL	Upper left kick panel area		
3	Cable reel connector A	2-YEL	Lower side of steering column		
4	C103	24-LT BLU	Under middle of dash	Engine wire harness (see page 203-2 or 203-4)	
5	C501	16-LT BLU	Under middle of dash	Engine compartment wire harness (see page 203-10)	
6	C502	24-LT BLU	Behind center lower cover	Dashboard wire harness B (left branch) (see page 203-12)	
7	Passenger's airbag inflator	2-YEL	Middle of dash		
8	C504	16-BLU	Behind center lower cover	Dashboard wire harness A (see page 203-16)	
9	Driver's seat belt switch	2-GRY	Under driver's seat		
10	Parking brake switch	1-NAT	Middle of floor		
11	Left rear speaker	2-GRY	Behind driver's seat		
12	Right rear speaker	2-GRY	Behind passenger's seat		
13	Passenger's door switch	1-NAT	Right B-pillar		
14	C701	6-LT BLU	Right B-pillar	Hatch wire harness (see page 203-22)	
15	C702	1-BRN	Right B-pillar	Hatch wire harness (see page 203-22)	
16	Passenger's seat belt tensioner	2-YEL	Right B-pillar		
17	Noise condenser	2-GRY	Behind passenger's seat		
18	Right rear wheel speed sensor	2-ORN	Right rear underside of vehicle		'00-'05
19	EVAP canister vent shut valve	2-BRN	Right side of fuel tank		'00-'05
20	Fuel tank pressure sensor	3-GRY	Right side of fuel tank		'00-'05
21	EVAP bypass solenoid valve	2-BLK	Right side of fuel tank		'00-'05
22	C505	24-LT BLU	Behind seats, middle of floor	IPU compartment wire harness (see page 203-24)	
23	C506	12-GRY	Behind seats, middle of floor	IPU compartment wire harness (see page 203-24)	
24	G502		Behind seats, middle of floor	Body ground via floor wire harness	
25	Fuel tank unit	5-GRY	Left side of fuel tank		
26	Left rear wheel speed sensor	2-ORN	Left rear underside of vehicle		
27	C601	14-GRY	Left B-pillar	Rear wire harness (see page 203-20)	
28	Driver's seat belt tensioner	2-YEL	Left B-pillar		
29	Driver's door switch	1-NAT	Left B-pillar		
30	Third HO2S	4-GRY	Middle of floor		'02-'06 M/T CVT CVT
31	Park pin switch	4-GRY	Middle of floor		
32	Shift lock solenoid	2-GRY	Middle of floor		
33	C503	2-BLU	Behind center lower cover	Dashboard wire harness B (left branch) (see page 203-12)	
34	SRS unit connector A	18-YEL	Under middle of dash		
35	SRS unit connector B	8-YEL	Under middle of dash		
36	G501		Under SRS unit	Body ground via floor wire harness	
37	C561	12-GRY	Under right rear side of vehicle	Canister sub-harness (see this page)	

Canister Sub-harness ('06)

Ref	Connector or Terminal	Cavities/ Color	Location	Connects to	Notes
37	C561	12-GRY	Under right rear side of vehicle	Floor wire harness (see this page)	
38	Right rear wheel speed sensor	2-ORN	Under right rear side of vehicle		
39	EVAP canister vent shut valve	2-BLK	Under right rear side of vehicle		
40	Fuel tank pressure sensor	3-BLK	Under right rear side of vehicle		



Connector to Harness Index

