


# Connector Views

## – Component Connector View index

Connector	View
A/C Compressor	1
A/C Condenser Fan Assembly	31
A/C Diode	77
A/C Pressure Switch	97
A/F Sensor	
(Late Production '01, '02-'06)	192
A/F Sensor Relay	
(Late Production '01, '02-'06)	196
A/T Reverse Relay (CVT)	116
ABS Modulator/Control Unit	168
Accessory Power Socket	20
Air Mix Control Motor	109
Airbag Inflator, Driver's or Passenger's	21
Audio Unit	158
Audit Unit Antenna	15
Back-up Light Switch (M/T)	22
Battery Current Sensor	78
Battery Module Fan Control Relay,	
High Speed	113
Battery Module Fan Control Relay,	
Low Speed	113
Battery Module Fan Motor	23
Battery Module Fan Resistor	2
BCM Module	169
Blower Motor	24
Blower Motor High Relay	98
Blower Power Transistor	93
Brake Booster Vacuum Sensor	79
Brake Fluid Level Switch	25
Brake Fluid Pressure Sensor A	
('05-'06 M/T)	205
Brake Fluid Pressure Sensor B	
('05-'06 M/T)	206
Brake Pedal Position Switch	26
Bypass Contactor	3
Bypass Resistor	4
Cable Reel	27
Cargo Area Light	28
CAS Solenoid Valves A and B (CVT)	193
CD Changer (Honda Accessory)	140
Ceiling Light/Spotlights	99
CKP Sensor	29
Climate Control Unit (A/C)	133
Clutch Pedal Position Switch (M/T)	30
Combination Light Switch	145
CVT Drive Pulley Speed Sensor	188
CVT Driven Pulley Speed Sensor	189
CVT Pulley Pressure Control Valve	
Assembly	182
CVT Speed Change Control Valve	
Assembly	183

Connector	View
CVT Speed Sensor	190
CVT Start Clutch Pressure Control	
Valve Assembly	184
DC-DC Converter	127
Disarm Switch (Honda Accessory)	179
DLC	146
Door Switch, Driver's or Passenger's	5
Driver's Door Lock Knob Switch/	
Lock Actuator	81
Drivers Door Lock Switch	82
Driver's Power Window Motor	106
Driver's Seat Belt Switch	33
Driving Mode Buttons (CVT)	197
DRL Control Unit (Canada)	136
DRL Relay (Canada)	110
ECM	172
ECT Sensor	34
EGR Valve and EGR Valve	
Position Sensor	121
ELD Unit	83
EPS Control Unit	100
EPS Motor	35
EPS Motor Relay	101
EPS Torque Sensor	125
EVAP Bypass Solenoid Valve ('00-'05)	36
EVAP Canister Purge Valve	39
EVAP Canister Vent Shut Valve	37
Evaporator Temperature Sensor	38
Front Parking Light, Left or Right	53
Front Side Marker Light, Left or Right	58
Front Turn Signal Light, Left or Right	66
Fuel Consumption Display Select	
Switch	122
Fuel Cut Relay	111
Fuel Tank Pressure Sensor	84
Fuel Tank Unit	112
Gauge Assembly	171
Hatch Key Cylinder Switch	85
Hatch Latch/Unlock Switch	123
Hatch Opener Relay	102
Hatch Opener Actuator	41
Hatch Opener Switch	42
Hazard Warning Switch	129
Headlight, Left or Right	86
Heater Control Panel	
(except Climate Control)	133
Heater Core Temperature Sensor	43
High Mount Brake Light	176
High Voltage Contactor	44

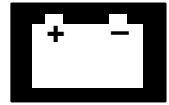

# Connector Views

## – Component Connector View index

Connector	View
High Voltage Contactor Relay	114
Horn	7
Horn Switch	8
IAC Valve	87
IAT Sensor	45
Idle Stop Switch (CVT)	185
Injectors	40
Ignition Coils	88
Ignition Hold Relay	114
Ignition Key Switch/Key Light	46
In-car Temperature Sensor	47
In-Line Fuse (Honda Accessory)	177
Inhibitor Solenoid (CVT)	186
Intermittent Wiper Relay	111
IMA Diode	80
Immobilizer Receiver Unit	115
Junction Board	147
Keyless Door Lock Control Unit	156
Knock Sensor	9
Left Front Wheel Sensor Sensor	68
Left Rear Wheel Sensor Sensor	70
License Plate Light	48
Low Beam Cut Relay (Canada)	110
Lower Rear Window Defogger	10
MAP Sensor	89
MCM	173
MES Connector	61
Mode Control Motor	126
Motor Commutation Sensor	130
Motor Current Sensor	91
MPI Module	137
MPI Module Current Sensor	92
MPI Module Fan	49
MPI Module Fan Control Relay, High Speed	114
MPI Module Fan Control Relay, Low Speed	114
MPI Module Fan Control Resistor, High Speed	6
MPI Module Fan Control Resistor, Low Speed	11
Neutral Position Switch (M/T)	50
Noise Condenser	51
Oil Pressure Switch	12
Outside Air Temperature Sensor	52
Park Pin Switch (CVT)	194
Parking Brake Switch	13
Passenger's Door Lock Actuator	32
Passenger's Power Window Motor	72
PGM-FI Main Relay	116

Connector	View
Power Mirror, Left or Right	90
Power Mirror Switch	131
Power Window Master Switch	138
Primary HO2S ( '00 and Early Production '01)	128
Radiator Fan Main Relay	111
Radiator Fan Motor	54
Radiator Fan Switch	55
Rear Speaker, Left or Right	60
Rear Window Washer Motor	56
Rear Window Defogger	14
Rear Window Defogger Relay	111
Rear Window Wiper Motor	104
Recirculation Control Motor	105
Right Front Wheel Speed Sensor	69
Right Rear Wheel Speed Sensor	71
Rocker Arm Oil Control Solenoid (VTEC Solenoid Valve)	17
Rocker Arm Oil Pressure Switch (VTEC Oil Pressure Switch)	67
Seat Belt Tensioner, Driver's or Passenger's	57
Secondary, HO2S	103
Security Control Unit (Honda Accessory)	181
Security LED (Honda Accessory)	178
Shift Lock Solenoid (CVT)	187
Speaker, Driver's or Passenger's	59
SRS Unit	157
Starter Solenoid	16
Sunlight Sensor	62
Taillight Assembly, Left or Right	118
TCM (CVT)	204
TDC Sensor 1	63
TDC Sensor 2	64
Test Tachometer Connector	65
Third HO2S ('02-'06 M/T)	195
TP Sensor	94
Transmission Range Switch (CVT)	199
Under-dash Fuse/Relay Box	174
Under-hood Fuse/Relay Box	175
Unlock Relay (Honda Accessory)	180
Voltage Converter Module	170
VSS	95
Window Switch, Passenger's	119
Windshield Washer Motor	73
Windshield Wiper Motor	120
Wiper/Washer Switch	139