

Splice and Junction Connector Details Index

Circuit		Page
Circuit 13	Brake Pedal Position	15
Circuit 16	Right Turn Signal	15
Circuit 17	Left Turn Signal	15-1
Circuit 20	Taillight Relay Control	15-1
Circuit 61	Horn Relay Control	15-1
Circuit 201	Door/Hatch Position	15-2
Circuit 331	Ground for Climate Control Unit/Heater Control Panel Sensors	15-2
Circuit 702	Brake Fluid Level	15-3
Circuit D04	Power Source for ECM Control	15-3
Circuit D46	Reference Voltage for ECM Sensors	15-4
Circuit E86 (CVT)	MAP Sensor Signal	15-7
Circuit E87 (CVT)	IAT Sensor Signal	15-7
Circuit E88 (CVT)	TP Sensor Signal	15-8
Circuit E91 (CVT)	ECT Sensor Signal	15-8
Circuit E93	Vehicle Speed Sensor Signal	15-4
Circuit F28	Service Check Signal	15-5
Circuit F44	NEP (Engine Speed Pulse)	15-5
Circuit F54	DLC Input/Output	15-6
Circuit K52	Engine Ready Signal	15-6
Circuit M06 (M/T)	Back-up Lights	15-6
Circuit M26 (CVT)	Park and Neutral Input	15-8
Circuit M30 (CVT)	CVT Drive Position	15-8
Circuit M33 (CVT)	CVT Low Position	15-9
Circuit M34 (CVT)	CVT Park Position	15-9
Circuit Z28	Ground for ECM Sensors	15-7