

Last Modified: 12-04-2024	6.11:8.1.0	Doc ID: RM10000002917Y
Model Year Start: 2023	Model: Prius Prime	Prod Date Range: [12/2022 -]
Title: PARK ASSIST / MONITORING: PANORAMIC VIEW MONITOR SYSTEM: UTILITY; 2023 - 2024 MY Prius Prius Prime [12/2022 -]		

UTILITY

HINT:

- With "All Readiness", you can check whether or not the DTC judgment has been completed by using the GTS.
- You should check "All Readiness" after simulating malfunction symptoms or for validation after finishing repairs.


ALL READINESS

(a) Clear the DTCs even if no DTCs are stored.

Chassis > Circumference Monitoring Camera Control Module > Clear DTCs

- (b) Turn the ignition switch off and wait for 2 minutes or more.
- (c) Turn the ignition switch to ON.
- (d) Perform the DTC judgment driving pattern to run the DTC judgment.

Chassis > Circumference Monitoring Camera Control Module > Utility

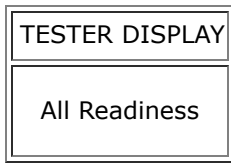

- (e) Input the DTCs to be confirmed.
- (f) Check the DTC judgment result.

GTS DISPLAY	DESCRIPTION
Normal	<ul style="list-style-type: none"> • DTC judgment completed • System normal
Abnormal	<ul style="list-style-type: none"> • DTC judgment completed • System abnormal
Incomplete	<ul style="list-style-type: none"> • DTC judgment not completed • Perform the driving pattern

If the judgment result shows Incomplete, perform the DTC confirmation driving pattern again.

CLEAR IMAGE INFORMATION

HINT:

This utility is used to clear the image information stored in the parking assist ECU.

(a) Perform "Image Information Clear " according to the display on the GTS.

Chassis > Circumference Monitoring Camera Control Module > Utility

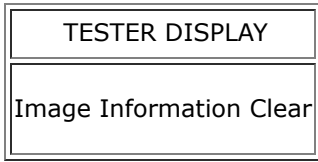


IMAGE RECORDING SETTING

HINT:

This utility is used to enable/disable image recording.

(a) Perform "Image Recording Setting" according to the display on the GTS.

Chassis > Circumference Monitoring Camera Control Module > Utility

