Last Modified: 12-04-2024	6.11:8.1.0	Doc ID: RM1000000289P1			
Model Year Start: 2023	Model: Prius Prime	Prod Date Range: [12/2022 -]		
Title: ADVANCED DRIVER ASSISTANCE SYSTEM: FRONT CAMERA: TARGET ADJUSTMENT(ONE TIME					
RECOGNITION); 2023 - 2024 MY Prius Prius Prime [12/2022 -]					

TARGET ADJUSTMENT(ONE TIME RECOGNITION)

CAUTION / NOTICE / HINT

NOTICE:

Make sure to read "Before Starting Target Adjustment" before proceeding with work.



PROCEDURE

1. SECURE APPROPRIATE AREA FOR PERFORMING LEARNING

(a) Park the vehicle on a level surface.

HINT:

- Make sure that the target recognition area of the forward recognition camera is free of objects which may be misrecognized as a target, such as overhead lights, windows, reflective objects, etc.
- If there are any objects which may be misrecognized as a target behind the area where a target will be placed, prepare an appropriate object to block the background.



*а	2 m (6.56 ft.)
*b	1 m (3.28 ft.)

(b) Check the levelness of the ground.

(1) Check the levelness of the ground at the 2 points shown in the illustration.





Levelness Check Point

(2) Place the level on each levelness check point and check that the air bubble of the level is centered.



(c) Adjust the tire inflation pressure to the specified pressure.

Click here

(d) Clean the windshield glass.

2. CREATE TARGET

(a) When using a target SST or previously created target:

(1) Prepare SST. SST: 09870-60000 SST: 09870-60060 SST: 09870-61100 SST: 09870-62200 09870-60010 09870-60020



(b) When not using a target SST or previously created target:

12/9/24, 5:14 PM ADVANCED DRIVER ASSISTANCE SYSTEM: FRONT CAMERA: TARGET ADJUSTMENT(ONE TIME RECOGNITION); 2023 - 20...

NOTICE:

Do not laminate the target or attach reflective materials, such as clear adhesive tape, to its surface. If there are reflective areas on the surface of the target, they will appear white to the forward recognition camera and the target may not be recognized.



*a	Actual Target	*b	Target as Seen by forward recognition camera
	Reflective Object or Surface	-	_

(1) Print 3 copies of the illustration.



12/9/24, 5:14 PM ADVANCED DRIVER ASSISTANCE SYSTEM: FRONT CAMERA: TARGET ADJUSTMENT(ONE TIME RECOGNITION); 2023 - 20... (2) Check that the dimensions are within the values shown in the illustration.



*a	12 mm (0.472 in.)	*b	60 mm (2.36 in.)
*c	120 mm (4.72 in.)	*d	Blurry
*e	Distorted	-	-

NOTICE:

- Make sure that the black areas of the target sheet are not glossy.
- Make sure that the borders of the black and white areas on the target sheet are straight, and are not warped or blurry.

HINT:

If the dimensions of the created target sheet are not within +/-5 mm (0.197 in.) of the specified values, adjust the printer settings and reprint the target sheet so that the dimensions are as specified.

(3) Prepare a piece of cardboard and draw lines on it as shown in the illustration.



*а	Cardboard	*b	130 mm (5.12 in.) or more
*c	730 mm (2.39 ft.) or more	*d	297 mm (11.69 in.)
*e	65 mm (2.56 in.) or more	*f	90°

(4) Place the 3 target sheets on the cardboard with the black area of each at the top right and align the borders of the black and white areas with the lines as shown in the illustration.



(5) Securely attach the target sheets to the cardboard using double-sided tape.



NOTICE:

Do not attach reflective materials, such as clear adhesive tape, to the target sheet surface as this may affect target recognition.

(6) Remove SST (reflector) from SST (base stand).

SST: 09870-60000

09870-60010

09870-60020

- (7) Align the center of the target sheet with SST (reflector) and attach the target to SST (reflector) with double-sided tape.
- (8) Install SST (reflector) to SST (base stand).
- (c) Hang a weight with a pointed tip from the top center of the target sheet and align it with the mark-off line of SST (base stand) as shown in the illustration.

HINT:

- Make sure that the points (A), (B) and (C) of the target sheet are aligned with the string.
- As SST may fall forward, make sure to place a weight on the base of SST.



(d) Move SST (reflector) up or down so that the center of the 3 target sheets is at the height shown in the illustration, and secure SST (reflector) in place.

HINT:

- If the center of the target sheet is not within +/- 5 mm (0.197 in.) of the height specified, adjust the position of SST (reflector) so that the height is as specified.
- To prevent the targets from tilting, the difference between the left target height and right target height should be within 5 mm (0.197 in.). If the difference is outside the permissible range, adjust it until it is within that range.



*a	1350 mm (53.15 in.)
*b	Center Target
*c	Left Target
*d	Right Target

(e) Prepare an object to block the area behind the target. (If there are any objects which may be misrecognized as a target behind the area where a target will be placed.)

(1) When blocking the background by holding cardboard behind the target:



*a	Cardboard	*b	1160 mm (3.80 ft.) or more
*c	560 mm (1.84 ft.) or more	*d	580 mm (1.90 ft.) or more
*e	280 mm (11.02 in.) or more	-	-

1. Prepare a piece of cardboard with the dimensions shown in the illustration.

HINT:

- Do not use cardboard that is bent or has a pattern or image on it.
- Do not use cardboard which has a reflective surface or reflective objects attached to it.
- Make sure to hold the cardboard in such a way that fingers are not within the target recognition area.
- (2) When blocking the background using a light colored plain cloth:



*a	Light Colored Plain Cloth	*b	Whiteboard or Equivalent
*c	1160 mm (3.80 ft.) or more	*d	560 mm (1.84 ft.) or more
*e	580 mm (1.90 ft.) or more	*f	280 mm (11.02 in.) or more

1. Cover a whiteboard or equivalent with light colored plain cloth and secure it.

HINT:

- Make sure to stretch the cloth to remove wrinkles before securing it.
- Make sure that the target recognition area is free of clear adhesive tape, reflective surfaces and reflective objects.

3. DETERMINE TARGET PLACEMENT POSITION

(a) Hang a weight with a pointed tip from the center of the front emblem, and mark the front center point of the vehicle (point A) on the ground (placement position).



HINT:

Lightly flick the string with your fingers several times to confirm that the string is perpendicular to the ground.

4. PERFORM FORWARD RECOGNITION CAMERA OPTICAL AXIS LEARNING

NOTICE:

- Close all of the doors.
- Make sure that no one is inside the vehicle.
- Do not lean on the vehicle.
- Make sure that the headlights are turned off.
- Make sure the vehicle is unloaded.
- (a) Perform Recognition Camera/Target Position Memory.
 - (1) Connect the GTS to the DLC3.
 - (2) Turn the ignition switch to ON.
 - (3) Turn the GTS on.
 - (4) Enter the following menus: Chassis / Front Recognition Camera / Utility / Recognition Camera/Target Position Memory.

Chassis > Front Recognition Camera > Utility

TESTER DISPLAY

Recognition Camera/Target Position Memory

- (5) Press "Next". *1
- (6) Confirm the conditions displayed on the screen and then press "Next".

(7) According to the display on the GTS, enter the following values for each respective item.

ITEM	VALUE
Target Height	1350 mm (53.15 in.)
Target Distance	1843 mm (72.56 in.)
Distance between Targets	297 mm (11.69 in.)
Target Size	120 mm (4.72 in.)
Pitch Offset Angle	0 deg.

- (8) If "Recognition Camera/Target Position Memory has failed." is displayed on the GTS screen, confirm the conditions displayed on the screen, then press "Yes" and repeat the procedure from *1.
- (9) Press "Exit" to exit the Recognition Camera/Target Position Memory utility.

NOTICE:

Make sure to perform "Recognition Camera Axis Adjust" / "Front Recognition Camera Axis Misalignment Reading". Do not drive the vehicle before performing "Recognition Camera Axis Adjust" / "Front Recognition Camera Axis Misalignment Reading".

- (b) Perform Recognition Camera Axis Adjust (target positioning).
 - (1) Move the target to align the front mark-off line of SST with the placement point (point A) as shown in the illustration.



*a Mark-off Line

HINT:

Set the target directly facing the camera, because setting the target at an angle may prevent correct optical axis learning.



(2) Enter the following menus: Chassis / Front Recognition Camera / Utility / Recognition Camera Axis Adjust.

for Type A:

Chassis > Front Recognition Camera > Utility

TESTER DISPLAY

Recognition Camera Axis Adjust

for Type B:

Chassis > Front Recognition Camera > Utility

TESTER DISPLAY

Recognition Camera Axis Adjust

- (3) Press "Next".
- (4) Check that the values stored in the ECU are correct and then press "Next".
- (5) If "Failed to read axis adjustment data" is displayed, perform Recognition Camera/Target Position Memory, and repeat the procedure from *1.
- (6) Confirm the conditions displayed on the screen and then press "Next".
- (7) Check that the target is placed at point A (placement position) and then press "Next".

HINT:

If there are any objects which may be misrecognized as a target behind the area where a target will be placed, block the area behind the target with an appropriate object before pressing "Next".

(8) Perform the adjustment according to the display on the GTS.

NOTICE:

If an error code is displayed, perform troubleshooting according to the following table, then perform the adjustment again.

ERROR NO.	ERROR DESCRIPTION	CAUSE OF ERROR	ACTION TO BE TAKEN
1	Target 1 (Center) malfunction	Center target cannot be recognized	Entering the adjustment area during beam axis adjustment is prohibited (Do not allow anything to pass between the target and the vehicle)
			The values stored in recognition camera/target positions are correct
			The target height and placement points are appropriate
			There are no objects in the background that could be mistakenly detected as the target and the background is hidden

ERROR NO.	ERROR DESCRIPTION	CAUSE OF ERROR	ACTION TO BE TAKEN
			 There is an appropriate amount of light (brightness) There are no reflective objects such as cellophane tape on the target or object used to conceal the background The target is correctly orientated (black area positioned on top right) Not in a backlight condition The windshield glass is clean
			installed) and has been installed after the cover is attached)
			Entering the adjustment area during beam axis adjustment is prohibited (Do not allow anything to pass between the target and the vehicle)
			The values stored in recognition camera/target positions are correct
			The target height and placement points are appropriate
	Target 2 (Left)	Left target	There are no objects in the background that could be mistakenly detected as the target and the background is hidden
2	malfunction	cannot be recognized	 There is an appropriate amount of light (brightness) There are no reflective objects such as cellophane tape on the target or object used to conceal the background The target is correctly orientated (black area positioned on top right) Not in a backlight condition The windshield glass is clean
			Check the camera installation condition (The camera is properly installed (completely installed) and has been installed after the cover is attached)
3	Target 3 (Right) malfunction	 Right target cannot be recognized 	Entering the adjustment area during beam axis adjustment is prohibited (Do not allow anything to pass between the target and the vehicle)
			The values stored in recognition camera/target positions are correct
			The target height and placement points are appropriate
			There are no objects in the background that could be mistakenly detected as the target

ERROR NO.	ERROR DESCRIPTION	CAUSE OF ERROR	ACTION TO BE TAKEN
			and the background is hidden
			 There is an appropriate amount of light (brightness) There are no reflective objects such as cellophane tape on the target or object used to conceal the background The target is correctly orientated (black area positioned on top right) Not in a backlight condition The windshield glass is clean
			Check the camera installation condition (The camera is properly installed (completely installed) and has been installed after the cover is attached)
			SST (target) does not move due to the wind, etc.
 1 and 4 displayed simultaneously 2 and 4 displayed simultaneously 3 and 4 displayed 3 and 4 displayed 	 SST (target) shaking during beam axis adjustment Vehicle shaking during beam axis 	 Adjust the vehicle so that it does not move Do not enter the vehicle while beam axis adjustment is in progress Do not lean on the vehicle during beam axis adjustment 	
		adjustment	There are no objects in the background that could be mistakenly detected as the target and the background is hidden
	Target position	Detected target	The target height and placement points are appropriate
5	and interval malfunction	position and interval is incorrect	There are no objects in the background that could be mistakenly detected as the target and the background is hidden
			The target height and placement points are appropriate (The levelness of the placement area is within the specified value. (See page 1. SECURE APPROPRIATE AREA FOR PERFORMING LEARNING))
9	9 FOE and role angle malfunction	parameter values are incorrect	The values stored in recognition camera/target positions are correct
			The camera is installed correctly (The camera is properly installed (completely installed) and has been installed after the cover is attached)

(9) Press "Exit" to exit the Recognition Camera Axis Adjust utility.

(10) Turn the ignition switch off.

(11) Disconnect the GTS from the DLC3.

(c) Forward recognition camera optical axis learning is complete.

(d) After optical axis adjustment completes, clear the following system vehicle control history entries.

https://techinfo.toyota.com/t3Portal/document/rm/RM41D0U/xhtml/RM1000000289P1.html?sisuffix=ff&locale=en&siid=1733793282905#RM10000... 15/16

ADVANCED DRIVER ASSISTANCE SYSTEM: FRONT CAMERA: TARGET ADJUSTMENT(ONE TIME RECOGNITION); 2023 - 20...

(1) Clear vehicle control history (Front Camera System).

Click here

•

Ο ΤΟΥΟΤΑ