

Last Modified: 12-04-2024	6.11:8.1.0	Doc ID: RM100000002BZ6U
Model Year Start: 2023	Model: Prius Prime	Prod Date Range: [03/2023 -]
Title: AUDIO / VIDEO: AMPLIFIER ANTENNA: REMOVAL; 2023 - 2024 MY Prius Prius Prime [03/2023 -]		

REMOVAL

CAUTION / NOTICE / HINT

The necessary procedures (adjustment, calibration, initialization or registration) that must be performed after parts are removed and installed, or replaced during No. 1 amplifier antenna assembly removal/installation are shown below.

CAUTION:

Be sure to read Precaution thoroughly before servicing.



[Click here](#) INFO

NOTICE:

- After the ignition switch is turned off, there may be a waiting time before disconnecting the negative (-) auxiliary battery terminal.

[Click here](#) INFO

HINT:

- When the cable is disconnected / reconnected to the auxiliary battery terminal, systems temporarily stop operating. However, each system has a function that completes learning the first time the system is used.

Learning completes when vehicle is driven

EFFECT/INOPERATIVE FUNCTION WHEN NECESSARY PROCEDURES ARE NOT PERFORMED	NECESSARY PROCEDURES	LINK
Front Camera System	Drive the vehicle straight ahead at 35 km/h (22 mph) or more for 5 seconds or more.	INFO


Learning completes when vehicle is operated normally

*1: w/o Power Back Door System




EFFECT/INOPERATIVE FUNCTION WHEN NECESSARY PROCEDURES ARE NOT PERFORMED	NECESSARY PROCEDURES	LINK
Power Door Lock Control System*1 <ul style="list-style-type: none"> Back door opener 	Perform door unlock operation with door control switch or electrical key transmitter sub-assembly switch.	INFO
Power Back Door System*2	Reset back door close position	INFO
Air Conditioning System	for HEV Model: After the ignition switch is turned to ON, the servo motor standard position is recognized. for PHEV Model: After the ignition switch is turned to ON, the servo motor and expansion valve standard position is recognized.	-
*1: w/o Power Back Door System *2: w/ Power Back Door System		

CAUTION / NOTICE / HINT

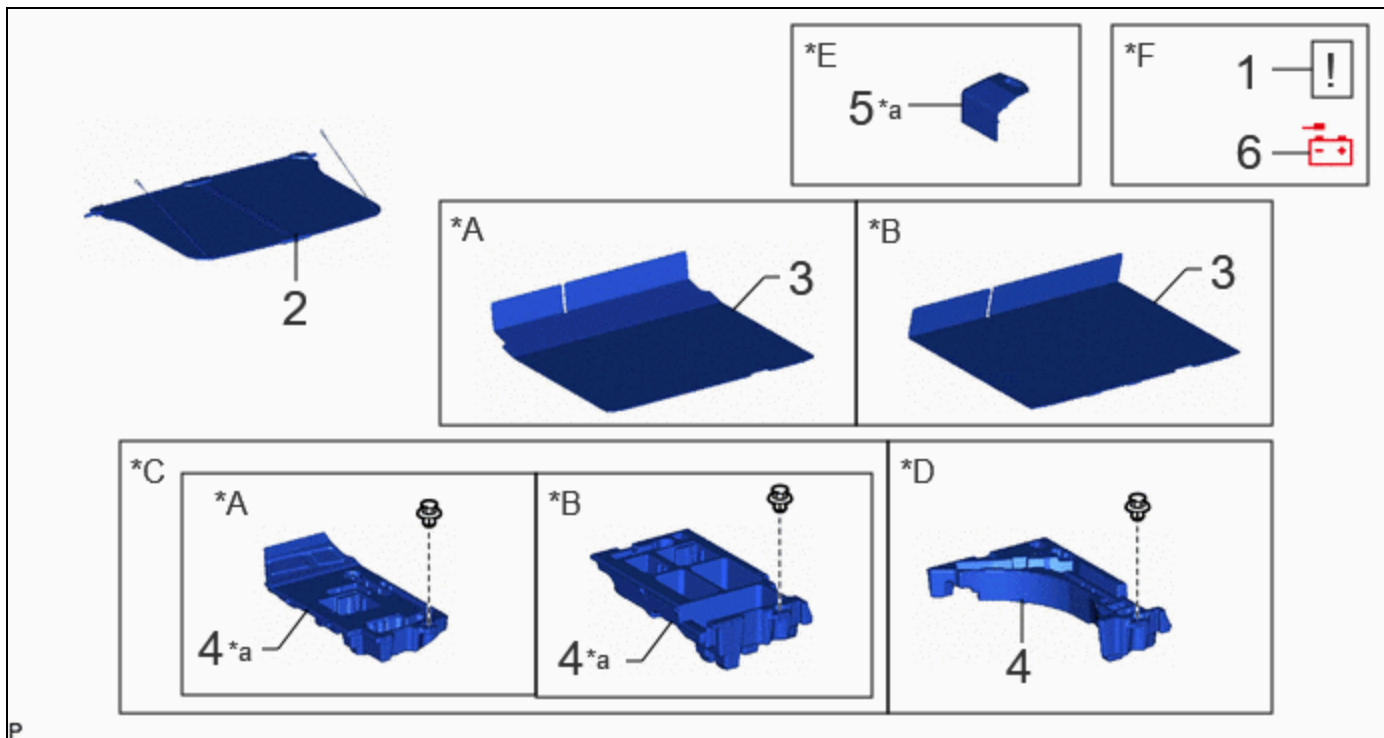
COMPONENTS (REMOVAL)






PROCEDURE		PART NAME CODE			
1	PRECAUTION	-	INFO	-	-
2	TONNEAU COVER ASSEMBLY	64910J	-	-	-


	PROCEDURE	PART NAME CODE			
3	DECK BOARD ASSEMBLY	58410B	-	-	-
4	DECK FLOOR BOX RH	64995	-	-	-
5	BATTERY SERVICE HOLE COVER ASSEMBLY	58440	-	-	-
6	DISCONNECT CABLE FROM NEGATIVE AUXILIARY BATTERY TERMINAL	-	-	-	-

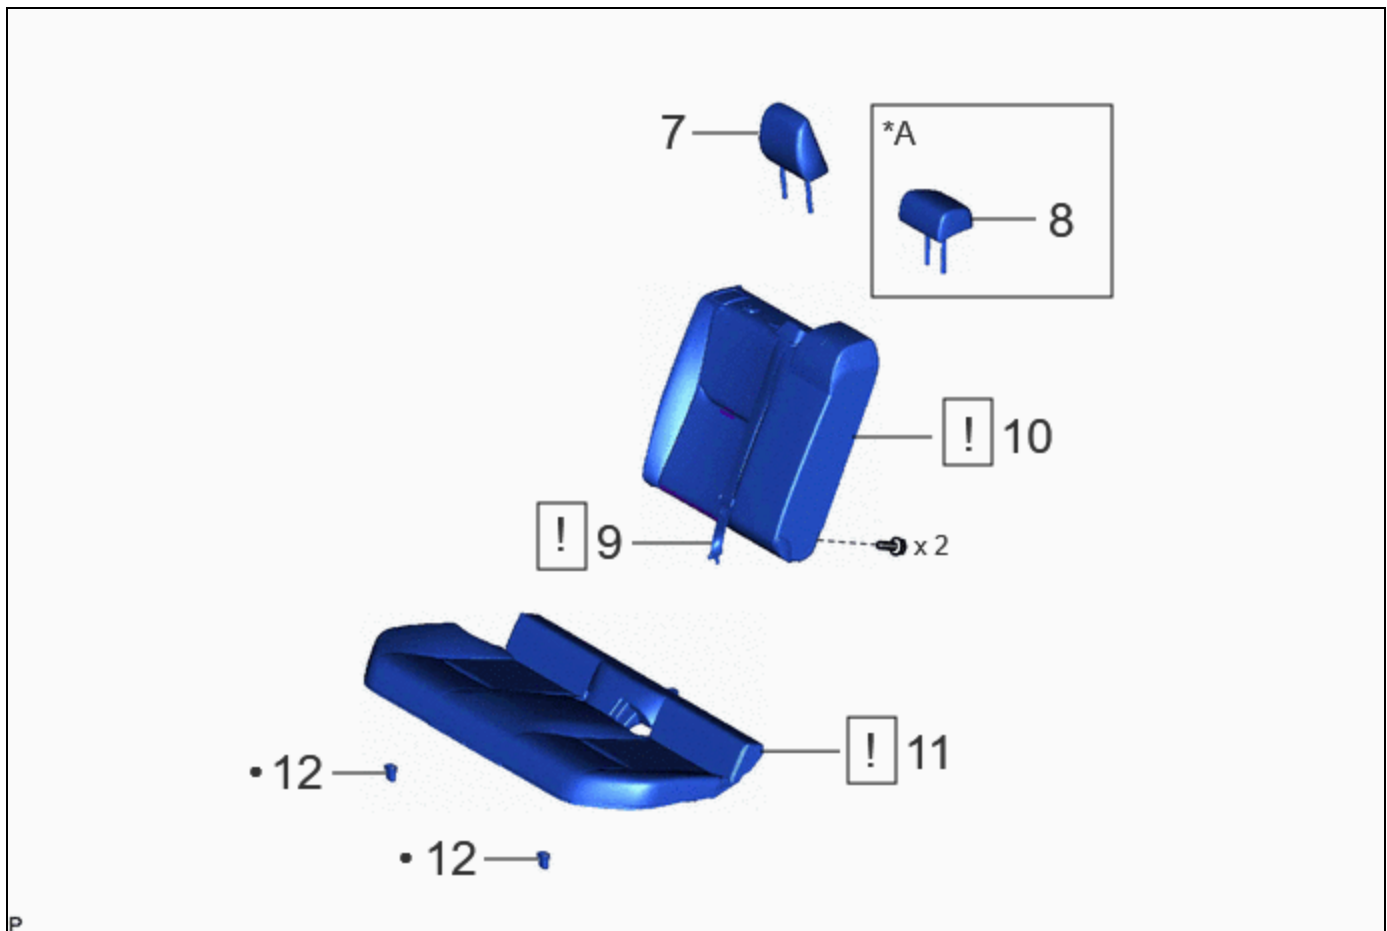


*A	for Type A	*B	for Type B
*C	w/o Spare Tire	*D	w/ Spare Tire
*E	for M20A-FXS	*F	w/ Rear Seat Side Airbag
*a	<p>HINT: As the illustration shown is an example, the actual details may differ.</p>	-	-




PROCEDURE		PART NAME CODE			
7	REAR SEAT HEADREST ASSEMBLY	71940A	-	-	-
8	REAR SEAT CENTER HEADREST ASSEMBLY	71960B	-	-	-
9	REAR CENTER SEAT OUTER BELT ASSEMBLY	73350C	INFO	-	-
10	REAR SEATBACK ASSEMBLY RH	-	INFO	-	-
11	REAR SEAT CUSHION ASSEMBLY	-	INFO	-	-
12	REAR SEAT CUSHION LOCK HOOK	72693	-	-	-

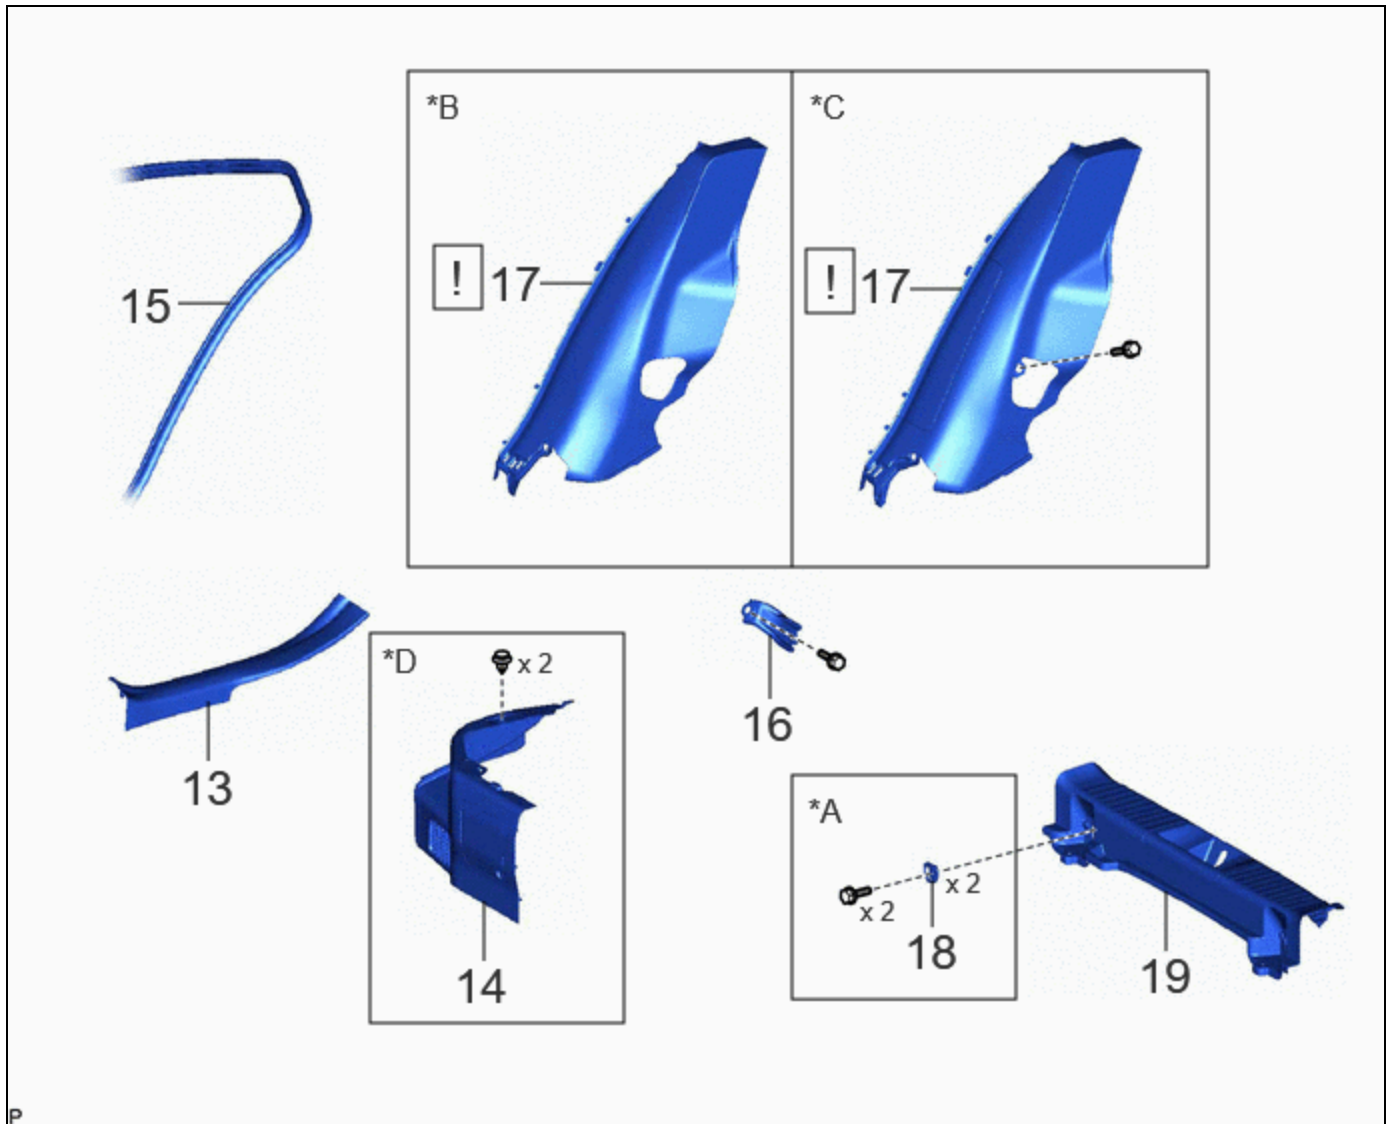


*A	w/ Center Headrest	-	-
•	Non-reusable part	-	-



PROCEDURE		PART NAME CODE			
13	REAR DOOR SCUFF PLATE INSIDE RH	67917F	-	-	-
14	REAR UNDER SIDE COVER RH	76973E	-	-	-
15	REAR DOOR OPENING TRIM WEATHERSTRIP RH	62331A	-	-	-
16	REAR SEATBACK HINGE SUB-ASSEMBLY RH	71303C	-	-	-
17	REAR SEAT SIDE GARNISH RH	62551F	INFO	-	-
18	LUGGAGE HOLD BELT STRIKER ASSEMBLY	58460D	-	-	-
19	REAR DECK TRIM COVER	64716D	-	-	-

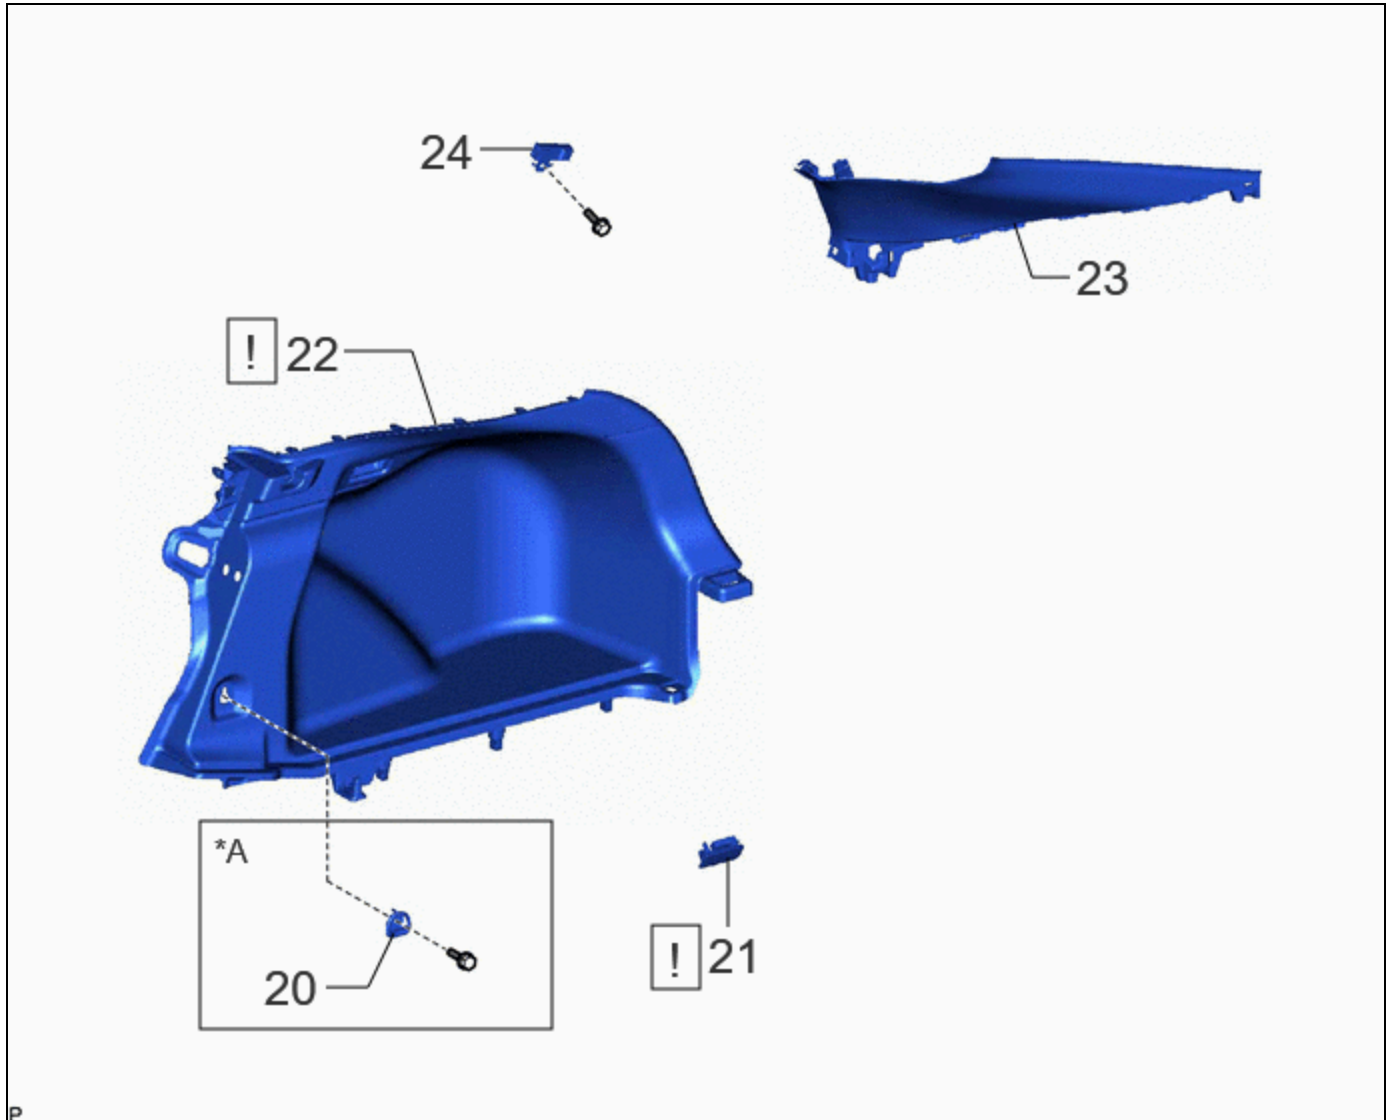*A	for Rear Side	*B	w/o Rear Seat Side Airbag
*C	w/ Rear Seat Side Airbag	*D	for HEV Model




	PROCEDURE	PART NAME CODE			
20	LUGGAGE HOLD BELT STRIKER ASSEMBLY	58460D	-	-	-
21	NO. 1 LUGGAGE COMPARTMENT LIGHT ASSEMBLY	81330	INFO	-	-
22	DECK TRIM SIDE PANEL ASSEMBLY RH	64730B	INFO	-	-
23	ROOF SIDE INNER GARNISH ASSEMBLY RH	62470A	-	-	-
24	NO. 1 AMPLIFIER ANTENNA ASSEMBLY	86300B	-	-	-

*A	for RH Side	-	-
----	-------------	---	---

PROCEDURE

1. PRECAUTION (w/ Rear Seat Side Airbag)

	<p>NOTICE:</p> <p>After the ignition switch is turned off, there may be a waiting time before disconnecting the negative (-) auxiliary battery terminal.</p> <p>Click here INFO</p>
---	--

2. REMOVE TONNEAU COVER ASSEMBLY

Click here [INFO](#)

3. REMOVE DECK BOARD ASSEMBLY

Click here [INFO](#)

4. REMOVE DECK FLOOR BOX RH

Click here [INFO](#)

5. REMOVE BATTERY SERVICE HOLE COVER ASSEMBLY (for M20A-FXS)

Click here [INFO](#)

6. DISCONNECT CABLE FROM NEGATIVE AUXILIARY BATTERY TERMINAL (w/ Rear Seat Side Airbag)

(a) for M20A-FXS:

Click here [INFO](#)

(b) for 2ZR-FXE:

Click here [INFO](#)


7. REMOVE REAR SEAT HEADREST ASSEMBLY

Click here [INFO](#)


8. REMOVE REAR SEAT CENTER HEADREST ASSEMBLY (w/ Center Headrest)

Click here [INFO](#)


9. DISCONNECT REAR CENTER SEAT OUTER BELT ASSEMBLY

	Click here INFO
---	---------------------------------

10. REMOVE REAR SEATBACK ASSEMBLY RH

	Click here INFO
---	---------------------------------

11. REMOVE REAR SEAT CUSHION ASSEMBLY

	Click here INFO
---	---------------------------------

12. REMOVE REAR SEAT CUSHION LOCK HOOK

Click here [INFO](#)

13. REMOVE REAR DOOR SCUFF PLATE INSIDE RH

(a) Use the same procedure as for the LH side.

Click here [INFO](#)

14. REMOVE REAR UNDER SIDE COVER RH (for HEV Model)

(a) Use the same procedure as for the LH side.

Click here [INFO](#)

15. DISCONNECT REAR DOOR OPENING TRIM WEATHERSTRIP RH

(a) Use the same procedure as for the LH side.


Click here [INFO](#)

16. REMOVE REAR SEATBACK HINGE SUB-ASSEMBLY RH

(a) Use the same procedure as for the LH side.

Click here [INFO](#)

17. REMOVE REAR SEAT SIDE GARNISH RH

	<ul style="list-style-type: none">• Use the same procedure as for the LH side. Click here INFO
---	--

18. REMOVE LUGGAGE HOLD BELT STRIKER ASSEMBLY (for Rear Side)

Click here [INFO](#)

19. REMOVE REAR DECK TRIM COVER

Click here [INFO](#)

20. REMOVE LUGGAGE HOLD BELT STRIKER ASSEMBLY (for RH Side)

(a) Use the same procedure as for the LH side.

Click here [INFO](#)

21. REMOVE NO. 1 LUGGAGE COMPARTMENT LIGHT ASSEMBLY



Click here [INFO](#)

22. REMOVE DECK TRIM SIDE PANEL ASSEMBLY RH



- Use the same procedure as for the LH side.

Click here [INFO](#)

23. REMOVE ROOF SIDE INNER GARNISH ASSEMBLY RH

(a) Use the same procedure as for the LH side.

Click here [INFO](#)

24. REMOVE NO. 1 AMPLIFIER ANTENNA ASSEMBLY

