Last Modified: 12-04-2024	6.11:8.1.0	Doc ID: RM100000002BLBZ	
Model Year Start: 2023	Model: Prius Prime	Prod Date Range: [03/2023 -]
Title: AUDIO / VIDEO: MICROPHONE: REMOVAL; 2023 - 2024 MY Prius Prius Prime [03/2023 -]

REMOVAL

CAUTION / NOTICE / HINT

The necessary procedures (adjustment, calibration, initialization or registration) that must be performed after parts are removed and installed, or replaced during telephone microphone assembly removal/installation are shown below.

Necessary Procedures After Parts Removed/Installed/Replaced

REPLACED PART OR PERFORMED PROCEDURE	NECESSARY PROCEDURE	EFFECT/INOPERATIVE FUNCTION WHEN NECESSARY PROCEDURE NOT PERFORMED	LINK
w/ Occupant Classification System: Front passenger seat*	Zero point calibration (Occupant classification system)	 Occupant Classification System Passenger airbag ON/OFF indicator Airbag System (Front passenger side) Seat Belt Warning System (Front passenger) 	INFO

^{*:} Even when not replacing the part, it is necessary to perform the specified necessary procedures after installation.

CAUTION:

Be sure to read Precaution thoroughly before servicing.



Click here NFO



NOTICE:

After the ignition switch is turned off, there may be a waiting time before disconnecting the negative (-) auxiliary battery terminal.

Click here NFO



HINT:

When the cable is disconnected / reconnected to the auxiliary battery terminal, systems temporarily stop operating. However, each system has a function that completes learning the first time the system is used.

Learning completes when vehicle is driven

EFFECT/INOPERATIVE FUNCTION WHEN NECESSARY PROCEDURES ARE NOT PERFORMED	NECESSARY PROCEDURES	LINK
Front Camera System	Drive the vehicle straight ahead at 35 km/h (22 mph) or more for 5 seconds or more.	


Learning completes when vehicle is operated normally

*1: w/o Power Back Door System

NECESSARY PROCEDURES	
Perform door unlock operation with door control switch o electrical key transmitter sub-assembly switch.	
Reset back door close position	
After the ignition switch is turned to ON, the servo motor standard position is recognized.	
	Reset back door close position for HEV Model: After the ignition switch is turned to ON, the servo motor standard position is recognized. for PHEV Model: After the ignition switch is turned to ON, the servo motor and expansion valve standard position is

CAUTION / NOTICE / HINT

COMPONENTS (REMOVAL)

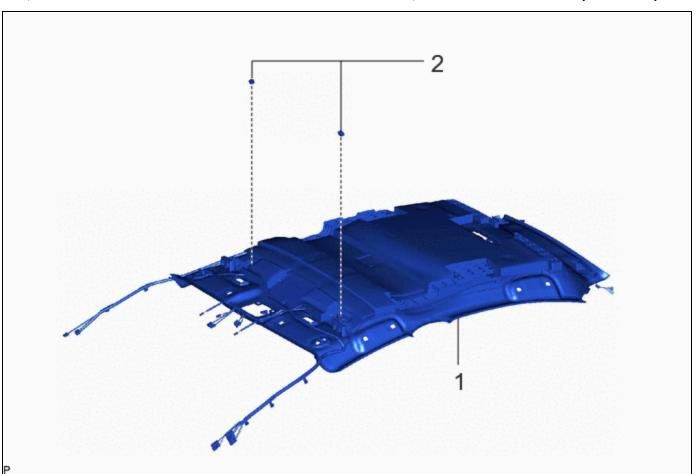

PROCEDURE	PART NAME CODE	!		
1 ROOF HEADLINING ASSEMBLY	-	-	-	-
2 TELEPHONE MICROPHONE ASSEMBLY	86730A	-	-	-

PROCEDURE

1. REMOVE ROOF HEADLINING ASSEMBLY

Click here NFO

2. REMOVE TELEPHONE MICROPHONE ASSEMBLY

HINT:

Use the same procedure for the RH side and LH side.

