

Last Modified: 12-04-2024	6.11:8.1.0	Doc ID: RM100000002BZ6X
Model Year Start: 2023	Model: Prius Prime	Prod Date Range: [03/2023 -]
Title: AUDIO / VIDEO: NOISE FILTER: REMOVAL; 2023 - 2024 MY Prius Prius Prime [03/2023 -]		

REMOVAL

CAUTION / NOTICE / HINT

The necessary procedures (adjustment, calibration, initialization or registration) that must be performed after parts are removed and installed, or replaced during radio setting condenser removal/installation are shown below.

CAUTION:

Be sure to read Precaution thoroughly before servicing.



[Click here](#) INFO

NOTICE:

- After the ignition switch is turned off, there may be a waiting time before disconnecting the negative (-) auxiliary battery terminal.

[Click here](#) INFO

HINT:

- When the cable is disconnected / reconnected to the auxiliary battery terminal, systems temporarily stop operating. However, each system has a function that completes learning the first time the system is used.

Learning completes when vehicle is driven

EFFECT/INOPERATIVE FUNCTION WHEN NECESSARY PROCEDURES ARE NOT PERFORMED	NECESSARY PROCEDURES	LINK
Front Camera System	Drive the vehicle straight ahead at 35 km/h (22 mph) or more for 5 seconds or more.	INFO


Learning completes when vehicle is operated normally

*1: w/o Power Back Door System




EFFECT/INOPERATIVE FUNCTION WHEN NECESSARY PROCEDURES ARE NOT PERFORMED	NECESSARY PROCEDURES	LINK
Power Door Lock Control System*1 <ul style="list-style-type: none"> Back door opener 	Perform door unlock operation with door control switch or electrical key transmitter sub-assembly switch.	INFO
Power Back Door System*2	Reset back door close position	INFO
Air Conditioning System	for HEV Model: After the ignition switch is turned to ON, the servo motor standard position is recognized. for PHEV Model: After the ignition switch is turned to ON, the servo motor and expansion valve standard position is recognized.	-
*1: w/o Power Back Door System *2: w/ Power Back Door System		

CAUTION / NOTICE / HINT

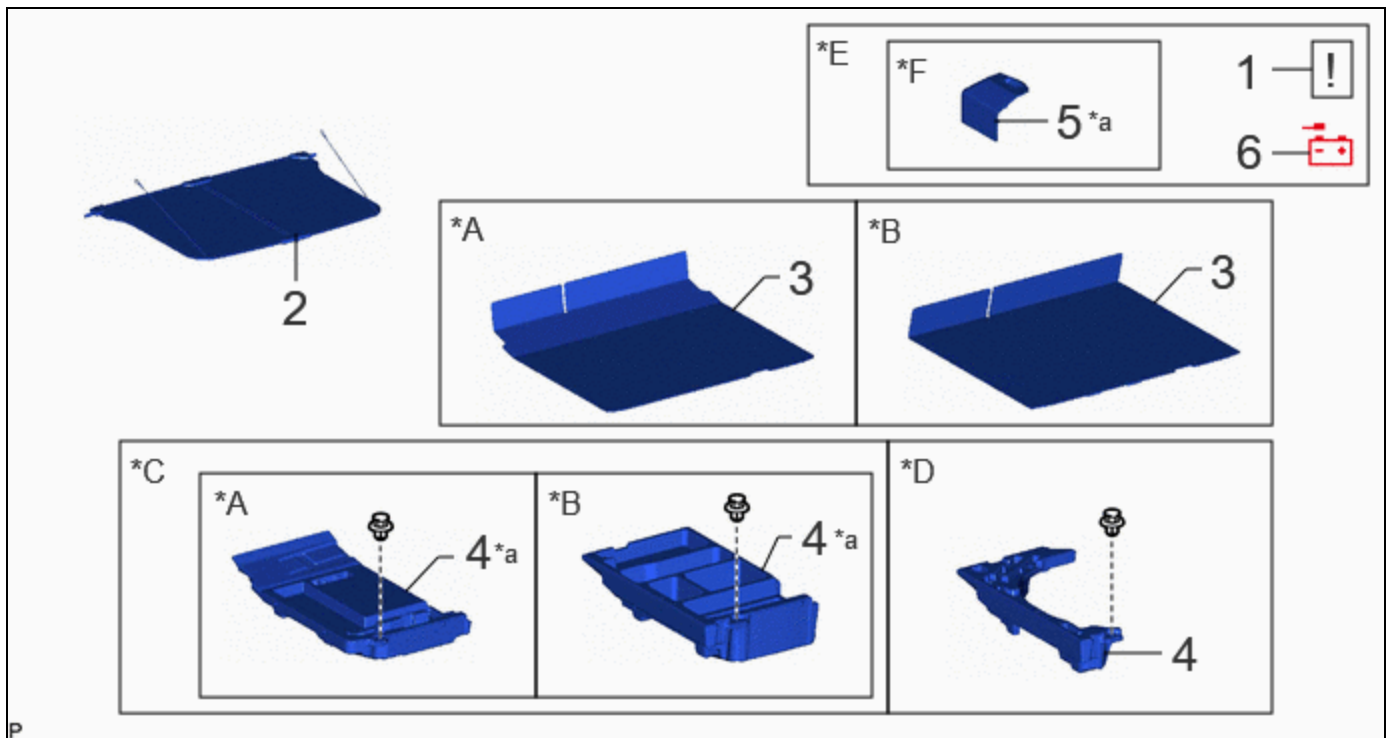
COMPONENTS (REMOVAL)






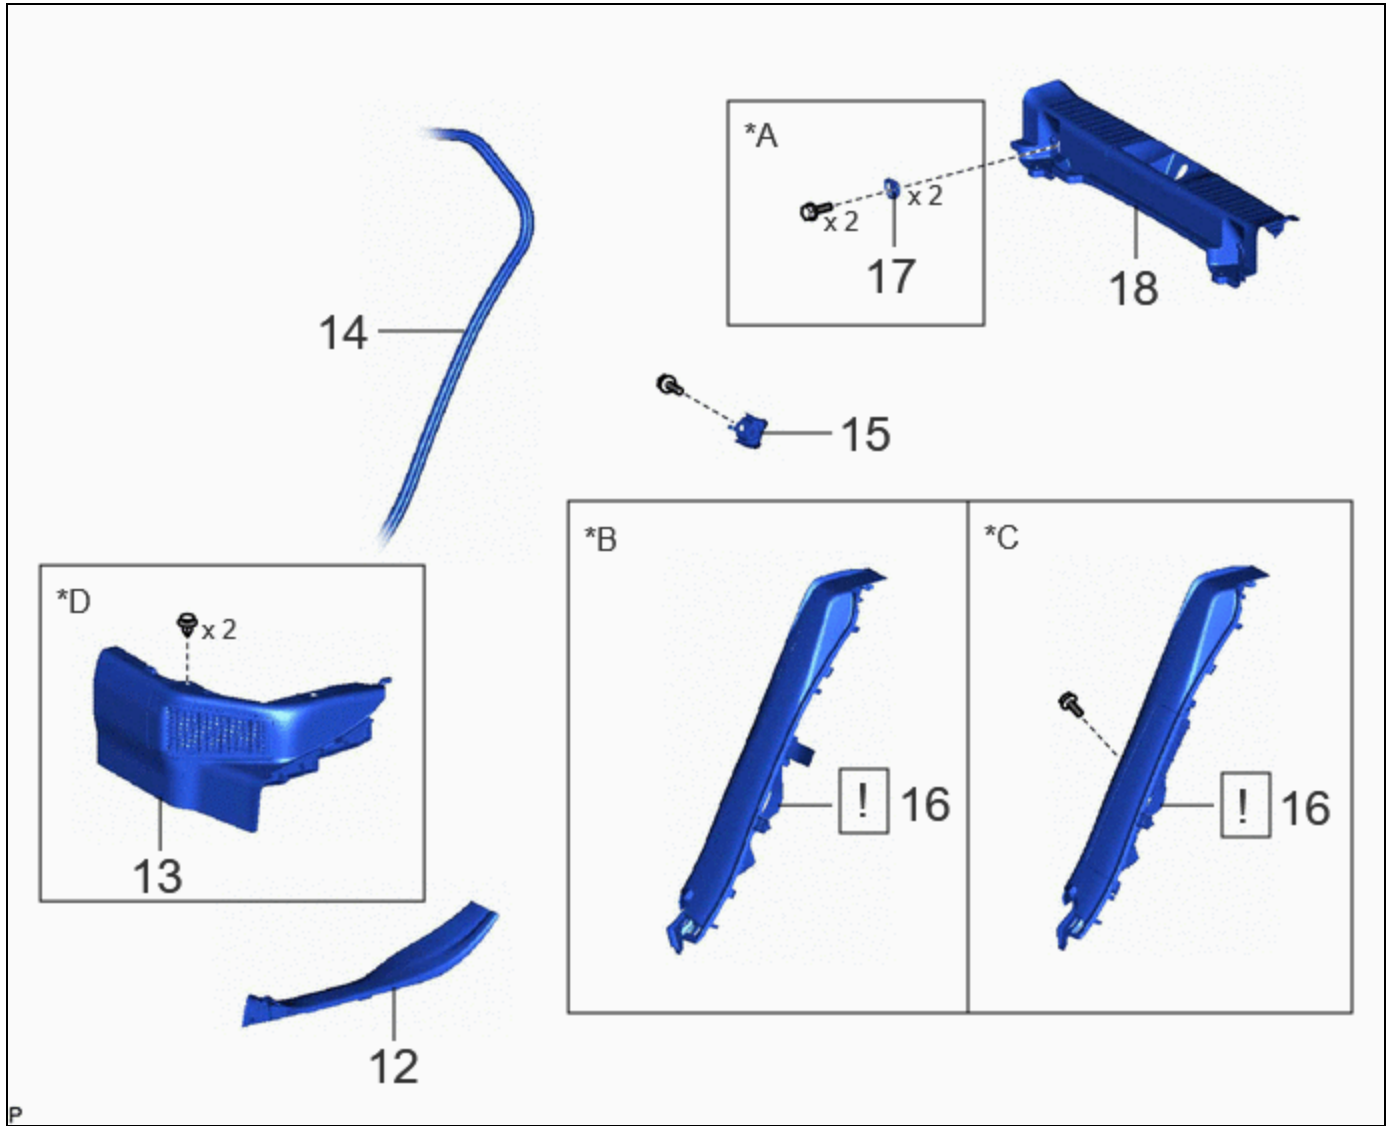
PROCEDURE	PART NAME CODE			
1 PRECAUTION	-	INFO	-	-
2 TONNEAU COVER ASSEMBLY	64910J	-	-	-

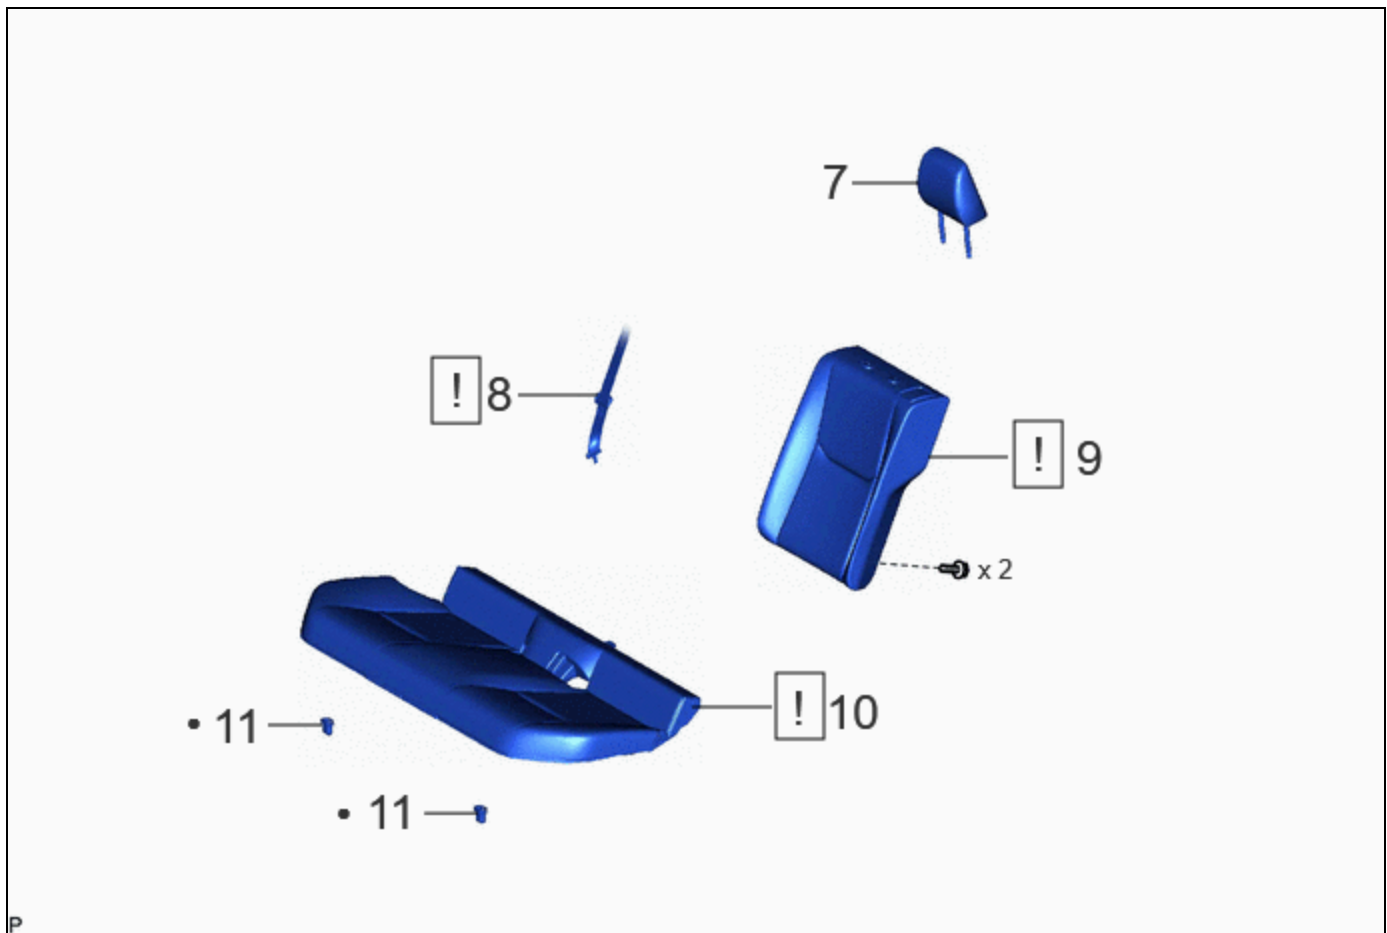


	PROCEDURE	PART NAME CODE			
3	DECK BOARD ASSEMBLY	58410B	-	-	-
4	DECK FLOOR BOX LH	64997	-	-	-
5	BATTERY SERVICE HOLE COVER ASSEMBLY	58440	-	-	-
6	DISCONNECT CABLE FROM NEGATIVE AUXILIARY BATTERY TERMINAL	-	-	-	-




*A	for Type A	*B	for Type B
*C	w/o Spare Tire	*D	w/ Spare Tire
*E	w/ Rear Seat Side Airbag	*F	for M20A-FXS
*a	<p>HINT: As the illustration shown is an example, the actual details may differ.</p>	-	-




PROCEDURE		PART NAME CODE			
7	REAR SEAT HEADREST ASSEMBLY	71940A	-	-	-
8	REAR CENTER SEAT OUTER BELT ASSEMBLY	73350C	INFO	-	-
9	REAR SEATBACK ASSEMBLY LH	-	INFO	-	-
10	REAR SEAT CUSHION ASSEMBLY	-	INFO	-	-
11	REAR SEAT CUSHION LOCK HOOK	72693	-	-	-






PROCEDURE		PART NAME CODE			
12	REAR DOOR SCUFF PLATE INSIDE LH	67918F	-	-	-
13	REAR UNDER SIDE COVER LH	76974E	-	-	-

PROCEDURE		PART NAME CODE			
14	REAR DOOR OPENING TRIM WEATHERSTRIP LH	62332A	-	-	-
15	REAR SEATBACK HINGE SUB-ASSEMBLY LH	71304C	-	-	-
16	REAR SEAT SIDE GARNISH LH	62552F	INFO	-	-
17	LUGGAGE HOLD BELT STRIKER ASSEMBLY	58460D	-	-	-
18	REAR DECK TRIM COVER	64716D	-	-	-

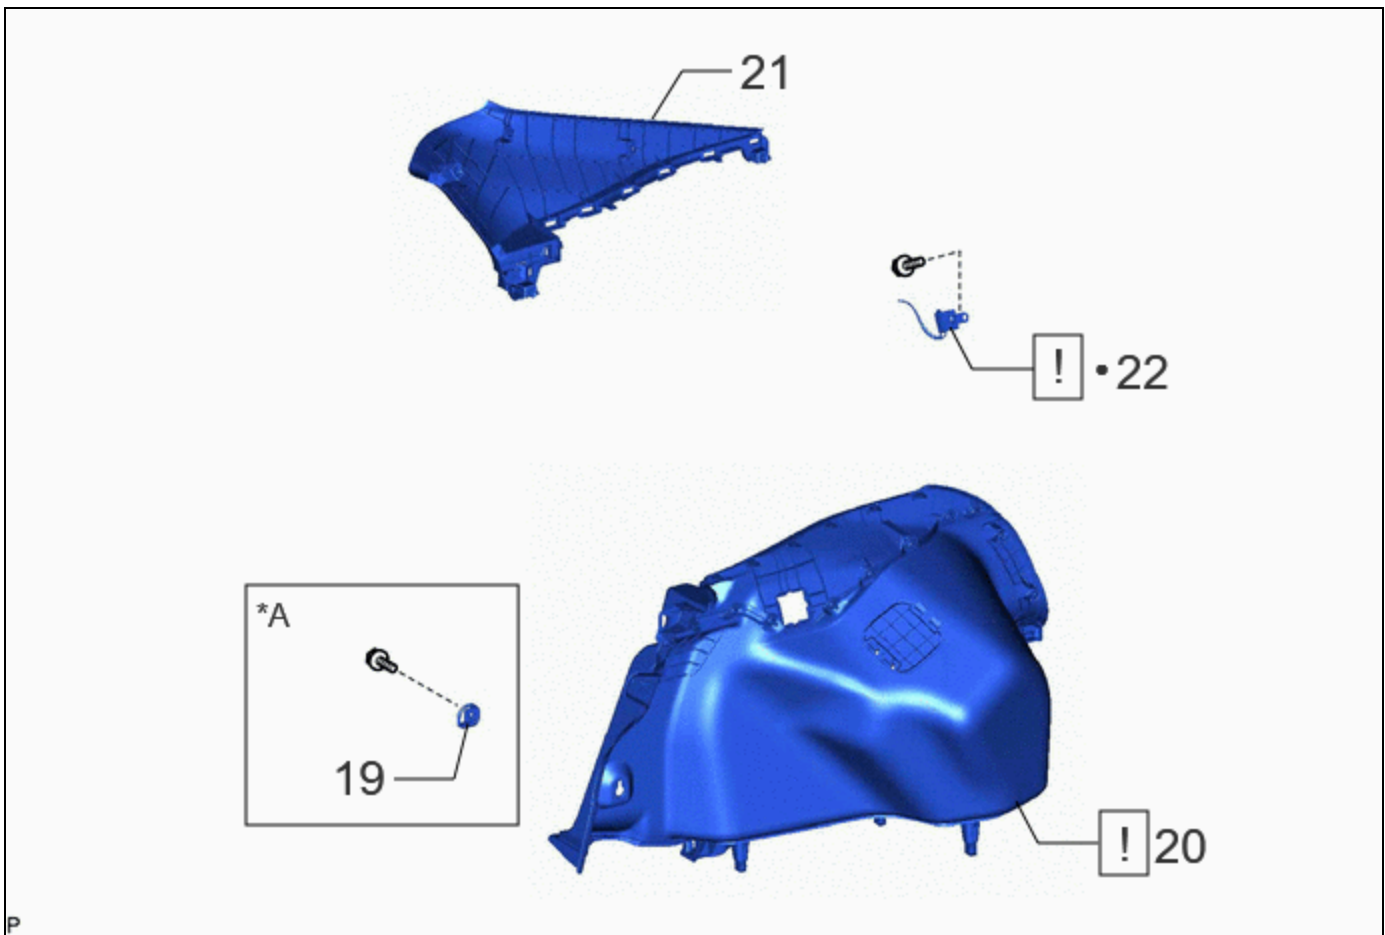*A	for Rear Side	*B	w/o Rear Seat Side Airbag
*C	w/ Rear Seat Side Airbag	*D	for HEV Model




PROCEDURE		PART NAME CODE			
19	LUGGAGE HOLD BELT STRIKER ASSEMBLY	58460D	-	-	-
20	DECK TRIM SIDE PANEL ASSEMBLY LH	64740C	INFO	-	-
21	ROOF SIDE INNER GARNISH ASSEMBLY LH	62480A	-	-	-
22	RADIO SETTING CONDENSER	86011A	INFO	-	-

*A	for LH Side	•	Non-reusable part
----	-------------	---	-------------------

PROCEDURE

1. PRECAUTION (w/ Rear Seat Side Airbag)

	<p>NOTICE:</p> <p>After the ignition switch is turned off, there may be a waiting time before disconnecting the negative (-) auxiliary battery terminal.</p> <p>Click here INFO</p>
---	--

2. REMOVE TONNEAU COVER ASSEMBLY

Click here [INFO](#)

3. REMOVE DECK BOARD ASSEMBLY

Click here [INFO](#)

4. REMOVE DECK FLOOR BOX LH

Click here [INFO](#)

5. REMOVE BATTERY SERVICE HOLE COVER ASSEMBLY (w/ Rear Seat Side Airbag)

(a) for M20A-FXS:

Click here [INFO](#)

6. DISCONNECT CABLE FROM NEGATIVE AUXILIARY BATTERY TERMINAL (w/ Rear Seat Side Airbag)

(a) for M20A-FXS:

Click here [INFO](#)


(b) for 2ZR-FXE:

Click here [INFO](#)


7. REMOVE REAR SEAT HEADREST ASSEMBLY

Click here [INFO](#)

8. DISCONNECT REAR CENTER SEAT OUTER BELT ASSEMBLY

	Click here INFO
---	---------------------------------

9. REMOVE REAR SEATBACK ASSEMBLY LH

	Click here INFO
---	---------------------------------

10. REMOVE REAR SEAT CUSHION ASSEMBLY

Click here [INFO](#)

11. REMOVE REAR SEAT CUSHION LOCK HOOK

Click here [INFO](#)

12. REMOVE REAR DOOR SCUFF PLATE INSIDE LH

Click here [INFO](#)

13. REMOVE REAR UNDER SIDE COVER LH (for HEV Model)

Click here [INFO](#)

14. DISCONNECT REAR DOOR OPENING TRIM WEATHERSTRIP LH

Click here [INFO](#)

15. REMOVE REAR SEATBACK HINGE SUB-ASSEMBLY LH

Click here [INFO](#)

16. REMOVE REAR SEAT SIDE GARNISH LH

Click here [INFO](#)

17. REMOVE LUGGAGE HOLD BELT STRIKER ASSEMBLY (for Rear Side)

Click here [INFO](#)

18. REMOVE REAR DECK TRIM COVER

Click here [INFO](#)

19. REMOVE LUGGAGE HOLD BELT STRIKER ASSEMBLY (for LH Side)

Click here [INFO](#)


20. REMOVE DECK TRIM SIDE PANEL ASSEMBLY LH


Click here [INFO](#)

21. REMOVE ROOF SIDE INNER GARNISH ASSEMBLY LH


Click here [INFO](#)


22. REMOVE RADIO SETTING CONDENSER

	<p>NOTICE:</p> <p>When a terminal cover is removed, the radio setting condenser must be replaced because the terminal covers and condenser are supplied as a set.</p>
---	--

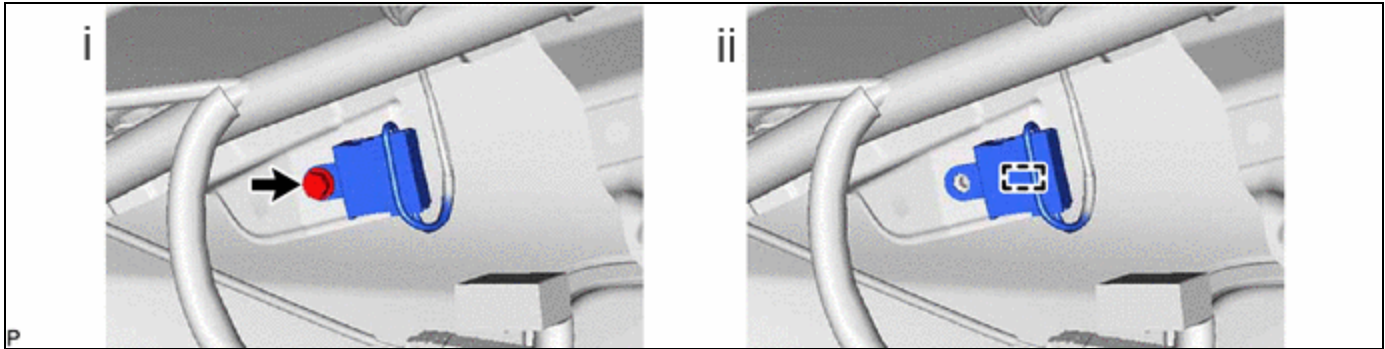

- (1) Remove the bolt.
- (2) Disengage the clamp and disconnect the radio setting condenser with wire harness from the vehicle body.

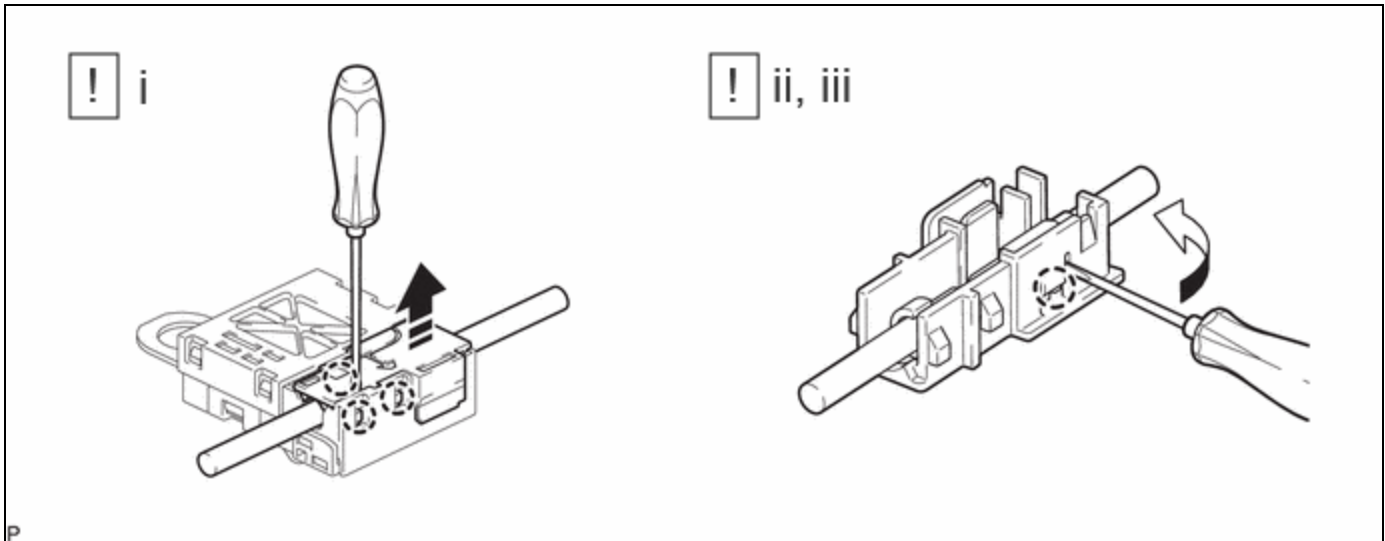

	Remove in this Direction	-	-
---	--------------------------	---	---

- (1) Using a screwdriver, disengage the 3 claws and remove the terminal cover with wire harness from the condenser as shown in the illustration.
- (2) Using a screwdriver, bend back and break off the claw as shown in the illustration.
- (3) Remove the terminal cover from the wire harness.

NOTICE:

- Make sure to hold the crimped side of the terminal when disconnecting the wire harness from the terminal cover.
- Make sure not to bend the exposed wire when disconnecting the wire harness from the terminal cover.
- Check for deformation of the terminal after the wire harness has been removed from the terminal cover.

