

<b>Last Modified:</b> 12-04-2024	6.11:8.1.0	<b>Doc ID:</b> RM10000002BKFH
<b>Model Year Start:</b> 2023	<b>Model:</b> Prius Prime	<b>Prod Date Range:</b> [03/2023 - ]
<b>Title:</b> AUDIO / VIDEO: STEREO COMPONENT AMPLIFIER: REMOVAL; 2023 - 2024 MY Prius Prius Prime [03/2023 - ]		

## REMOVAL

### CAUTION / NOTICE / HINT

The necessary procedures (adjustment, calibration, initialization or registration) that must be performed after parts are removed and installed, or replaced during stereo component amplifier assembly removal/installation are shown below.

**CAUTION:**

Be sure to read Precaution thoroughly before servicing.



Click here [INFO](#)

**NOTICE:**

- After the ignition switch is turned off, there may be a waiting time before disconnecting the negative (-) auxiliary battery terminal.

Click here [INFO](#)

- To prevent the key from being locked in the vehicle, make sure to enter e-latch inspection mode and enable the manual release handle before disconnecting the cable from the negative (-) auxiliary battery terminal.

Click here [INFO](#)

**HINT:**

- When the cable is disconnected / reconnected to the auxiliary battery terminal, systems temporarily stop operating. However, each system has a function that completes learning the first time the system is used.

**Learning completes when vehicle is driven**

EFFECT/INOPERATIVE FUNCTION WHEN NECESSARY PROCEDURES ARE NOT PERFORMED	NECESSARY PROCEDURES	LINK
Front Camera System	Drive the vehicle straight ahead at 35 km/h (22 mph) or more for 5 seconds or more.	<a href="#">INFO</a>




**Learning completes when vehicle is operated normally**


EFFECT/INOPERATIVE FUNCTION WHEN NECESSARY PROCEDURES ARE NOT PERFORMED	NECESSARY PROCEDURES	LINK
Power Door Lock Control System*1 ◦ Back door opener	Perform door unlock operation with door control switch or electrical key transmitter sub-assembly switch.	<a href="#">INFO</a>
Power Back Door System*2	Reset back door close position	<a href="#">INFO</a>
Air Conditioning System	<b>for HEV Model:</b> After the ignition switch is turned to ON, the servo motor standard position is recognized. <b>for PHEV Model:</b> After the ignition switch is turned to ON, the servo motor and expansion valve standard position is recognized.	-
*1: w/o Power Back Door System *2: w/ Power Back Door System		




## CAUTION / NOTICE / HINT


### COMPONENTS (REMOVAL)



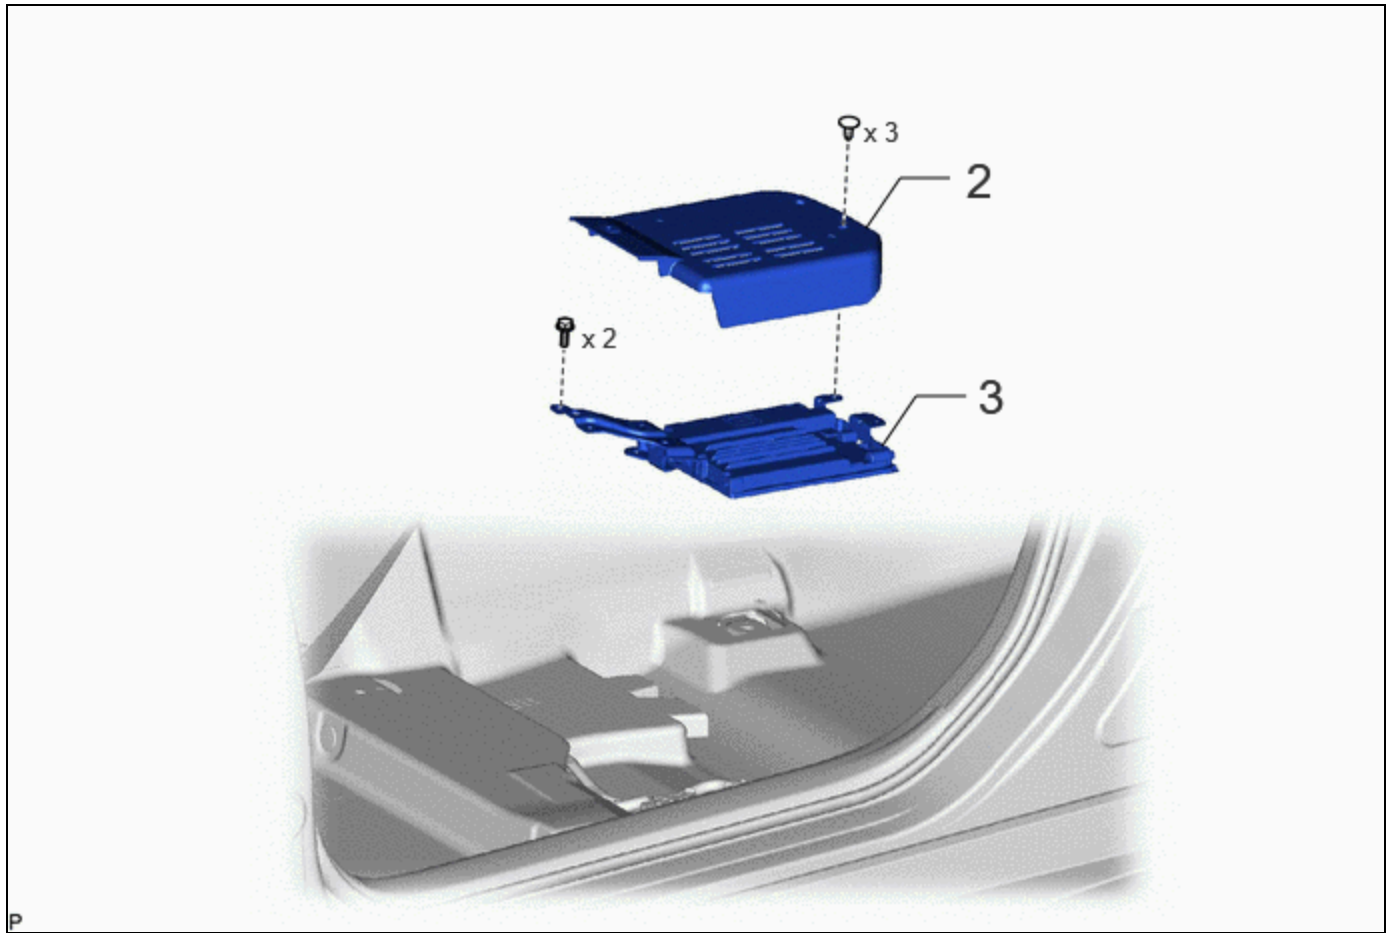


	PROCEDURE	PART NAME CODE			
1	FRONT SEAT ASSEMBLY	-	-	-	-

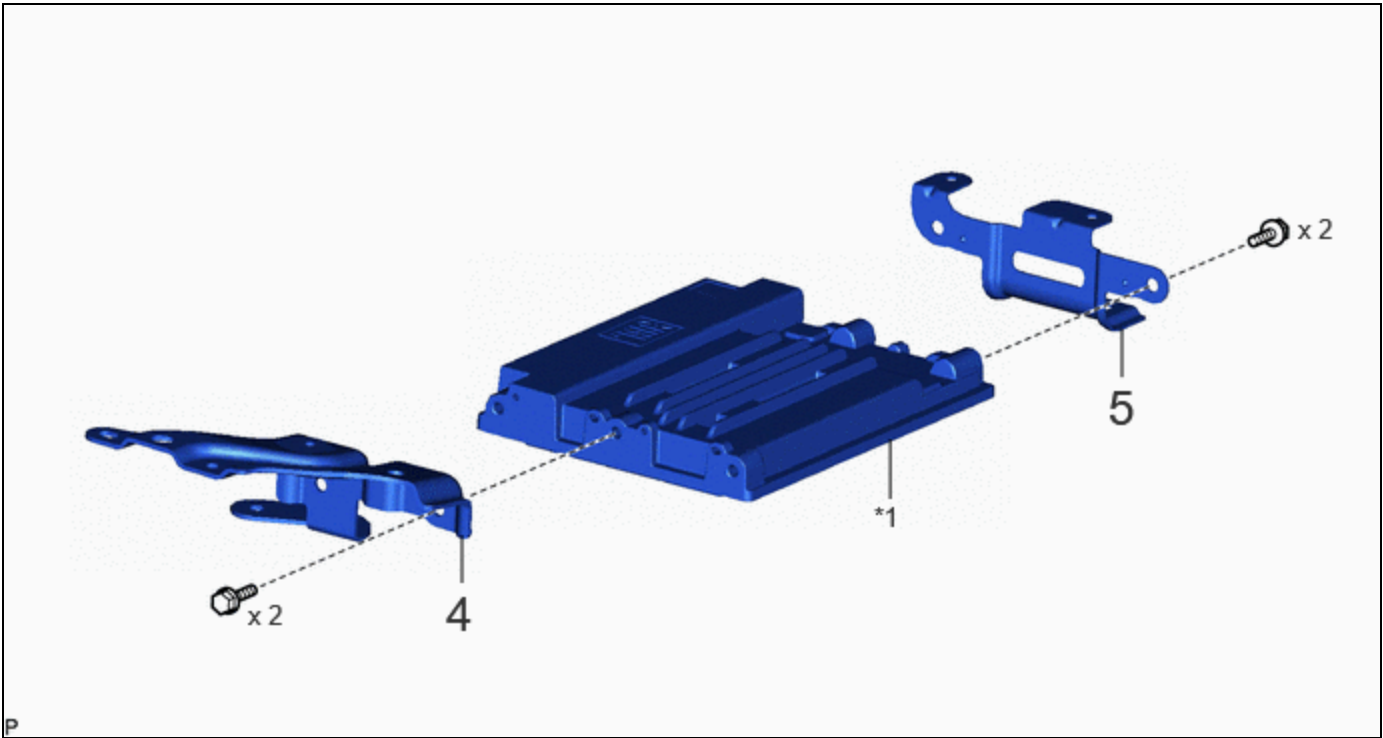

	PROCEDURE	PART NAME CODE			
2	AUDIO AMPLIFIER COVER	86183D	-	-	-
3	STEREO COMPONENT AMPLIFIER ASSEMBLY WITH BRACKET	-	-	-	-



PROCEDURE		PART NAME CODE			
4	NO. 1 AMPLIFIER BRACKET	86285	-	-	-
5	NO. 2 AMPLIFIER BRACKET	86285F	-	-	-

*1	STEREO COMPONENT AMPLIFIER ASSEMBLY	-	-
----	-------------------------------------	---	---

## PROCEDURE

### 1. REMOVE FRONT SEAT ASSEMBLY


for Manual Seat:

Click here [INFO](#)


for Power Seat:

Click here [INFO](#)


### 2. REMOVE AUDIO AMPLIFIER COVER

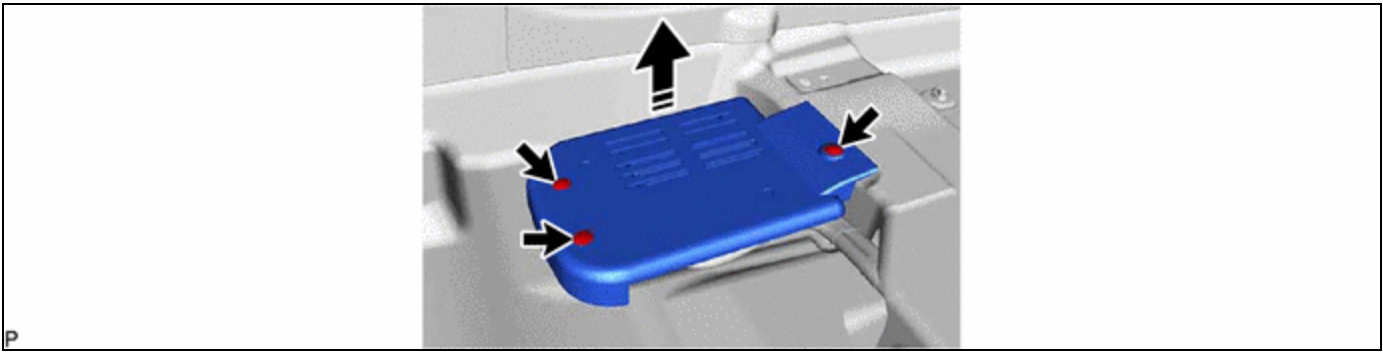

**3. REMOVE STEREO COMPONENT AMPLIFIER ASSEMBLY WITH BRACKET**

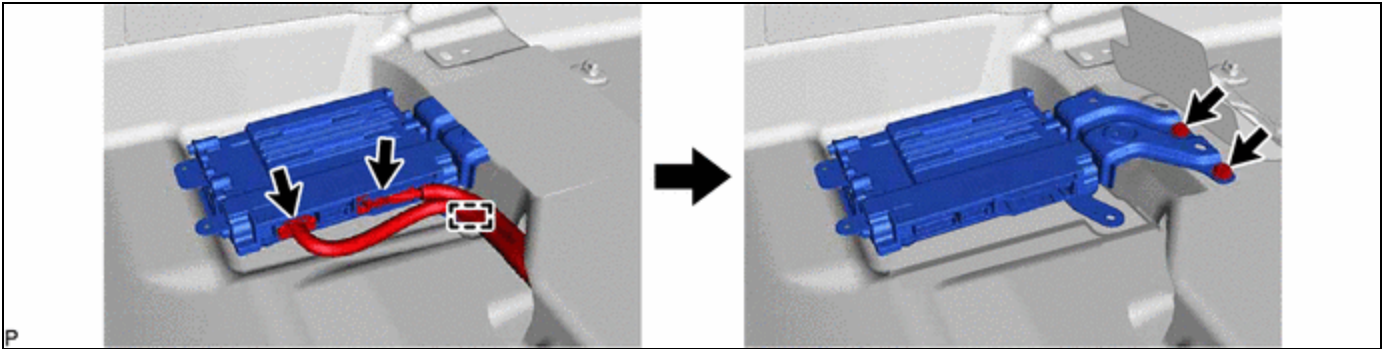

**4. REMOVE NO. 1 AMPLIFIER BRACKET**

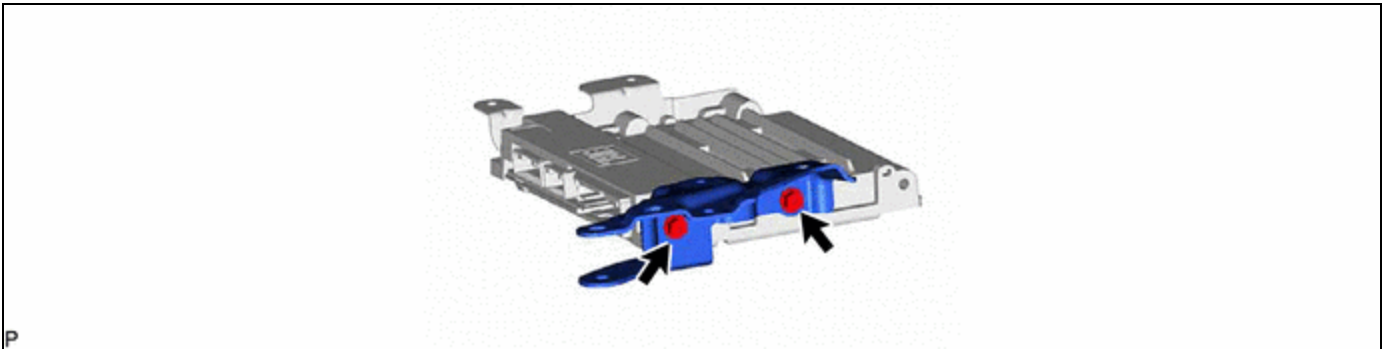

**5. REMOVE NO. 2 AMPLIFIER BRACKET**

