

<b>Last Modified:</b> 12-04-2024	6.11:8.1.0	<b>Doc ID:</b> RM100000028U0R
<b>Model Year Start:</b> 2023	<b>Model:</b> Prius Prime	<b>Prod Date Range:</b> [12/2022 - ]
<b>Title:</b> CELLULAR COMMUNICATION: SAFETY CONNECT SYSTEM: DIAGNOSIS SYSTEM; 2023 - 2024 MY Prius Prius Prime [12/2022 - ]		

## DIAGNOSIS SYSTEM

### DESCRIPTION

- (a) The DCM (telematics transceiver) control the vehicle safety connect system functions. Safety connect system data and Diagnostic Trouble Codes (DTCs) can be read through the vehicle Data Link Connector 3 (DLC3). In some cases, a malfunction may be occurring in the safety connect system. When the system seems to be malfunctioning, use the GTS to check for malfunctions and perform repairs.

### CHECK DLC3

- (a) Check the DLC3.

Click here [INFO](#)

### INSPECT AUXILIARY BATTERY

- (a) Measure the auxiliary battery voltage with the ignition switch off.

Standard voltage:

11 to 14 V

#### HINT:

If the voltage is below 11 V, recharge or replace the auxiliary battery.

### CHECK INDICATOR

- (a) When a malfunction is detected in the safety connect system, the manual (SOS) switch red indicator on the manual (SOS) switch illuminates to inform the driver of the malfunction.

Click here [INFO](#)

