
Last Modified: 12-04-2024	6.11:8.1.0	<b>Doc ID:</b> RM1000000028TZM		
Model Year Start: 2023	Model: Prius Prime	Prod Date Range: [12/2022 -	]	
Title: GARAGE DOOR OPENER: GARAGE DOOR OPENER SYSTEM (for Digital Inner Mirror): TERMINALS OF ECU;				
2023 - 2024 MY Prius Prius Prime	e [12/2022 -       ]			

## **TERMINALS OF ECU**

## INNER REAR VIEW MIRROR ASSEMBLY (GARAGE DOOR OPENER)

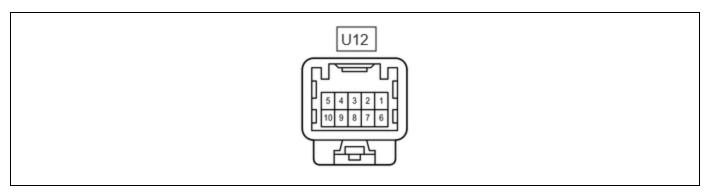

- (a) Disconnect the U12 inner rear view mirror assembly connector.
- (b) Measure the voltage and resistance according to the value(s) in the table below.

## HINT:

Measure the values on the wire harness side with the connector disconnected.

TERMINAL NO. (SYMBOL)	TERMINAL DESCRIPTION	CONDITION	SPECIFIED CONDITION
U12-1 (IG) - Body ground	IG power supply	Ignition switch off	Below 1 V
	10 power suppry	Ignition switch ON	11 to 14 V
U12-6 (+B) - Body ground	Auxiliary battery power supply	Ignition switch off	11 to 14 V
U12-2 (E) - Body ground	Ground	Always	Below 1 Ω



