

<b>Last Modified:</b> 12-04-2024	6.11:8.1.0	<b>Doc ID:</b> RM100000002917Y
<b>Model Year Start:</b> 2023	<b>Model:</b> Prius Prime	<b>Prod Date Range:</b> [12/2022 - ]
<b>Title:</b> PARK ASSIST / MONITORING: PANORAMIC VIEW MONITOR SYSTEM: UTILITY; 2023 - 2024 MY Prius Prius Prime [12/2022 - ]		

## UTILITY

### HINT:

- With "All Readiness", you can check whether or not the DTC judgment has been completed by using the GTS.
- You should check "All Readiness" after simulating malfunction symptoms or for validation after finishing repairs.

### ALL READINESS

(a) Clear the DTCs even if no DTCs are stored.

#### Chassis > Circumference Monitoring Camera Control Module > Clear DTCs

(b) Turn the ignition switch off and wait for 2 minutes or more.

(c) Turn the ignition switch to ON.

(d) Perform the DTC judgment driving pattern to run the DTC judgment.

#### Chassis > Circumference Monitoring Camera Control Module > Utility



(e) Input the DTCs to be confirmed.

(f) Check the DTC judgment result.

GTS DISPLAY	DESCRIPTION
Normal	<ul style="list-style-type: none"> <li>• DTC judgment completed</li> <li>• System normal</li> </ul>
Abnormal	<ul style="list-style-type: none"> <li>• DTC judgment completed</li> <li>• System abnormal</li> </ul>
Incomplete	<ul style="list-style-type: none"> <li>• DTC judgment not completed</li> <li>• Perform the driving pattern</li> </ul>

If the judgment result shows Incomplete, perform the DTC confirmation driving pattern again.


### CLEAR IMAGE INFORMATION

### HINT:

This utility is used to clear the image information stored in the parking assist ECU.

(a) Perform "Image Information Clear " according to the display on the GTS.

#### Chassis > Circumference Monitoring Camera Control Module > Utility

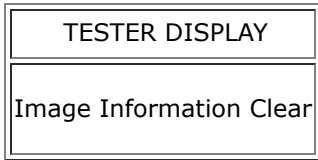

### IMAGE RECORDING SETTING

**HINT:**

This utility is used to enable/disable image recording.

(a) Perform "Image Recording Setting" according to the display on the GTS.

**Chassis > Circumference Monitoring Camera Control Module > Utility**

