

Last Modified: 12-04-2024	6.11:8.1.0	Doc ID: RM100000028VRQ
Model Year Start: 2023	Model: Prius Prime	Prod Date Range: [12/2022 -]
Title: PARK ASSIST / MONITORING: PARKING SUPPORT BRAKE SYSTEM: CUSTOMIZE PARAMETERS; 2023 - 2024 MY Prius Prius Prime [12/2022 -]		

CUSTOMIZE PARAMETERS

CUSTOMIZE PARKING SUPPORT BRAKE SYSTEM

(a) Customizing with the GTS.

NOTICE:

- When the customer requests a change in a function, first make sure that the function can be customized.
- Be sure to make a note of the current settings before customizing.
- When troubleshooting a function, first make sure that the function is set to the default setting.

Clearance Warning

TESTER DISPLAY	DESCRIPTION	DEFAULT	SETTING	ECU
PKSB (O) Function	Parking support brake (static objects) function setting	ON	\$00:ON,\$01:OFF	Clearance warning ECU assembly
PKSB (O) Target Stopping Distance	Stop distance status of parking support brake (static objects) function	Far	\$00:Close,\$01:Far	Clearance warning ECU assembly
PKSB Switch State Stored	Setting of the parking support brake system main switch status memory	Stored	\$00:Stored,\$01:Not Stored	Clearance warning ECU assembly
PCS Cooperate Function	Setting of the pre-collision system cooperate function	ON	\$00:ON,\$01:OFF	Clearance warning ECU assembly
PKSB (V) Function	Parking support brake (rear crossing vehicles) function setting	ON	\$00:ON,\$01:OFF	Clearance warning ECU assembly
PKSB (V) Operation Timing Setting	Displays the operation timing setting of the parking support brake (rear crossing vehicles) function	Standard	\$00:Late,\$01:Standard	Clearance warning ECU assembly

TESTER DISPLAY	DESCRIPTION	DEFAULT	SETTING	ECU
PKSB (V) Sensitivity	Displays the sensitivity setting of the parking support brake (rear crossing vehicles) function	Standard	\$00:Standard,\$01:Low	Clearance warning ECU assembly
PKSB (P) Function	Setting of the parking support brake (rear pedestrians) function	ON	\$00:ON,\$01:OFF	Clearance warning ECU assembly
PKSB (P) Target Stopping Distance	Parking support brake (rear pedestrians) function target stopping distance	Normal	\$00:Close,\$01:Normal	Clearance warning ECU assembly
PKSB (P) Width Adjustment (Y Axis)	Setting of the sensitivity of the parking support brake (rear pedestrians) function	Normal	\$00:Narrow,\$01:Normal	Clearance warning ECU assembly
Clearance Warning Buzzer Volume	Sets the volume of the clearance warning buzzer	Volume2	\$01:Volume1,\$02:Volume2,\$03:Volume3	Clearance warning ECU assembly
PKSB (O) Main Switch	Switches the PKSB (O) function on and off.	ON	\$00:OFF,\$01:ON	Clearance warning ECU assembly

Driver 1

TESTER DISPLAY	DESCRIPTION	DEFAULT	SETTING	ECU
Clearance Warning Buzzer Volume	Sets the volume of the clearance warning buzzer	Volume2	\$01:Volume1,\$02:Volume2,\$03:Volume3	Clearance warning ECU assembly
PKSA (O) Main Switch	Intuitive parking assist system main switch	ON	\$00:OFF,\$01:ON	Clearance warning ECU assembly
PKSB (O) Main Switch	Parking support brake system main switch	ON	\$00:OFF,\$01:ON	Clearance warning ECU assembly

Driver 2

TESTER DISPLAY	DESCRIPTION	DEFAULT	SETTING	ECU
Clearance Warning Buzzer Volume	Sets the volume of the clearance warning buzzer	Volume2	\$01:Volume1,\$02:Volume2,\$03:Volume3	Clearance warning ECU assembly
PKSA (O) Main Switch	Intuitive parking assist system main switch	ON	\$00:OFF,\$01:ON	Clearance warning ECU assembly
PKSB (O) Main Switch	Parking support brake system main switch	ON	\$00:OFF,\$01:ON	Clearance warning ECU assembly

Driver 3

TESTER DISPLAY	DESCRIPTION	DEFAULT	SETTING	ECU
Clearance Warning Buzzer Volume	Sets the volume of the clearance warning buzzer	Volume2	\$01:Volume1,\$02:Volume2,\$03:Volume3	Clearance warning ECU assembly
PKSA (O) Main Switch	Intuitive parking assist system main switch	ON	\$00:OFF,\$01:ON	Clearance warning ECU assembly
PKSB (O) Main Switch	Parking support brake system main switch	ON	\$00:OFF,\$01:ON	Clearance warning ECU assembly

Guest

TESTER DISPLAY	DESCRIPTION	DEFAULT	SETTING	ECU
Clearance Warning Buzzer Volume	Sets the volume of the clearance warning buzzer	Volume2	\$01:Volume1,\$02:Volume2,\$03:Volume3	Clearance warning ECU assembly
PKSA (O) Main Switch	Intuitive parking assist system main switch	ON	\$00:OFF,\$01:ON	Clearance warning ECU assembly

TESTER DISPLAY	DESCRIPTION	DEFAULT	SETTING	ECU
PKSB (O) Main Switch	Parking support brake system main switch	ON	\$00:OFF,\$01:ON	Clearance warning ECU assembly

(b) Customizing with multi-information display

NOTICE:

- When the customer requests a change in a function, first make sure that the function can be customized.
- Be sure to make a note of the current settings before customizing.
- When troubleshooting a function, first make sure that the function is set to the default setting.

(1) Select the setting by referring to the table below.

Parking Support Brake

DISPLAY	DESCRIPTION	DEFAULT	SETTING	ECU
Parking Support Brake function	Setting of ON/OFF of the parking support brake system	ON	ON/OFF	Clearance warning ECU assembly

