

Last Modified: 12-04-2024	6.11:8.1.0	Doc ID: RM100000028VRT
Model Year Start: 2023	Model: Prius Prime	Prod Date Range: [12/2022 -]
Title: PARK ASSIST / MONITORING: PARKING SUPPORT BRAKE SYSTEM: UTILITY; 2023 - 2024 MY Prius Prius Prime [12/2022 -]		

UTILITY

ALL READINESS

HINT:

- With "All Readiness", you can check whether or not the DTC judgment has been completed by using the GTS.
- You should check "All Readiness" after simulating malfunction symptoms or for validation after finishing repairs.

(a) Clear the DTCs even if no DTCs are stored.

Body Electrical > Clearance Warning > Clear DTCs

(b) Turn the ignition switch off and wait for 2 minutes or more.

(c) Turn the ignition switch to ON.

(d) Perform the DTC judgment driving pattern to run the DTC judgment.

(e) Enter the following menus: Body Electrical / Clearance Warning / Utility / All Readiness.

Body Electrical > Clearance Warning > Utility

TESTER DISPLAY
All Readiness

(f) Input the DTCs to be confirmed.

(g) Check the DTC judgment result.

GTS DISPLAY	DESCRIPTION
Normal	<ul style="list-style-type: none"> • DTC judgment completed • System normal
Abnormal	<ul style="list-style-type: none"> • DTC judgment completed • System abnormal
Incomplete	<ul style="list-style-type: none"> • DTC judgment not completed • Perform the driving pattern

If the judgment result shows Incomplete, perform the DTC confirmation driving pattern again.

(h) Turn the ignition switch off.

