

Last Modified: 12-04-2024	6.11:8.1.0	Doc ID: RM1000000028U03
Model Year Start: 2023	Model: Prius Prime	Prod Date Range: [12/2022 -]
Title: TELEMATICS: TELEMATICS SYSTEM: DATA LIST / ACTIVE TEST; 2023 - 2024 MY Prius Prius Prime [12/2022 -]		

DATA LIST / ACTIVE TEST

NOTICE:

In the table below, the values listed under "Normal Condition" are reference values. Do not depend solely on these reference values when deciding whether a part is faulty or not.

DATA LIST

HINT:

Using the GTS to read the Data List allows the values or states of switches, sensors, actuators and other items to be read without removing any parts. This non-intrusive inspection can be very useful because intermittent conditions or signals may be discovered before parts or wiring is disturbed. Reading the Data List information early in troubleshooting is one way to save diagnostic time.

(a) According to the display on the GTS, read the "Data List".

Body Electrical > Telematics > Data List

TESTER DISPLAY	MEASUREMENT ITEM	RANGE	NORMAL CONDITION	DIAGNOSTIC NOTE
Total Distance Traveled	Total distance traveled	Min.: 0, Max.: 16777215	-	-
Total Distance Traveled - Unit	Total distance traveled	-, km or mile	-	-
IMEI	IMEI of DCM (telematics transceiver)	15 digits	-	-
Software Version High	Software version of DCM (telematics transceiver) (10 digits from left)	10 digits	-	-
Software Version Low	Software version of DCM (telematics transceiver) (10 digits from right)	10 digits	-	-
MSISDN	MSISDN of DCM (telematics transceiver)	16 digits	-	-
PLMN(MCC)	MCC of DCM (telematics transceiver)	3 digits	-	-

TESTER DISPLAY	MEASUREMENT ITEM	RANGE	NORMAL CONDITION	DIAGNOSTIC NOTE
PLMN(MNC)	MNC of DCM (telematics transceiver)	3 digits	-	-
ICCID(High)	ICCID of DCM (telematics transceiver) (10 digits from left)	10 digits	-	-
ICCID(Low)	ICCID of DCM (telematics transceiver) (10 digits from right)	10 digits	-	-
Communication Status with TSC	Communication status with Service Center	Incomplete or Complete	Complete	-
Telematics Activation Status	DCM (telematics transceiver) activation status	Shipping or Active	Shipping: Not activated Active: Activated	-
Information Collection via Ethernet	Display "Information Connection via Ethernet" function enabled/disabled status	Disable or Enable	Disable: Following function disabled Enable: Following function enabled	-
Information Collection via CAN	Display "Information Collection via CAN" function enabled/disabled status	Disable or Enable	Disable: Following function disabled Enable: Following function enabled	-
Remote Service Function	Display "Remote Service" function enabled/disabled status	Disable or Enable	Disable: Following function disabled Enable: Following function enabled	-
Vehicle State Notification	Display "Vehicle State Notification" function enabled/disabled status	Disable or Enable	Disable: Following function disabled Enable: Following function enabled	-
IP Remote Detected DTC	Display "IP Remote Detected DTC" function enabled/disabled	Disable or Enable	Disable: Following function	-

TESTER DISPLAY	MEASUREMENT ITEM	RANGE	NORMAL CONDITION	DIAGNOSTIC NOTE
	status		disabled Enable: Following function enabled	
IP Remote FFD	Display "IP Remote FFD" function enabled/disabled status	Disable or Enable	Disable: Following function disabled Enable: Following function enabled	-
IP Remote Monitoring	Display "IP Remote Monitoring" function enabled/disabled status	Disable or Enable	Disable: Following function disabled Enable: Following function enabled	-
Remote Warning	Display "Remote Warning" function enabled/disabled status	Disable or Enable	Disable: Following function disabled Enable: Following function enabled	-
Remote Detected DTC	Display "Remote Detected DTC" function enabled/disabled status	Disable or Enable	Disable: Following function disabled Enable: Following function enabled	-
Remote FFD	Display "IP Remote FFD" function enabled/disabled status	Disable or Enable	Disable: Following function disabled Enable: Following function enabled	-
Remote Detect DTC	Display "Remote Detect DTC" function enabled/disabled status	Disable or Enable	Disable: Following function disabled Enable: Following function enabled	-
Remote Confirmation	Display "Remote Confirmation" function enabled/disabled status	Disable or Enable	Disable: Following function disabled Enable: Following function enabled	-

TESTER DISPLAY	MEASUREMENT ITEM	RANGE	NORMAL CONDITION	DIAGNOSTIC NOTE
Remote Precaution	Display "Remote Precaution" function enabled/disabled status	Disable or Enable	Disable: Following function disabled Enable: Following function enabled	-
Remote Monitoring	Display "Remote Monitoring" function enabled/disabled status	Disable or Enable	Disable: Following function disabled Enable: Following function enabled	-
Remote Diagnostics Recorder	Display "Remote Diagnostics Recorder" function enabled/disabled status	Disable or Enable	Disable: Following function disabled Enable: Following function enabled	-
Remote Operation	Display "Remote Operation" function enabled/disabled status	Disable or Enable	Disable: Following function disabled Enable: Following function enabled	-
Alarm Notification	Display "Alarm Notification" function enabled/disabled status	Disable or Enable	Disable: Following function disabled Enable: Following function enabled	-
Remote Immobilizer	Display "Remote Immobilizer" function enabled/disabled status	Disable or Enable	Disable: Following function disabled Enable: Following function enabled	-
Remote Vehicle Location	Display "Remote Vehicle Location" function enabled/disabled status	Disable or Enable	Disable: Following function disabled Enable: Following function enabled	-
Remote Navigation Display	Display "Remote Navigation" function enabled/disabled status	Disable or Enable	Disable: Following function disabled	-

TESTER DISPLAY	MEASUREMENT ITEM	RANGE	NORMAL CONDITION	DIAGNOSTIC NOTE
			Enable: Following function enabled	
Remote Vehicle Control History	Display "Remote Vehicle Control History" function enabled/disabled status	Disable or Enable	Disable: Following function disabled Enable: Following function enabled	-
Maintenance Message	Display "Maintenance Message" function enabled/disabled status	Disable or Enable	Disable: Following function disabled Enable: Following function enabled	-
Remote A/C by Smart Key	Display "Remote A/C by Smart Key" function enabled/disabled status	Disable or Enable	Disable: Following function disabled Enable: Following function enabled	-
eConnect State Notification	Display "eConnect State Notification" function enabled/disabled status	Disable or Enable	Disable: Following function disabled Enable: Following function enabled	-
eConnect Event Notification	Display "eConnect Event Notification" function enabled/disabled status	Disable or Enable	Disable: Following function disabled Enable: Following function enabled	-
eConnect State Change Notification	Display "eConnect State Change Notification" function enabled/disabled status	Disable or Enable	Disable: Following function disabled Enable: Following function enabled	-
eConnect Remote Operation	Display "eConnect Remote Operation" function enabled/disabled status	Disable or Enable	Disable: Following function disabled Enable: Following function enabled	-

TESTER DISPLAY	MEASUREMENT ITEM	RANGE	NORMAL CONDITION	DIAGNOSTIC NOTE
Driving Trip Data Notification	Display "Driving Trip Data Notification" function enabled/disabled status	Disable or Enable	Disable: Following function disabled Enable: Following function enabled	-
eConnect Remote Vehicle Location	Display "eConnect Remote Vehicle Location" function enabled/disabled status	Disable or Enable	Disable: Following function disabled Enable: Following function enabled	-
Remote Engine Starter Registration Status	Remote Engine Starter registration status	Not Registered or Registered	-	-
Remote Door Lock Function	Remote Door Lock Function registration status	Not Registered, Registered or Registration Not Required	-	-
Communication Remote Engine Starter	Display "Remote Engine Starter" function enabled/disabled status	Not Available or Available	-	-
Communication Pausing State	Display "Communication Pausing" function enabled/disabled status	Cancel Pausing or Pausing	-	-

