

Last Modified: 12-04-2024	6.11:8.1.0	Doc ID: RM1000000028TZZ
Model Year Start: 2023	Model: Prius Prime	Prod Date Range: [12/2022 -]
Title: TELEMATICS: TELEMATICS SYSTEM: UTILITY; 2023 - 2024 MY Prius Prius Prime [12/2022 -]		

UTILITY

CANCEL COMMUNICATION FUNCTION PAUSING

HINT:

This function is used to cancel communication function pausing mode.

(a) Enter the following menus: Body Electrical / Telematics / Utility / Cancel Communication Function Pausing.

Body Electrical > Telematics > Utility

TESTER DISPLAY
Cancel Communication Function Pausing

ALL READINESS

HINT:

- With "All Readiness", you can check whether or not the DTC judgment has been completed by using the GTS.
- You should check "All Readiness" after simulating malfunction symptoms or for validation after finishing repairs.

(a) Clear the DTCs even if no DTCs are stored.

Body Electrical > Telematics > Clear DTCs

(b) Turn the ignition switch off and wait for 2 minutes or more.

(c) Turn the ignition switch to ON.

(d) Perform the DTC judgment driving pattern to run the DTC judgment.

(e) Enter the following menus: Body Electrical / Telematics / Utility / All Readiness.

Body Electrical > Telematics > Utility

TESTER DISPLAY
All Readiness

(f) Input the DTC to be confirmed.

(g) Check the DTC judgment result.

GTS DISPLAY	DESCRIPTION
Normal	<ul style="list-style-type: none"> • DTC judgment completed • System normal
Abnormal	<ul style="list-style-type: none"> • DTC judgment completed • System abnormal
If the judgment result shows Incomplete or N/A, perform the DTC confirmation driving pattern again.	

GTS DISPLAY	DESCRIPTION
Incomplete	<ul style="list-style-type: none"> • DTC judgment not completed • Perform the driving pattern
N/A	<ul style="list-style-type: none"> • Unable to perform DTC judgment • Number of DTCs which do not fulfill DTC preconditions has reached ECU memory limit • Perform the driving pattern
If the judgment result shows Incomplete or N/A, perform the DTC confirmation driving pattern again.	

(h) Turn the ignition switch off.

HISTORY INFORMATION CLEAR

HINT:

This function is used to clear the history information of DCM (telematics transceiver).

(a) Enter the following menus: Body Electrical / Telematics / Utility / History Information Clear.

Body Electrical > Telematics > Utility

TESTER DISPLAY
History Information Clear

