

<b>Last Modified:</b> 12-04-2024	6.11:8.1.0	<b>Doc ID:</b> RM100000028P3W
<b>Model Year Start:</b> 2023	<b>Model:</b> Prius Prime	<b>Prod Date Range:</b> [12/2022 - ]
<b>Title:</b> PARKING BRAKE: ELECTRIC PARKING BRAKE SYSTEM: ON-VEHICLE INSPECTION; 2023 - 2024 MY Prius Prius Prime [12/2022 - ]		

## ON-VEHICLE INSPECTION

### PROCEDURE

#### 1. INSPECT PARKING BRAKE ACTUATOR ASSEMBLY

- (a) With the ignition switch ON and the wheels not contacting the ground, operate the electric parking brake switch assembly to check the condition of the rear wheels when the electric parking brake is operating and not operating.

#### OK:

ASSEMBLY STATUS	CONDITION OF REAR WHEELS
Lock	Rear wheels cannot be rotated
Release	Rear wheels can be rotated

- (b) Pull the electric parking brake switch assembly to the lock side for approximately 1 second and check that the parking brake indicator light (red) turns on.
- (c) Push the electric parking brake switch assembly to the release side for approximately 1 second and check that the parking brake indicator light (red) turns off.
- (d) At this time, check that the brake system warning light (yellow indicator) does not turn on.

