

Last Modified: 12-04-2024	6.11:8.1.0	Doc ID: RM100000028X15
Model Year Start: 2023	Model: Prius Prime	Prod Date Range: [12/2022 -]
Title: BRAKE CONTROL / DYNAMIC CONTROL SYSTEMS: ELECTRONICALLY CONTROLLED BRAKE SYSTEM: PROBLEM SYMPTOMS TABLE; 2023 - 2024 MY Prius Prius Prime [12/2022 -]		

PROBLEM SYMPTOMS TABLE

If there are no DTCs but the problem still occurs, check the suspected areas for each problem symptom in the order given in the table below and proceed to the relevant troubleshooting page.

HINT:

- Use the table below to help determine the cause of problem symptoms. If multiple suspected areas are listed, the potential causes of the symptoms are listed in order of probability in the "Suspected Area" column of the table. Check each symptom by checking the suspected areas in the order they are listed. Replace parts as necessary.
- Inspect the fuses and relays related to this system before inspecting the suspected areas below.

Electronically Controlled Brake System

SYMPTOM	SUSPECTED AREA	LINK
ABS warning light abnormal (Remains on)	Refer to Vehicle Control History (RoB)	INFO
	Refer to Meter / Gauge system	INFO
Brake system warning light (red indicator) abnormal (Remains on)	Refer to Vehicle Control History (RoB)	INFO
	Refer to Meter / Gauge system	INFO
Brake system warning light (yellow indicator) abnormal (Remains on)	Refer to Vehicle Control History (RoB)	INFO
	Refer to Meter / Gauge system	INFO
Brake hold standby indicator light abnormal	Refer to the procedure for "Brake Hold Standby Indicator Light Circuit"	INFO
Brake hold operated indicator light abnormal	Refer to Vehicle Control History (RoB)	INFO
	Refer to the procedure for "Brake Hold Operated Indicator Light Circuit"	INFO
Slip indicator light abnormal	Refer to Vehicle Control History (RoB)	INFO
	Refer to Meter / Gauge system	INFO

SYMPTOM	SUSPECTED AREA	LINK
TRAC does not operate	Refer to the procedure for "TRAC does not Operate"	INFO
Excessive brake pedal travel (No fluid leaks and no air in system)	Refer to the procedure for "Excessive Brake Pedal Travel (No Fluid Leaks and No Air in System)"	INFO
ABS does not operate	Refer to the procedure for "ABS does not Operate"	INFO
ABS operates before necessary when braking	Refer to the procedure for "ABS Operates Before Necessary When Braking"	INFO
VSC does not operate or VSC does not operate correctly	Refer to the procedure for "VSC does not Operate or VSC does not Operate Correctly"	INFO
Abnormal brake pedal response on first depression	Refer to the procedure for "Abnormal Brake Pedal Response on First Depression"	INFO
VSC OFF switch abnormal	Refer to the procedure for "VSC OFF Switch Circuit"	INFO
Meter buzzer abnormal	Refer to Meter / Gauge system	INFO

