


<b>Last Modified:</b> 12-04-2024	6.11:8.1.0	<b>Doc ID:</b> RM1000000029UW9
<b>Model Year Start:</b> 2023	<b>Model:</b> Prius	<b>Prod Date Range:</b> [12/2022 - ]
<b>Title:</b> M20A-FXS (EMISSION CONTROL): FUEL TANK PRESSURE SENSOR: INSTALLATION; 2023 - 2024 MY Prius [12/2022 - ]		

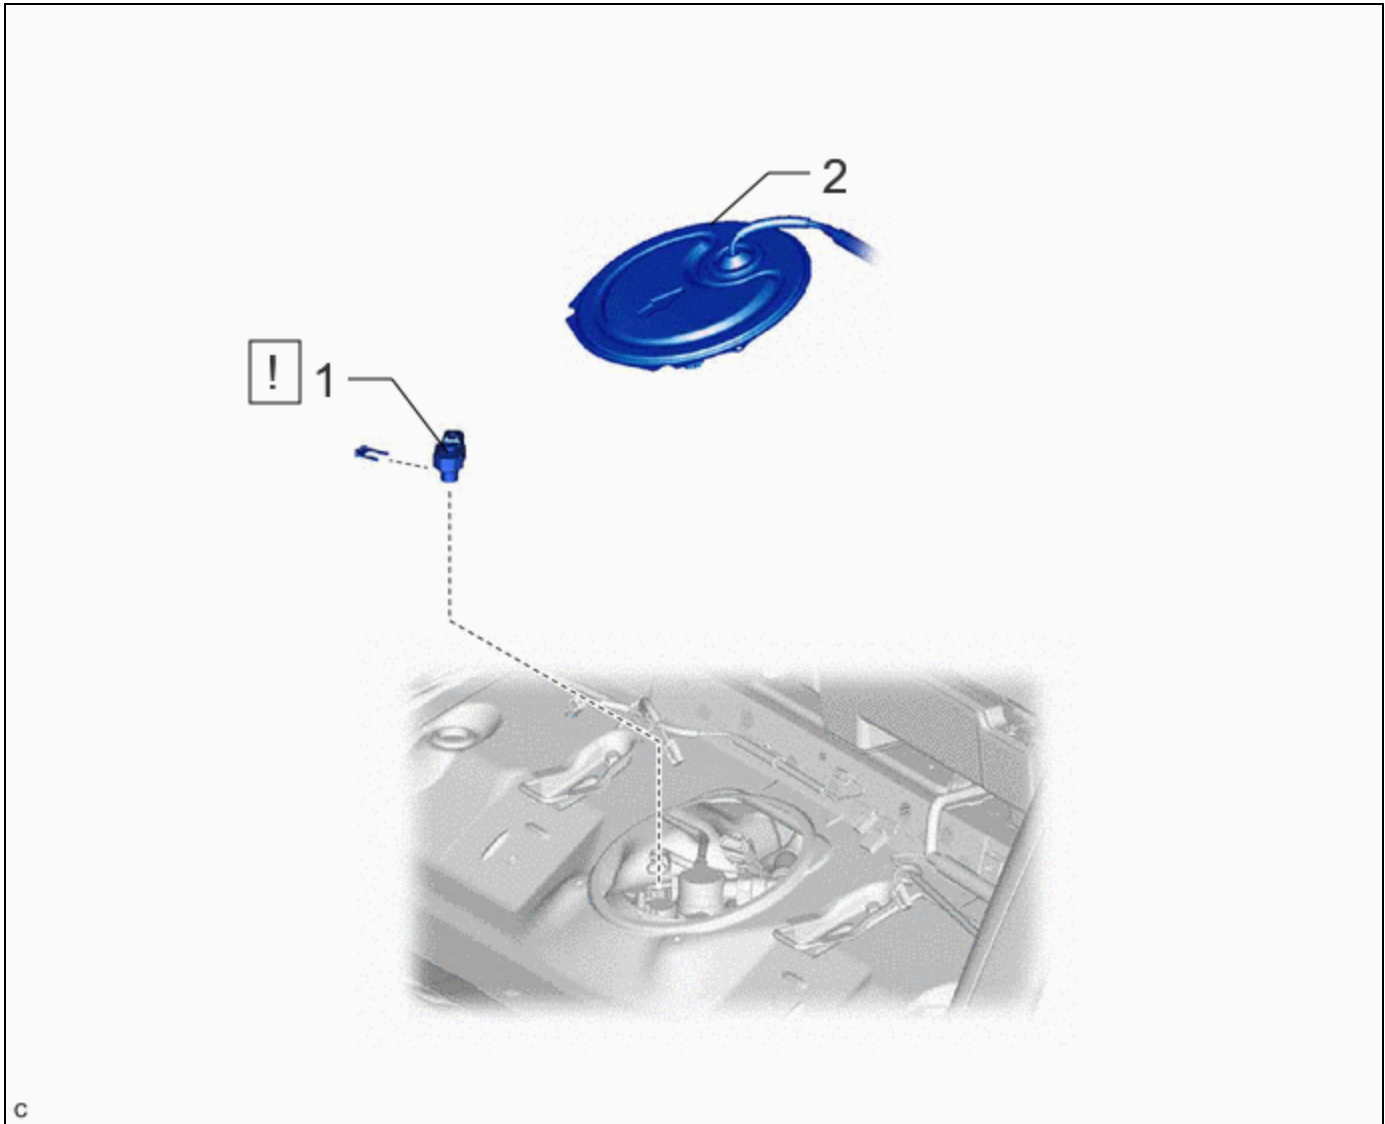


## INSTALLATION

### CAUTION / NOTICE / HINT

#### COMPONENTS (INSTALLATION)




	PROCEDURE	PART NAME CODE			
1	FUEL TANK PRESSURE SENSOR (VAPOR PRESSURE SENSOR)	89461	<a href="#">INFO</a>	-	-

PROCEDURE		PART NAME CODE			
2	REAR FLOOR SERVICE HOLE COVER	58325E	-	-	-


## PROCEDURE

### 1. INSTALL FUEL TANK PRESSURE SENSOR (VAPOR PRESSURE SENSOR)



**NOTICE:**

- Check that there are no scratches or foreign matter around the connecting parts of the fuel tank pressure sensor (vapor pressure sensor) and fuel suction plate sub-assembly before performing this work.
- Check that the fuel suction plate sub-assembly is securely inserted to the end of the fuel tank pressure sensor (vapor pressure sensor).
- Check that the tube joint clip is on the collar of the fuel tank pressure sensor (vapor pressure sensor).
- After installing the tube joint clip, check that the fuel tank pressure sensor (vapor pressure sensor) cannot be pulled out.

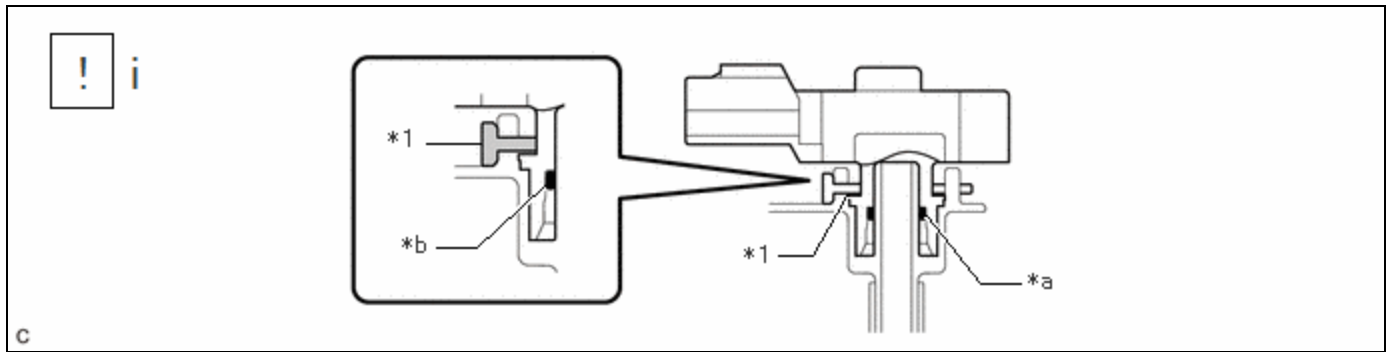

*1	Tube Joint Clip	-	-
*a	O-ring	*b	Collar

(1) Push the fuel tank pressure sensor (vapor pressure sensor) onto the fuel suction plate sub-assembly, then install the tube joint clip.

### 2. INSTALL REAR FLOOR SERVICE HOLE COVER

Click here [INFO](#)

