

<b>Last Modified:</b> 12-04-2024	6.11:8.1.0	<b>Doc ID:</b> RM100000029UVZ
<b>Model Year Start:</b> 2023	<b>Model:</b> Prius Prime	<b>Prod Date Range:</b> [12/2022 - ]
<b>Title:</b> M20A-FXS (EMISSION CONTROL): VACUUM SENSOR: REMOVAL; 2023 - 2024 MY Prius Prius Prime [12/2022 - ]		

## REMOVAL

### CAUTION / NOTICE / HINT


#### **NOTICE:**




This procedure includes the removal of small-head bolts. Refer to Small-Head Bolts of Basic Repair Hint to identify the small-head bolts.

Click here [INFO](#)

### CAUTION / NOTICE / HINT

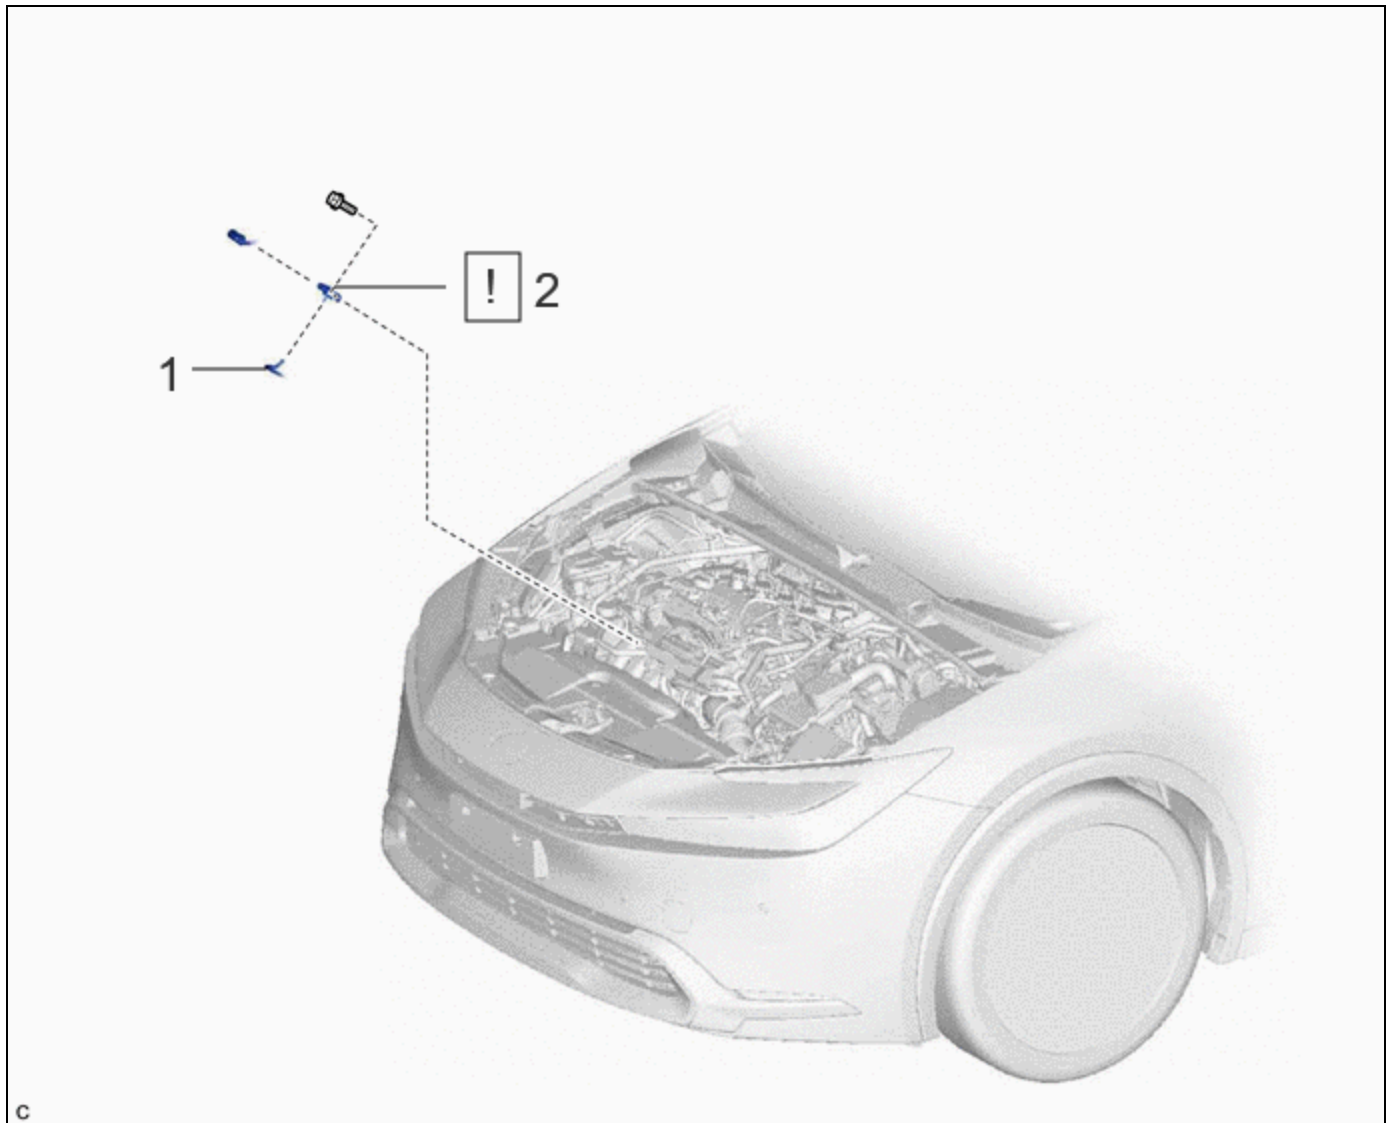
#### **COMPONENTS (REMOVAL)**




PROCEDURE		PART NAME CODE			
1	VACUUM HOSE	-	-	-	-
2	E.F.I. VACUUM SENSOR ASSEMBLY (MANIFOLD ABSOLUTE PRESSURE SENSOR)	89421	<span style="background-color: #0070C0; color: white; padding: 2px;">INFO</span>	-	-

## PROCEDURE

### 1. SEPARATE VACUUM HOSE

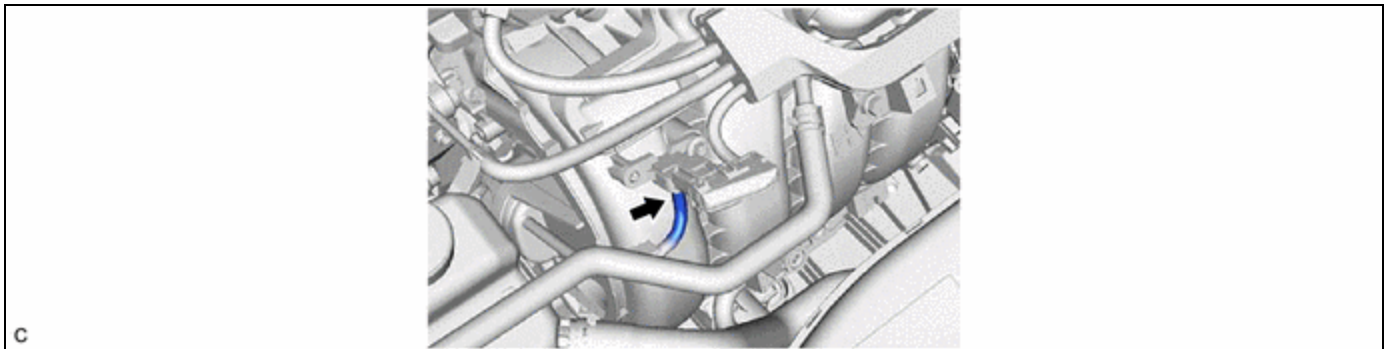

### 2. REMOVE E.F.I. VACUUM SENSOR ASSEMBLY (MANIFOLD ABSOLUTE PRESSURE SENSOR)

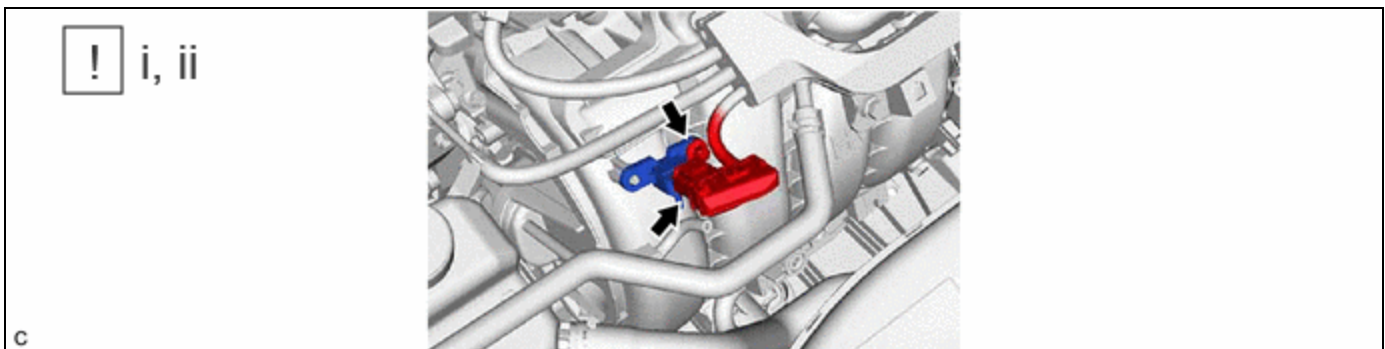

- (1) Disconnect the E.F.I. vacuum sensor assembly (manifold absolute pressure sensor) connector.
- (2) Using an 8 mm socket wrench, remove the bolt and E.F.I. vacuum sensor assembly (manifold absolute pressure sensor) from the intake manifold.

