

<b>Last Modified:</b> 12-04-2024	6.11:8.1.0	<b>Doc ID:</b> RM1000000029ZLL
<b>Model Year Start:</b> 2023	<b>Model:</b> Prius Prime	<b>Prod Date Range:</b> [12/2022 - ]
<b>Title:</b> M20A-FXS (ENGINE CONTROL): KNOCK SENSOR: INSPECTION; 2023 - 2024 MY Prius Prius Prime [12/2022 - ]		

## INSPECTION

## PROCEDURE


### 1. INSPECT KNOCK CONTROL SENSOR

(a) Measure the resistance according to the value(s) in the table below.

Standard Resistance:

TESTER CONNECTION	CONDITION	SPECIFIED CONDITION	RESULT
1 (EKNK) - 2 (KNK1)	25°C (77°F)	120 to 280 kΩ	kΩ

If the result is not as specified, replace the knock control sensor.

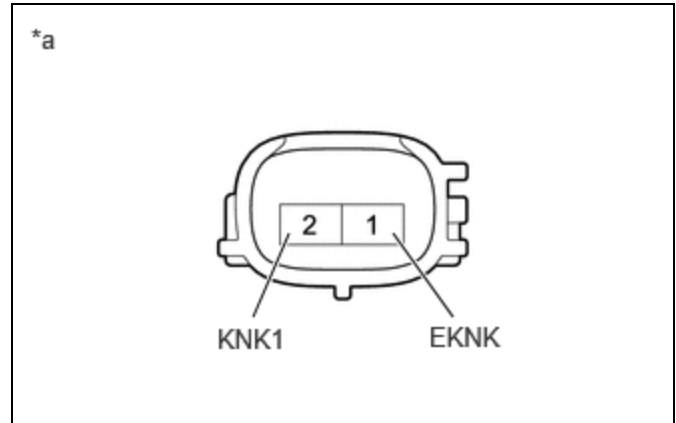

*a	Component without harness connected (Knock Control Sensor)
----	--

