

<b>Last Modified:</b> 12-04-2024	6.11:8.1.0	<b>Doc ID:</b> RM1000000029ZXM
<b>Model Year Start:</b> 2023	<b>Model:</b> Prius	<b>Prod Date Range:</b> [12/2022 - ]
<b>Title:</b> M20A-FXS (FUEL): FUEL PUMP (for HEV Model): INSPECTION; 2023 - 2024 MY Prius [12/2022 - ]		

## INSPECTION

## PROCEDURE


### 1. INSPECT FUEL PUMP

(a) Measure the resistance according to the value(s) in the table below.

Standard Resistance:

TESTER CONNECTION	SPECIFIED CONDITION	RESULT
U - V	0.05 to 3.0 Ω	Ω
V - W	0.05 to 3.0 Ω	Ω
U - W	0.05 to 3.0 Ω	Ω

If the result is not as specified, replace the fuel pump.

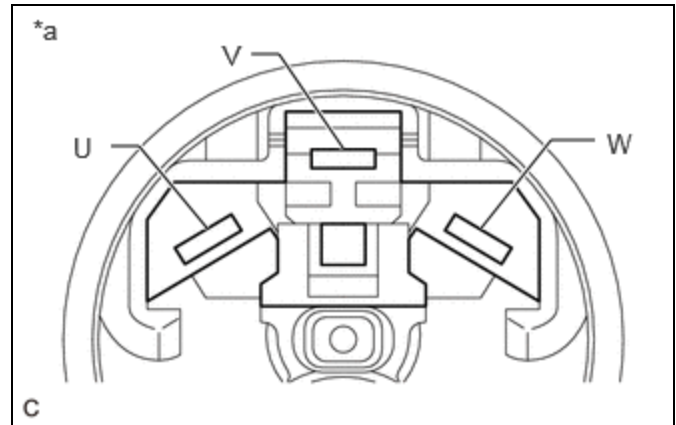

*a	Component without harness connected (Fuel Pump)
----	---

