


| | | |
|---|---------------------------|--------------------------------------|
| Last Modified: 12-04-2024 | 6.11:8.1.0 | Doc ID: RM100000028XAZ |
| Model Year Start: 2023 | Model: Prius Prime | Prod Date Range: [12/2022 -] |
| Title: M20A-FXS (LUBRICATION): OIL PRESSURE AND TEMPERATURE SENSOR: REMOVAL; 2023 - 2024 MY Prius Prius Prime [12/2022 -] | | |

REMOVAL

CAUTION / NOTICE / HINT

COMPONENTS (REMOVAL)

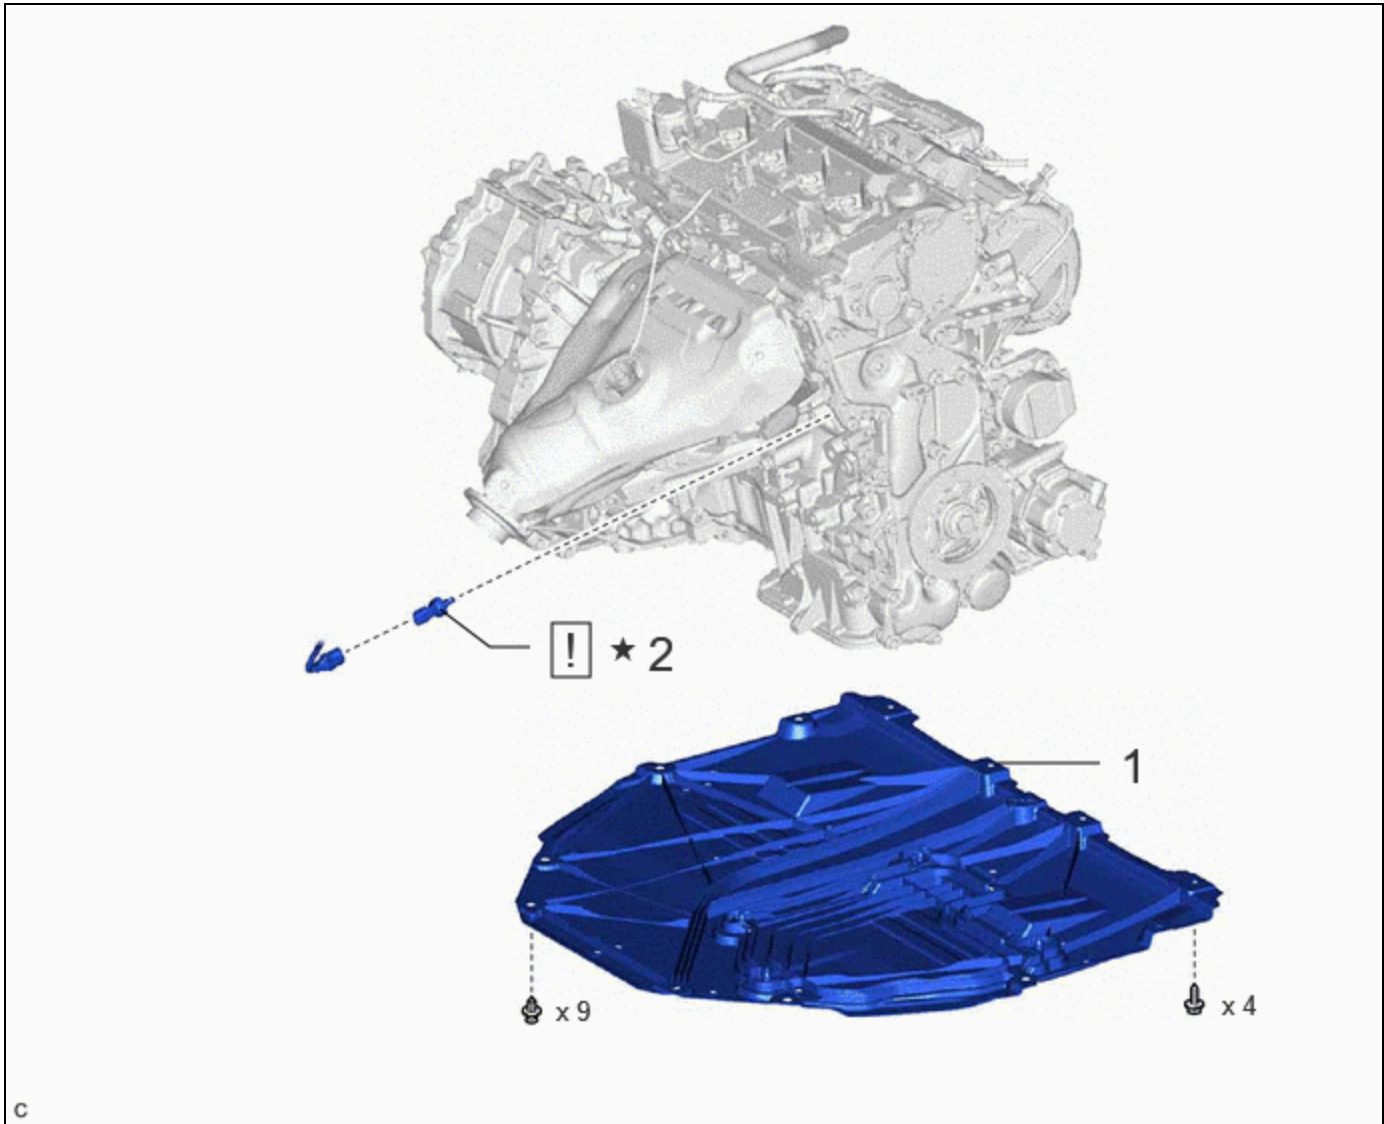

| | PROCEDURE | PART NAME CODE | | | |
|---|-------------------------------------|----------------|----------------------|---|---|
| 1 | NO. 1 ENGINE UNDER COVER ASSEMBLY | 51410 | - | - | - |
| 2 | OIL PRESSURE AND TEMPERATURE SENSOR | 89448D | INFO | - | - |


| | | | |
|---|----------------|---|---|
| ★ | Precoated part | - | - |
|---|----------------|---|---|

PROCEDURE

1. REMOVE NO. 1 ENGINE UNDER COVER ASSEMBLY

Click here [INFO](#)

2. REMOVE OIL PRESSURE AND TEMPERATURE SENSOR

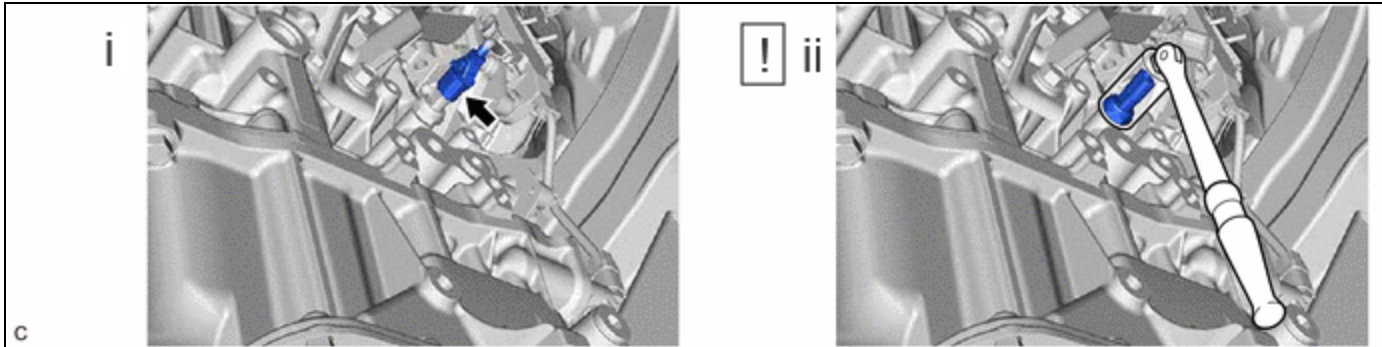

- (1) Disconnect the oil pressure and temperature sensor connector.
- (2) Using a 24 mm deep socket wrench, remove the oil pressure and temperature sensor.

NOTICE:

If the oil pressure and temperature sensor is dropped or subjected to a strong impact, replace it with a new one.

