

<b>Last Modified:</b> 12-04-2024	6.11:8.1.0	<b>Doc ID:</b> RM10000002BHWR
<b>Model Year Start:</b> 2023	<b>Model:</b> Prius Prime	<b>Prod Date Range:</b> [03/2023 - ]
<b>Title:</b> HYBRID / BATTERY CONTROL: HYBRID BATTERY SYSTEM (for PHEV Model): Instructions for Connecting SST; 2023 - 2024 MY Prius Prime [03/2023 - ]		

## Instructions for Connecting SST

# PROCEDURE

## 1. CONNECT THE SST

**SST: 09893-10050**

**CAUTION:**

Be sure to wear insulated gloves and protective goggles.

**NOTICE:**


Make sure to observe the following points when using the SST.

- Set it in a secure, flat place.
- Set it in a dry place protected from dust and water.

(a) Connect the SST to the ex1 HV supply battery assembly connector and the HV supply battery assembly.

**NOTICE:**

Make sure that the connector is connected securely.

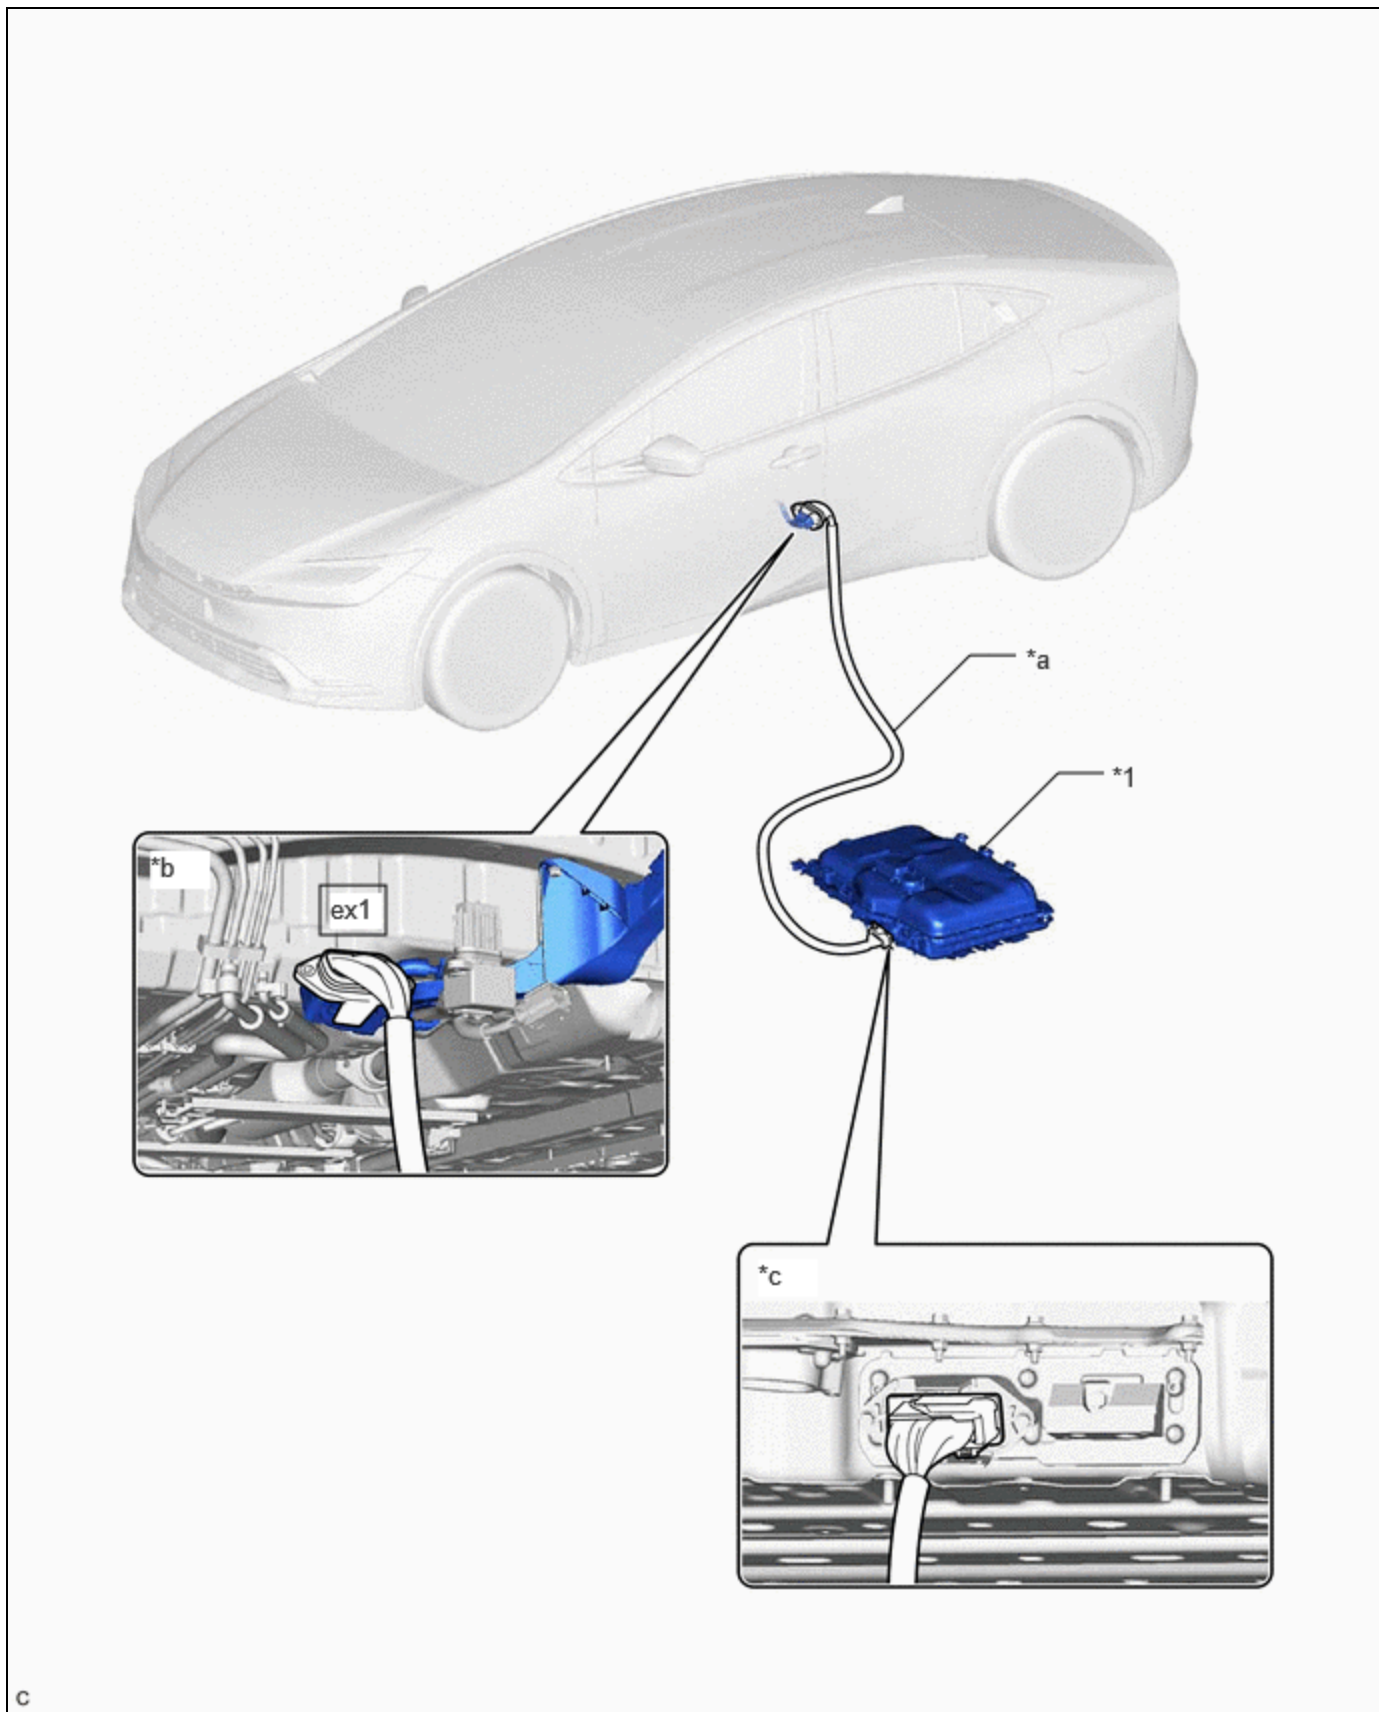

c

*1	HV Supply Battery Assembly	-	-
*a	SST	*b	SST (Vehicle Side)
*c	SST (HV Supply Battery Assembly Side)	-	-

**NEXT**  **END**

