12/16/24, 7:04 PM

Last Modified: 12-04-2024	6.11:8.1.0	Doc ID: RM100000002BHVD			
Model Year Start: 2023	Model: Prius Prime	Prod Date Range: [03/2023 -]			
Title: HYBRID / BATTERY CONTROL: HYBRID BATTERY SYSTEM (for PHEV Model): P1C8549; High Voltage Power					
Resource Internal Electronic Failure; 2023 - 2024 MY Prius Prime [03/2023 -]					

DTC P1C8549 High Voltage F	ower Resource Internal Electronic Failure
----------------------------	---

DESCRIPTION

The battery ECU assembly monitors an internal operation of the hybrid vehicle control ECU. If it detects the following malfunction, it will store this DTC and perform fail-safe control.

DTC NO.	DETECTION ITEM	DTC DETECTION CONDITION	TROUBLE AREA	MIL	WARNING INDICATE	DTC OUTPUT FROM	PRIORITY	NOTE
P1C8549	Power Resource	lexcessive discharging	Hybrid vehicle control ECU	Does not come on	Master Warning: Comes on	HV Battery	А	SAE Code: P3004

CONFIRMATION DRIVING PATTERN

HINT:

After repair has been completed, clear the DTC and then check that the vehicle has returned to normal by performing the following All Readiness check procedure.

Click here NFO

- 1. Clear the DTCs (even if no DTCs are stored, perform the clear DTC procedure).
- 2. Turn the ignition switch off and wait for 2 minutes or more.
- 3. Drive the vehicle for approximately 10 minutes according to the freeze frame data items "Vehicle Speed", "Accelerator Position", "Hybrid/EV Battery Current" and "Hybrid/EV Battery Temperature 1 to 15".
- 4. Enter the following menus: Powertrain / HV Battery / Utility / All Readiness.
- 5. Check the DTC judgment result.

HINT:

- If the judgment result shows NORMAL, the system is normal.
- If the judgment result shows ABNORMAL, the system has a malfunction.
- $\circ~$ If the judgment result shows INCOMPLETE or N/A, perform driving pattern again.

PROCEDURE

1. CHECK DTC OUTPUT (HV BATTERY, HYBRID CONTROL)

Pre-procedure1

(a) None

Procedure1

(b) Check for DTCs.

Powertrain > HV Battery > Trouble Codes Powertrain > Hybrid Control > Trouble Codes

RESULT	PROCEED TO	
"P1C8549" only is output.	А	
DTCs except "P1C8549" of hybrid battery system are output.	В	
DTCs except "P1C8549" of hybrid control system are output.	С	

Post-procedure1

(c) Turn the ignition switch off.



B GO TO DTC CHART (HYBRID BATTERY SYSTEM)

C GO TO DTC CHART (HYBRID CONTROL SYSTEM)



