



<b>Last Modified:</b> 12-04-2024	6.11:8.1.0	<b>Doc ID:</b> RM100000028ZWB
<b>Model Year Start:</b> 2023	<b>Model:</b> Prius Prime	<b>Prod Date Range:</b> [12/2022 - ]
<b>Title:</b> HYBRID / BATTERY CONTROL: HYBRID CONTROL SYSTEM (for M20A-FXS): UTILITY; 2023 - 2024 MY Prius Prius Prime [12/2022 - ]		

## UTILITY

### PURPOSE

UTILITY ITEMS (GTS DISPLAY)	MAIN PURPOSE	CONTROL DESCRIPTION
All Readiness	Check whether or not DTC judgment has been completed.	-
Check Mode	This item is displayed on the GTS but is not used.	-
Diagnosis Related Information	Confirm the diagnosis related information	-
Vehicle Control History (RoB)	View vehicle control history.	
Inspection Mode	Enter Inspection Mode.	

### ALL READINESS

#### HINT:

- With "All Readiness", you can check whether or not the DTC judgment has been completed by using the GTS.
- You should check "All Readiness" after simulating malfunction symptoms or for validation after finishing repairs.

(a) Clear the DTCs even if no DTCs are stored.

#### Powertrain > Hybrid Control > Clear DTCs

(b) Turn the ignition switch off and wait for 2 minutes or more.

(c) Turn the ignition switch to ON.

(d) Perform the DTC judgment driving pattern to run the DTC judgment.

#### Powertrain > Hybrid Control > Utility



(e) Input the DTC to be confirmed.

(f) Check the DTC judgment result.

GTS DISPLAY	DESCRIPTION
NORMAL	<ul style="list-style-type: none"> <li>• DTC judgment completed</li> <li>• System normal</li> </ul>
ABNORMAL	<ul style="list-style-type: none"> <li>• DTC judgment completed</li> <li>• System abnormal</li> </ul>
If the judgment result shows INCOMPLETE, perform the DTC confirmation driving pattern again.	

GTS DISPLAY	DESCRIPTION
INCOMPLETE	<ul style="list-style-type: none"> <li>• DTC judgment not completed</li> <li>• Perform the driving pattern</li> </ul>
If the judgment result shows INCOMPLETE, perform the DTC confirmation driving pattern again.	

(g) Turn the ignition switch off.

### DIAGNOSIS RELATED INFORMATION

(a) Check for diagnosis related information.

(1) Check for diagnosis related information.

#### Powertrain > Hybrid Control > Utility

TESTER DISPLAY
Diagnosis Related Information

(2) Check the Diagnosis Related Information, and then write them down.

(b) Clear diagnosis related information.

(1) Enter the following menus: Powertrain / Hybrid Control / Trouble Codes.

(2) Clear the diagnosis related information and Freeze Frame Data.

(3) Turn the ignition switch off.

