

<b>Last Modified:</b> 12-04-2024	6.11:8.1.0	<b>Doc ID:</b> RM10000002BHTC
<b>Model Year Start:</b> 2023	<b>Model:</b> Prius Prime	<b>Prod Date Range:</b> [03/2023 - ]
<b>Title:</b> HYBRID / BATTERY CONTROL: MOTOR GENERATOR CONTROL SYSTEM (for PHEV Model): P0A361C,P0A361F; Generator Temperature Sensor Voltage Out of Range; 2023 - 2024 MY Prius Prime [03/2023 - ]		

<b>DTC</b>	<b>P0A361C</b>	<b>Generator Temperature Sensor Voltage Out of Range</b>
------------	----------------	--

<b>DTC</b>	<b>P0A361F</b>	<b>Generator Temperature Sensor Circuit Intermittent</b>
------------	----------------	--

## DTC SUMMARY

### **MALFUNCTION DESCRIPTION**

These DTCs are stored when the generator temperature sensor output is abnormal. The cause of this malfunction may be one of the following:

#### **Generator temperature sensor malfunction**

- Internal generator temperature sensor malfunction
- Open or short in generator temperature sensor

#### **Wire harness between the generator temperature sensor and inverter with converter assembly**

- The connectors are not connected properly
- Foreign matter or water on the connector terminals
- Open or short in wire harness

#### **HINT:**

If any of these DTCs are stored, the generator temperature sensor is malfunctioning and the self-protection function may not operate. Therefore under certain high load driving condition, the temperature of the generator (MG1) becomes high. If the self-protection function does not operate, the generator (MG1) may malfunction and cause the vehicle to enter fail-safe mode.

## DESCRIPTION

Refer to the description for DTC P0A3611.

Click here [INFO](#)

DTC NO.	DETECTION ITEM	DTC DETECTION CONDITION	TROUBLE AREA	MIL	WARNING INDICATE	DTC OUTPUT FROM	PRIORITY	NOTE
P0A361C	Generator Temperature Sensor Voltage Out of Range	After a long soak, the value of the generator (MG1) temperature sensor is different from the value of the other	<ul style="list-style-type: none"> <li>• Wire harness or connector</li> <li>• Generator temperature sensor (Hybrid vehicle transaxle assembly)</li> </ul>	Comes on	Master Warning: Comes on	Motor Generator	A	SAE Code: P0A37

DTC NO.	DETECTION ITEM	DTC DETECTION CONDITION	TROUBLE AREA	MIL	WARNING INDICATE	DTC OUTPUT FROM	PRIORITY	NOTE
		temperature sensors, or Unusual sudden change in generator temperature sensor output occurs and offset condition continues for a certain period of time.  (2 trip detection logic)						
P0A361F	Generator Temperature Sensor Circuit Intermittent	Generator temperature sensor hunting:  Unusual change in generator temperature sensor output occurs repeatedly. (1 trip detection logic)	<ul style="list-style-type: none"> <li>• Wire harness or connector</li> <li>• Generator temperature sensor (Hybrid vehicle transaxle assembly)</li> </ul>	Comes on	Master Warning:  Comes on	Motor Generator	A	SAE Code:  P0A3A

## MONITOR DESCRIPTION

If the motor generator control ECU detects a malfunction of the generator temperature sensor, it will illuminate the MIL and store a DTC.

## MONITOR STRATEGY

Related DTCs	P0A37 (INF P0A361C): Generator Temperature Sensor Circuit Range/Performance P0A3A (INF P0A361F): Generator Temperature Sensor Circuit Intermittent
Required sensors/components	Generator temperature sensor
Frequency of operation	Continuous
Duration	TMC's intellectual property
MIL operation	2 driving cycles / 1 driving cycle
Sequence of operation	None

## TYPICAL ENABLING CONDITIONS

The monitor will run whenever the following DTCs are not stored	TMC's intellectual property
---	-----------------------------

Other conditions belong to TMC's intellectual property	-
--	---

## TYPICAL MALFUNCTION THRESHOLDS

TMC's intellectual property	-
-----------------------------	---

## COMPONENT OPERATING RANGE

Motor generator control ECU	DTC P0A37 (INF P0A361C) is not detected DTC P0A3A (INF P0A361F) is not detected
-----------------------------	--

## CONFIRMATION DRIVING PATTERN

### HINT:

- After repair has been completed, clear the DTC and then check that the vehicle has returned to normal by performing the following All Readiness check procedure.

[Click here](#) INFO

- When clearing the permanent DTCs, refer to the "CLEAR PERMANENT DTC" procedure.

[Click here](#) INFO

### DTC P0A361C

- Clear the DTCs (even if no DTCs are stored, perform the clear DTC procedure).
- Turn the ignition switch off.
- Leave the vehicle as is for 5 hours or more and then check the values of the Data List items "Generator Temperature", "Motor Temperature" and "Inverter Coolant Water Temperature". [\*1]
- Turn the ignition switch to ON and turn the GTS on. [\*2]

### HINT:

[\*1] to [\*2]: Normal judgment procedure.

The normal judgment procedure is used to complete DTC judgment and also used when clearing permanent DTCs.

- Enter the following menus: Powertrain / Motor Generator / Utility / All Readiness.
- Check the DTC judgment result.

### HINT:

- If the judgment result shows NORMAL, the system is normal.
- If the judgment result shows ABNORMAL, the system has a malfunction.
- If the judgment result shows INCOMPLETE, perform the normal judgment procedure again.

### DTC P0A361F

- Clear the DTCs (even if no DTCs are stored, perform the clear DTC procedure).
- Turn the ignition switch off and wait for 2 minutes or more.
- With ignition switch ON and wait for 5 seconds or more. [\*1]

### HINT:

[\*1]: Normal judgment procedure.

The normal judgment procedure is used to complete DTC judgment and also used when clearing permanent DTCs.

- Enter the following menus: Powertrain / Motor Generator / Utility / All Readiness.
- Check the DTC judgment result.

### HINT:

- If the judgment result shows **NORMAL**, the system is normal.
- If the judgment result shows **ABNORMAL**, the system has a malfunction.
- If the judgment result shows **INCOMPLETE**, perform the normal judgment procedure again.

## WIRING DIAGRAM

Refer to the wiring diagram for DTC P0A3611.

Click here [INFO](#)

## PROCEDURE

### 1. CHECK DTC OUTPUT (ENGINE)

Pre-procedure1

(a) None

Procedure1

(b) Check for DTCs.

**Powertrain > Engine > Trouble Codes**

RESULT	PROCEED TO
No DTCs are output, or DTCs except the ones in the table below are also output.	A
Any of the following DTCs are also output.	B

RELEVANT DTC	
P261029	ECM/PCM Engine Off Timer Performance Signal Invalid

Post-procedure1

(c) Turn the ignition switch off.

**B**  **GO TO DTC CHART (SFI SYSTEM)**

**A**



### 2. CHECK DTC OUTPUT (MOTOR GENERATOR)

Pre-procedure1

(a) None

Procedure1

(b) Check for DTCs.

**Powertrain > Motor Generator > Trouble Codes**

RESULT	PROCEED TO
No DTCs are output, or DTCs except the ones in the table below are also output.	A
Any of the following DTCs are also output.	B

RELEVANT DTC	
P0A3611	Generator Temperature Sensor Circuit Short to Ground
P0A3615	Generator Temperature Sensor Circuit Short to Auxiliary Battery or Open

Post-procedure1

(c) Turn the ignition switch off.

**B** ► **GO TO DTC CHART (MOTOR GENERATOR CONTROL SYSTEM)**

**A**



<b>3.</b>	<b>CHECK CONNECTOR CONNECTION CONDITION (INVERTER WITH CONVERTER ASSEMBLY CONNECTOR)</b>
-----------	--

Click here [INFO](#)

RESULT	PROCEED TO
OK	A
NG (The connector is not connected securely.)	B
NG (The terminals are not making secure contact or are deformed, or water or foreign matter exists in the connector.)	C

**B** ► **CONNECT SECURELY**

**C** ► **REPAIR OR REPLACE HARNESS OR CONNECTOR**

**A**



<b>4.</b>	<b>CHECK CONNECTOR CONNECTION CONDITION (GENERATOR TEMPERATURE SENSOR CONNECTOR)</b>
-----------	--

Click here 

RESULT	PROCEED TO
OK	A
NG (The connector is not connected securely.)	B
NG (The terminals are not making secure contact or are deformed, or water or foreign matter exists in the connector.)	C

**B**  **CONNECT SECURELY****C**  **REPAIR OR REPLACE HARNESS OR CONNECTOR****A**

<b>5.</b>	<b>INSPECT HYBRID VEHICLE TRANSAXLE ASSEMBLY (GENERATOR TEMPERATURE SENSOR)</b>
-----------	---

Click here **OK**  **REPAIR OR REPLACE HARNESS OR CONNECTOR****NG**  **REPLACE HYBRID VEHICLE TRANSAXLE ASSEMBLY**