

Last Modified: 12-04-2024	6.11:8.1.0	Doc ID: RM10000002BEFU
Model Year Start: 2023	Model: Prius Prime	Prod Date Range: [03/2023 -]
Title: HYBRID / BATTERY CONTROL: PLUG-IN CHARGE CONTROL SYSTEM (for PHEV Model): CUSTOMIZE PARAMETERS; 2023 - 2024 MY Prius Prime [03/2023 -]		

CUSTOMIZE PARAMETERS

CUSTOMIZE PLUG-IN CHARGE CONTROL SYSTEM

The following items can be customized.

NOTICE:

- When the customer requests a change in a function, first make sure that the function can be customized.
- Be sure to make a note of the current settings before customizing.
- When troubleshooting a function, first make sure that the function is set to the default setting.

(a) Customizing with the multi-information display

- (1) Select the setting tab in the multi-information display.
- (2) Enter the following menus: Vehicle Settings / Charging Settings.
- (3) Select the setting by referring to the table below.

DISPLAY	DESCRIPTION	DEFAULT	SETTING	RELEVANT ECU
Charging Schedule	Setting the charge schedule.	-	Charge schedule <ul style="list-style-type: none"> • Charging mode "Start" / "Start-Stop" • Charge Now • Scheduled Events • Next Event 	Plugin charge control ECU assembly
Charging Current	Changing the upper limit of the charging current.	MAX	MAX / 8 A	
Connector Lock	Charging connector lock setting can be changed.	Auto Lock	Auto Lock / Auto Lock & Unlock / OFF	
Battery Cooler	Setting "HV Supply Battery Cooler" on/off.	On	On / Off	Battery ECU assembly
Battery Heater	Setting "HV Supply Battery Heater" on/off.	On	On / Off	

(b) Customizing with the multimedia display

- (1) In the multimedia display, enter the following menus: Vehicle / Charging Schedule
- (2) Change the charging schedule, or select "Charge Now" setting.
- (3) In the multimedia display, enter the following menus: Vehicle Settings / Vehicle customize / Charging.
- (4) Select the setting by referring to the table below.

DISPLAY	DESCRIPTION	DEFAULT	SETTING	RELEVANT ECU
Charging Schedule	Setting the charge schedule.	-	Charge schedule <ul style="list-style-type: none"> • Charging mode "Start at set time" / "Start and stop at set 	Plugin charge control ECU assembly

DISPLAY	DESCRIPTION	DEFAULT	SETTING	RELEVANT ECU
			times" • Charge Now • Scheduled Events • Next Event	
Charging Current	Changing the upper limit of the charging current.	Max	Max / 8 A	
Connector Lock	Charging connector lock setting can be changed.	Auto Lock	Auto Lock / Auto Lock & Unlock / OFF	

SETTING "Charge Now"

HINT:

- When "Charge Now" is set to on, the registered charging schedule is temporarily canceled and plug-in AC charging started immediately after connecting AC charging cable.
- If charging schedules are registered and "Charge Now" is on and AC charging cable is disconnected, "Charge Now" will be off.

(a) Setting with the multi-information display

- (1) Turn the ignition switch to ON.
- (2) Select the setting tab in the multi-information display.
- (3) Enter the following menus: Vehicle Settings / Charging Schedule.
- (4) Turn "Charge Now" to on.

(b) Setting with the multimedia display

- (1) Turn the ignition switch to ON.
- (2) Select the setting tab in the multimedia display.
- (3) Enter the following menus: Vehicle / Charging schedule.
- (4) Turn "Charge now" button to on.

