

<b>Last Modified:</b> 12-04-2024	6.11:8.1.0	<b>Doc ID:</b> RM10000002BIW6
<b>Model Year Start:</b> 2023	<b>Model:</b> Prius Prime	<b>Prod Date Range:</b> [03/2023 - ]
<b>Title:</b> HYBRID / BATTERY CONTROL: PLUG-IN CHARGE CONTROL SYSTEM (for PHEV Model): P0D5112,P0D5114; Hybrid/EV Battery Charger Hybrid/EV Battery Output Current Sensor Circuit High Circuit Short to Battery; 2023 - 2024 MY Prius Prime [03/2023 - ]		

<b>DTC</b>	<b>P0D5112</b>	<b>Hybrid/EV Battery Charger Hybrid/EV Battery Output Current Sensor Circuit High Circuit Short to Battery</b>
------------	----------------	--

<b>DTC</b>	<b>P0D5114</b>	<b>Hybrid/EV Battery Charger Hybrid/EV Battery Output Current Sensor Circuit Low Circuit Short to Ground or Open</b>
------------	----------------	--

## DESCRIPTION

The charge control ECU built into the electric vehicle charger assembly monitors the direct current by the ICHG sensor. If it detects an ICHG sensor malfunction, it illuminates the MIL and stores a DTC. If this DTC is output, replace the electric vehicle charger assembly.

DTC NO.	DETECTION ITEM	DTC DETECTION CONDITION	TROUBLE AREA	MIL	WARNING INDICATE	DTC OUTPUT FROM	PRIORITY	NOTE
P0D5112	Hybrid/EV Battery Charger Hybrid/EV Battery Output Current Sensor Circuit High Circuit Short to Battery	When charging or supplying power, the output voltage value of the ICHG sensor is more than the threshold  (1 trip detection logic)	Electric vehicle charger assembly	Comes on	Master Warning:  Comes on	Plug-in Control	A	SAE Code:  P0D54
P0D5114	Hybrid/EV Battery Charger Hybrid/EV Battery Output Current Sensor Circuit Low Circuit Short to Ground or Open	When charging or supplying power, the output voltage value of the ICHG sensor is less than the threshold  (1 trip detection logic)	Electric vehicle charger assembly	Comes on	Master Warning:  Comes on	Plug-in Control	A	SAE Code:  P0D53

## MONITOR DESCRIPTION

The charge control ECU built into the electric vehicle charger assembly monitors the direct current by the ICHG sensor. If it detects an ICHG sensor malfunction, it illuminates the MIL and stores a DTC.

## MONITOR STRATEGY

Related DTCs	P0D54: Battery Charger Hybrid/EV Battery Output Current Sensor "A" Circuit High/Low P0D53: Battery Charger Hybrid/EV Battery Output Current Sensor "A" Circuit High/Low
Required sensors/components	Electric vehicle charger assembly
Frequency of operation	Continuous
Duration	TMC's intellectual property
MIL operation	1 charging cycle 1 discharging cycle
Sequence of operation	None

## TYPICAL ENABLING CONDITIONS

The monitor will run whenever the following DTCs are not stored	TMC's intellectual property
Other conditions belong to TMC's intellectual property	-

## TYPICAL MALFUNCTION THRESHOLDS

TMC's intellectual property	-
-----------------------------	---

## COMPONENT OPERATING RANGE

Electric vehicle charger assembly	DTC P0D5112 is not detected DTC P0D5114 is not detected
-----------------------------------	--

## CONFIRMATION DRIVING PATTERN

### HINT:

- After repair has been completed, clear the DTC and then check that the vehicle has returned to normal by performing the following All Readiness check procedure.

[Click here](#) INFO

- When clearing the permanent DTCs, refer to the "CLEAR PERMANENT DTC" procedure.

[Click here](#) INFO

- Clear the DTCs (even if no DTCs are stored, perform the clear DTC procedure).
- Enter the following menus: Powertrain / Hybrid Control / Data List.
- Check that "Hybrid/EV Battery SOC" shows 70% or less.
- Turn the ignition switch off and wait for 2 minutes or more.
- Connect the electric vehicle charger cable assembly, and plug-in charge the vehicle for 30 seconds or more. [\*1]
- Disconnect the electric vehicle charger cable assembly and wait for 10 seconds or more. [\*2]

### HINT:

[\*1] to [\*2] : Normal judgment procedure.

The normal judgment procedure is used to complete DTC judgment and also used when clearing permanent DTCs.

7. Enter the following menus: Powertrain / Plug-in Control / Utility / All Readiness.
8. Check the DTC judgment result.

**HINT:**

- If the judgment result shows NORMAL, the system is normal.
- If the judgment result shows ABNORMAL, the system has a malfunction.
- If the judgment result shows INCOMPLETE or N/A, perform the normal judgment procedure again.

## PROCEDURE

<b>1.</b>	<b>REPLACE ELECTRIC VEHICLE CHARGER ASSEMBLY</b>
-----------	--

**HINT:**

Click here [INFO](#)

**NEXT**  **COMPLETED**

