

<b>Last Modified:</b> 12-04-2024	6.11:8.1.0	<b>Doc ID:</b> RM10000002BME0
<b>Model Year Start:</b> 2023	<b>Model:</b> Prius Prime	<b>Prod Date Range:</b> [03/2023 - ]
<b>Title:</b> M20A-FXS (BATTERY / CHARGING): SOLAR CHARGING SYSTEM: UTILITY; 2023 - 2024 MY Prius Prius Prime [03/2023 - ]		

## UTILITY

### HINT:

- With "All Readiness", you can check if DTC judgment has been completed by using the GTS.
- Make sure to perform "All Readiness" after simulating malfunction symptoms or finishing repairs.

### ALL READINESS

(a) Clear the DTCs even if no DTCs are stored.

#### Powertrain > Solar Charging Control > Clear DTCs

(b) Turn the ignition switch off and wait for 2 minutes or more.

(c) Perform the confirmation driving pattern.

(d) Enter the following menus.

#### Powertrain > Solar Charging Control > Utility

TESTER DISPLAY
All Readiness

(e) Input the DTCs to be confirmed.

(f) Check the DTC judgment result.

GTS DISPLAY	DESCRIPTION
Normal	<ul style="list-style-type: none"> <li>• DTC judgment completed</li> <li>• System normal</li> </ul>
Abnormal	<ul style="list-style-type: none"> <li>• DTC judgment completed</li> <li>• System abnormal</li> </ul>
Incomplete	<ul style="list-style-type: none"> <li>• DTC judgment not completed</li> <li>• Perform the driving pattern</li> </ul>
N/A	<ul style="list-style-type: none"> <li>• Unable to perform DTC judgment</li> <li>• Number of DTCs which do not fulfill DTC preconditions has reached ECU memory limit</li> <li>• Perform the driving pattern</li> </ul>

If the judgment result shows Incomplete or N/A, perform the DTC confirmation driving pattern again.

(g) Turn the ignition switch off.

### DIAGNOSIS RELATED INFORMATION

(a) Check for diagnosis related information.

(1) Enter the following menus: Powertrain / Solar Charging Control / Utility / Diagnosis Related Information.

- (2) Check the diagnosis related information, and take a note of it.
- (b) Clear diagnosis related information.

**NOTICE:**

Clearing the DTCs will also clear the diagnosis related information.

- (1) Enter the following menus.

**Powertrain > Solar Charging Control > Clear DTCs**

- (2) Clear the DTCs, diagnosis related information and freeze frame data.
- (3) Turn the ignition switch off.

**VEHICLE CONTROL HISTORY (RoB)**

- (a) Enter the following menus.

**Powertrain > Solar Charging Control > Utility**



Click here 

- (b) Turn the ignition switch off.

